



SOAR SR-DX1 DIGIX1 True Wireless Earbuds User Manual

[Home](#) » [Soar](#) » SOAR SR-DX1 DIGIX1 True Wireless Earbuds User Manual 

Contents

- [1 SOAR SR-DX1 DIGIX1 True Wireless Earbuds](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Package](#)
- [5 Product Specifications](#)
- [6 Power on / Power off](#)
- [7 Earbuds Touch & Function](#)
- [8 Charge the Earbuds](#)
- [9 FCC Caution](#)
- [10 Documents / Resources](#)
 - [10.1 References](#)



SOAR SR-DX1 DIGIX1 True Wireless Earbuds



Product Information

Specifications

- **Model:** XYZ-123
- **Colour:** Black
- **Dimensions:** 10 inches (width) x 5 inches (height) x 1 inch (depth)
- **Weight:** 1 pound
- **Battery Life:** Up to 10 hours
- **Storage Capacity:** 32GB

Description

The XYZ-123 is a versatile and compact device that allows you to perform a variety of tasks. It features a sleek black design and is lightweight, making it easy to carry and use on the go. With its long battery life and ample storage capacity, you can enjoy uninterrupted usage and store all your important files.

Features

- High-resolution touchscreen display
- Wi-Fi and Bluetooth connectivity
- Front and rear-facing cameras
- Supports multiple file formats
- Built-in speakers and headphone jack

Product Usage Instructions

Charging the Device

To charge the XYZ-123, follow these steps:

1. Connect the included charging cable to the device's charging port.
2. Plug the other end of the charging cable into a power outlet.
3. The device will start charging automatically. The battery indicator will show the charging progress.
4. Once fully charged, disconnect the charging cable from the device and the power outlet.

Turning On/Off the Device

To turn on the XYZ-123, press and hold the power button located on the side of the device until the screen lights up. To turn off the device, press and hold the power button again until a menu appears on the screen. Select "Power Off" and confirm your choice.

Connecting to Wi-Fi

To connect the XYZ-123 to a Wi-Fi network, follow these steps:

1. Open the device's settings menu.
2. Select "Wi-Fi" from the list of options.
3. Toggle the Wi-Fi switch to "On".
4. A list of available Wi-Fi networks will appear. Select your desired network.
5. If prompted, enter the network password and select "Connect".

Taking Photos

The XYZ-123 is equipped with front and rear-facing cameras, allowing you to capture photos. To take a photo, follow these steps:

1. Open the camera app from the device's home screen.
2. Position the device to frame your desired shot.
3. Tap the shutter button on the screen or press the volume up button to capture the photo.
4. The photo will be saved to your device's gallery.

Playing Music

To play music on the XYZ-123, follow these steps:

1. Open the music app from the device's home screen.
2. Select a song or playlist from your library.
3. Adjust the volume using the device's volume buttons or on-screen controls.
4. The music will start playing through the device's built-in speakers or connected headphones.

Transferring Files

You can transfer files to and from the XYZ-123 using a USB cable or wirelessly via Bluetooth. Refer to the device's user manual for detailed instructions on file transfer methods.

Resetting the Device

If you experience any issues with the XYZ-123, you can perform a factory reset to restore it to its original settings. Please note that a factory reset will erase all data on the device. To reset the device, go to the settings menu, select "System", then "Reset", and choose the option to reset to factory settings.

Frequently Asked Questions

- Q: How do I update the device's software?
- A: To update the XYZ-123's software, go to the settings menu, select "System", then "Software Update". If an update is available, follow the on-screen instructions to download and install it.
- Q: Can I expand the device's storage capacity?
- A: Yes, you can expand the storage capacity of the XYZ-123 by inserting a microSD card into the designated slot. The device supports microSD cards up to 128GB in size.
- Q: How do I clean the device?
- A: To clean the XYZ-123, use a soft, lint-free cloth slightly dampened with water. Avoid using harsh chemicals or abrasive materials that may damage the device's surface.

Safety

- Keep it away from children: this product is not a toy.
- Do not throw away this product to avoid any damage.
- Do not disassemble, repair or reform this product.
- Do not clean this product with any chemical solvents.
- For charging, please use a charger with DC 5V input.
- Keep or use this product at normal temperature. Do not throw it away or expose it to temperatures above 60°C or fire to avoid any danger.
- Clean only with a dry cloth.
- Dispose of the device properly at the end of its life cycle.

Package

1. TWS earbuds with charging case x1
2. Micro-USB charging cable x1
3. User manual x1

Product Specifications

- **Bluetooth version:** V5.3
- **Wireless Distance:** up to 30 feet
- **Frequency Response:** 20 Hz – 20 kHz
- **Battery (earbuds and case):** 45 mAh /1,200 mAh
- **Charging time:** 1-1.5 hours
- **Playing time:** about 8 hours
- **Standby time:** 100 days

Power on / Power off

Power off:

Take the earbuds out of the charging case, and the earbuds power on automatically and pair until the blue and red lights flash alternately.

Power off

Put the earbuds into the charging case, and the earbuds power off and disconnect automatically.

Bluetooth pairing mode

After powering on the earbuds, turn on the bluetooth on your device and search for the bluetooth pairing name "SR-DX1" to connect.

Earbuds Touch & Function

Touch	Left Earbuds	Right Earbuds
Single Touch	Play/pause/answer/end a call	
Double Touch	Next track	Previous track
Triple Touch	Increase volume	Decrease volume
Long press for 2 seconds	Call voice assistant (Siri) /reject call	Call voice assistant (Siri) /reject call

Charge the Earbuds

1. You need to charge your device for 10 minutes before using it for the first time or after a long period of absence.
2. When the battery of the earbuds is low, it will have a low battery sound to remind to charge.
3. Put the earbuds into the charging case, the earbuds will be charged automatically.
4. The red LED keeps turned on while charging and turn off while fully charged.

Charge the Charging case

Use a Micro-USB cable (DC 5V 1A) for charging, when charging The LED display flashes, and the LED display is off after fully charged.

Charge for mobile phone

- Use a mobile phone charging cable to connect the charging case and mobile phone.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this device.

FCC ID: 2AZSY-SR-DX1

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. this device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.


Note: This equipment has been tested and found to comply with the limits for a Class B digital device, under part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used by the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

Prime Brands Group Brooklyn, NY 11232 [SHOPSOAR.COM](https://www.shopsoar.com)

Documents / Resources

	<p>SOAR SR-DX1 DIGIX1 True Wireless Earbuds [pdf] User Manual SR-DX1 DIGIX1 True Wireless Earbuds, SR-DX1, DIGIX1 True Wireless Earbuds, True Wireless Earbuds, Wireless Earbuds, Earbuds</p>
---	---

References

- [User Manual](#)