

**Soartop
PS3
Wireless
Controller**



Soartop PS3 Wireless Controller Instruction Manual

[Home](#) » [Soartop](#) » Soartop PS3 Wireless Controller Instruction Manual 

Contents

- 1 Soartop PS3 Wireless Controller
- 2 Product Information
- 3 Product Usage Instructions
- 4 About the PS3 Wireless Controller
- 5 How to use this PS3 controller
- 6 Battery life and duration
- 7 Use and handling precautions
- 8 FCC
- 9 Specifications
- 10 WARRANTY
- 11 Frequently Asked Questions
- 12 Documents / Resources
 - 12.1 References

Soartop

Soartop PS3 Wireless Controller



Product Information

Specifications

- **Model:** XYZ-2000
- **Dimensions:** 10 x 5 x 3 inches
- **Weight:** 2 lbs
- **Power:** 120V AC
- **Color:** Black

Product Usage Instructions

Setup

- Place the product on a flat, stable surface near a power outlet.
- Ensure proper ventilation around the product.

Power On

- Connect the product to a 120V AC power source using the provided power cable. Press the power button to turn it on.

Operation

- Use the control panel to select your desired settings. Follow the user manual for specific operation instructions based on your needs.

Maintenance


- Regularly clean the product using a damp cloth. Avoid using harsh chemicals or abrasive materials that may damage the product.

Safety Precautions

- Always unplug the product before cleaning or performing any maintenance. Do not attempt to disassemble the product yourself.

About the PS3 Wireless Controller

- Our PS3 wireless controller built in two electric motors makes each hit, crash, and explosion more exciting and realistic, you will feel the rumble in the palm of your hand.
- Highly sensitive motion control system senses your every move and characters as well as objects in the game will move and react as you tilt, push, and shake the controller.
- Truly intuitive gameplay through the motion sensing 6-Axis technology.

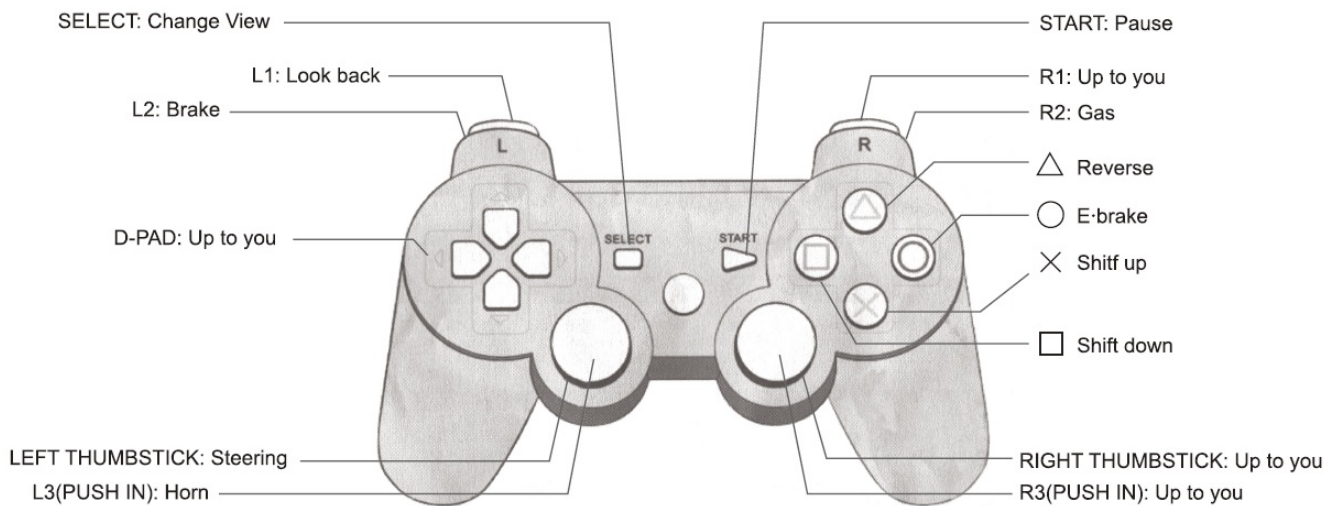

How to use this PS3 controller

How to Sync with PS3?

- You can use a USB cable to activate the controller when it is put into use for the first time.
- Connect the controller to your console, press the PS3 button, and pull out the cable. Then you can use it wirelessly.
- If it still does not work, you restart it or charge it.
- If the above methods fail, put a needle into the mini hole at the back of the controller and press the button to reset it.

How to turn on/off

- The PS3 controller will start when you press the round button or connect with the computer by data cable.
- It will turn off when it takes 5 minutes after it is disconnected. If it can not stop working after a long time, please plug the data cable into the computer and then pull it out, thus it will be powered off.

How To Charge the PS3 Controller?

- Connect the console to the PS3 by the USB cable.
- When charging, the red light will flash; when fully charged, the red light turns off.

Battery life and duration

- The battery has a limited life span. Battery duration will gradually decrease with repeated usage and age.
- Battery life also varies depending on the storage method, conditions of use, and environmental factors.
- Charge in an environment where the temperature range is between 10°C – 30°C (50°F – 86°F). Charging may not be as effective when performed in other environments.
- When the wireless controller is not used for an extended period, it is recommended that you fully charge it at least once a year to help maintain battery functionality.

Use and handling precautions

- Avoid prolonged use of this product. Take a break at about 30-minute intervals.
- Stop using this unit immediately if you begin to feel tired or if you experience discomfort or pain in your hands or arms during use. If the condition persists, consult a doctor.
- This product is intended for use with the hands only.
- The vibration function of this product may aggravate injuries. Do not use the vibration function if you have any ailment or injury to the bones, joints, or muscles of your hands or arms.
- Do not expose the product to high temperatures, high humidity, or direct sunlight.
- Do not allow the product to come into contact with liquids.
- Do not put heavy objects on the product.
- Do not throw or drop the product or subject it to strong physical shock.
- When using the motion sensor function, be cautious of the following points. If the controller hits a person or object, this may cause accidental injury or damage.
- Before using, check that there is plenty of space around you.
- When using the controller, grip it firmly to make sure it cannot slip out of your hand.
- If using a controller that is connected to the PS3™ system with a USB cable, make sure there is enough space for the cable so that the cable will not hit a person or object.
- Also, take care to avoid pulling the cable out of the PS3™ system while using the controller.

FCC

FCC and IC Notice

This equipment complies with FCC and IC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RE) Exposure Guidelines in Supplement to OET65 and RSS-102 of the IC radio frequency (RF) Exposure rules.

This equipment has very low levels of RF energy that are deemed to comply without testing of specific absorption rate (SAR). This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, according to Part

15 of the FCC rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used following the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

You are cautioned that any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. this device may not cause harmful interference,
2. this device must accept any interference received, including interference that may cause undesired operation.

This Class B digital apparatus complies with Canadian ICES-003.

Specifications

- **Battery type:** Built-in rechargeable Lithium-Ion battery
- **Voltage:** DC 3.7 V
- **Battery capacity:** 800 mAh
- **Operating temperature:** 5°C – 35°C (41°F – 95°F)
- **Mass:** Approx. 180 g (6.3 oz)
- Design and specifications are subject to change without notice.

WARRANTY

- We promise 30 days 100% MONEY BACK GUARANTEE & LIFETIME PRODUCT WARRANTY.
- We would like to make sure that you are 100% happy with all purchases you make with us.
- YOUR EXCELLENT SHOPPING EXPERIENCE IS VERY IMPORTANT TO US.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. this device may not cause harmful interference,
2. this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, under Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used under the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause

harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

Frequently Asked Questions

- **Q: Can I use the product outdoors?**
 - **A:** This product is designed for indoor use only.
- **Q: How often should I replace the filter ?**
 - **A:** We recommend replacing the filter every 3-6 months, depending on usage and air quality.
- **Q: What should I do if the product malfunctions?**
 - **A:** Refer to the troubleshooting section of the user manual or contact customer support for assistance.

Documents / Resources

| | |
|-------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | Soartop PS3 Wireless Controller [pdf] Instruction Manual 2AT5K-PS3W01, 2AT5KPS3W01, PS3 Wireless Controller, PS3, Wireless Controller, Controller |
|-------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------|

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.