



SOBEX JB11KO0000000B Swing Instruction Manual

[Home](#) » [SOBEX](#) » SOBEX JB11KO0000000B Swing Instruction Manual 

Contents

- [1 SOBEX JB11KO0000000B Swing](#)
- [2 General Information](#)
- [3 Swing Installation](#)
- [4 Documents / Resources](#)
 - [4.1 References](#)
- [5 Related Posts](#)



SOBEX JB11KO0000000B Swing



WARNING: Product unsuitable for children under the age of 3 years.

The swing can only be installed on flat surfaces such as e.g. grass or sand at least 2 m away from other objects, such as e.g.: house, garage, fence, cord for hanging laundry, overhanging branches, electric cables, entry road, etc. The swing cannot be set on concrete, asphalt or any other hard surface. The security zone area should be covered with sand, fine gravel or other fall cushioning material (free fall height ≤ 100 cm). All modifications to the product deviating from the above instructions are not accepted by the manufacturer and are not subject to complaint.

THE SWING MUST BE INSTALLED IN A STABLE WAY!

The structure must be checked in terms of possible damage or wood rotting or decay. It is recommended to paint the wood with color impregnation at least every 3 years. Painting should be carried out more frequently in harsh climatic conditions. The swing should be inspected once a year, checking its basic parts, stability and the endurance of screw connections (loosen them after loosening). The seat, clamps, screws, connectors and other accessories must be inspected in terms of wear and tear or damage, and replaced if necessary. Should you observe any irreparable damage, the swing must be withdrawn from use completely. All metal parts must be oiled. Additionally, current controls of the swing should be carried out at least once every two weeks.

FAILURE TO COMPLY WITH THESE RECOMMENDATIONS CREATES A RISK OF ACCIDENT!


“Warning. For domestic use only. For external use only.”

The swing is suitable for children from 3 to 14 years. Maximum user weight: 50kg. Maximum number of children: ver 1 – 4 children, ver 2 -3 children. Swing with a slide that without it, must be protected against direct sunlight; it is recommended to install it in the shade.

General Information

1. Please read the entire manual prior to installation and check the contents of the set.
2. Installation should be carried out by at least two adults.
3. Before starting the installation, prepare the surface where the swing is to be set.
4. Installation of elements at height should be carried out standing on a ladder, while maintaining proper care.
5. Children should be kept away from the place of installation while carrying out works.
6. Where wooden elements are joined with screws, a hole must first be drilled, with a diameter slightly smaller than that of the screw used.

This action is necessary due to the possibility of the wood cracking while fixing the screws without prior drilling. The manufacturer does not take responsibility for the consequences of failure to comply with the information and manufacturer's recommendations included in this manual.

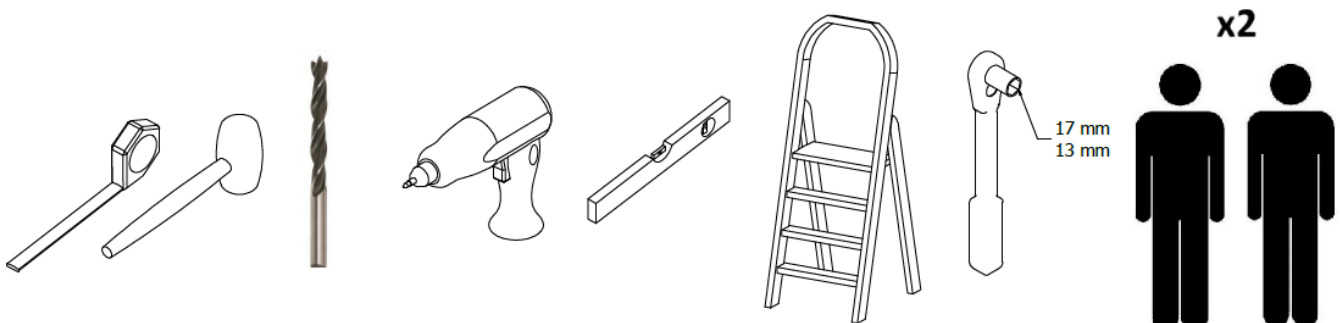

Basic tools required for installation

List of elements			
Element	Qty	Name	Description
1	2	Rack pole	80×2500
2	3	Pole and ladder connector – p6tpalisada	70-80×1250
2a	3	Pole and ladder connector – palisada	60×1250
3	2	Ladder (weight about 23kg)	620×2500
4	1	Swing beam	100×3300
5	1	Protection against injury	145×210
6	1	Protection against fall	38×600
7	1	Platform	490×880
8	2	Stiffening strut	70-80×500
9	2	Railing	20×45
A	3	Bolt with self-locking gasket and nut	10×170
B	4	Wood screw with gasket (hexagonal)	10×140
C	4	Wood screw with gasket (hexagonal)	8×120
D	6	Wood screw with gasket (hexagonal)	8×80
E	2	Wood screw with gasket (hexagonal)	8×70
F	5	Wood screw (hexagonal)	8×40
G	34	Wood screw	4×50
H	2	Wood screw	5×35
I	5	Clamp	100
J	2	Seat	
K	1	Ladder	
L	1	Slide (available in version 2)	
M	4	Anchors for attaching the swing set to the ground (sold separately)	
N	12	Wood screw	4×70



NOTE

The elements: (2) or (2a) are used interchangeably. One kit contains only one type of element.


WARNING: Vertical clearance between the seat and the ground must be at least 350mm, which guarantees the required user safety.


NOTICE: LIMIT NUMBER OF USERS – ver 1 – 4; ver 2 – 3.

ALL SPARE PARTS ARE AVAILABLE FROM THE MANUFACTURER OF THE SWING PLEASE KEEP THIS MANUAL IN CASE YOU NEED IT LATER.

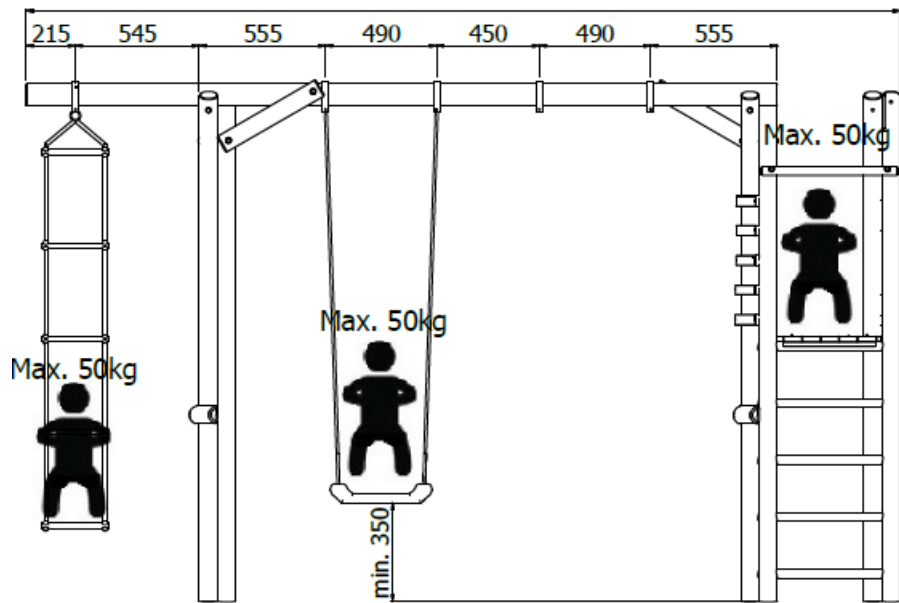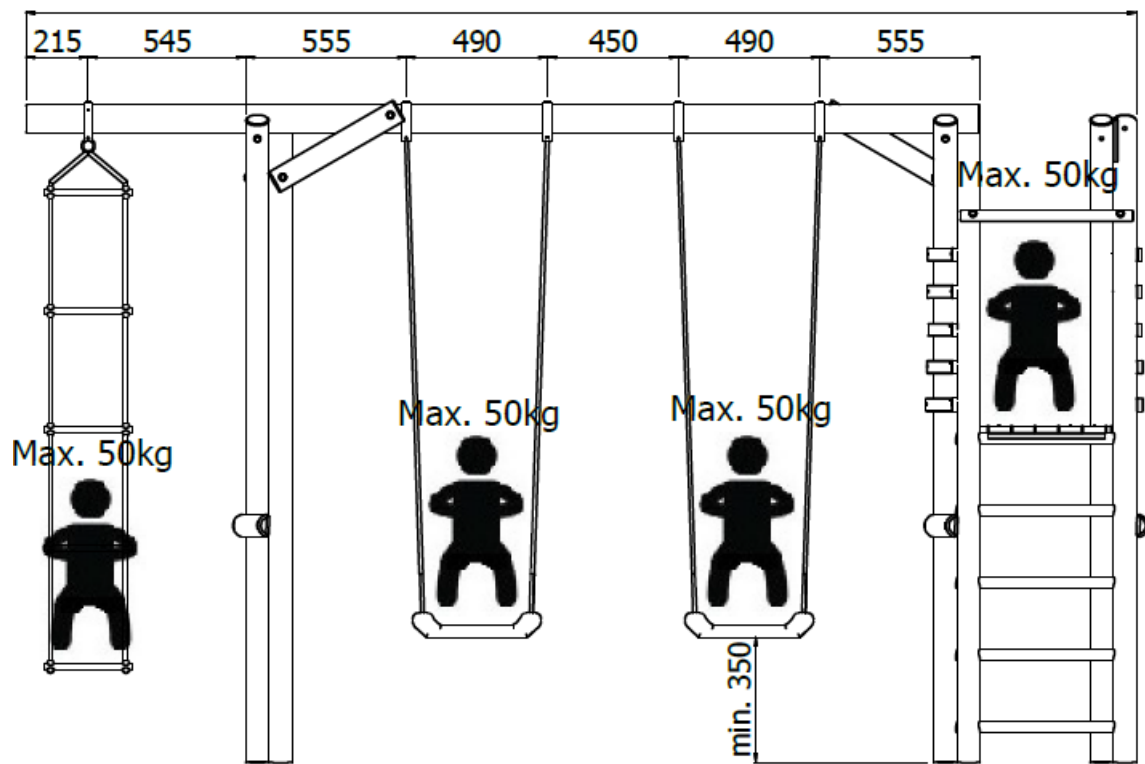





Swing Installation



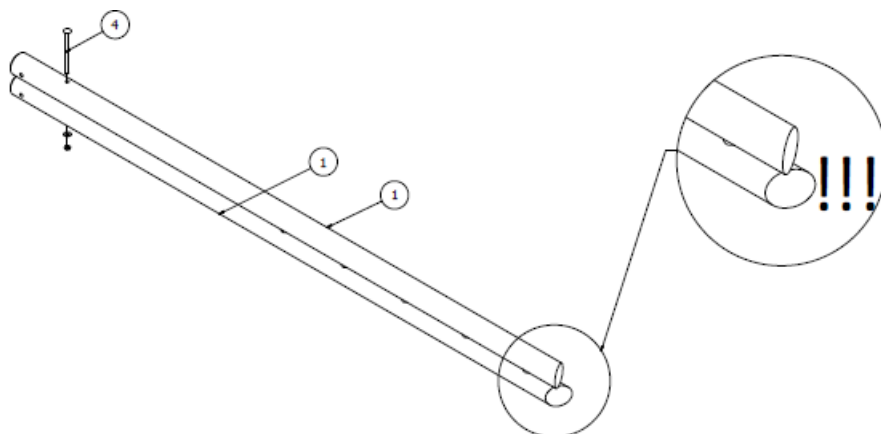


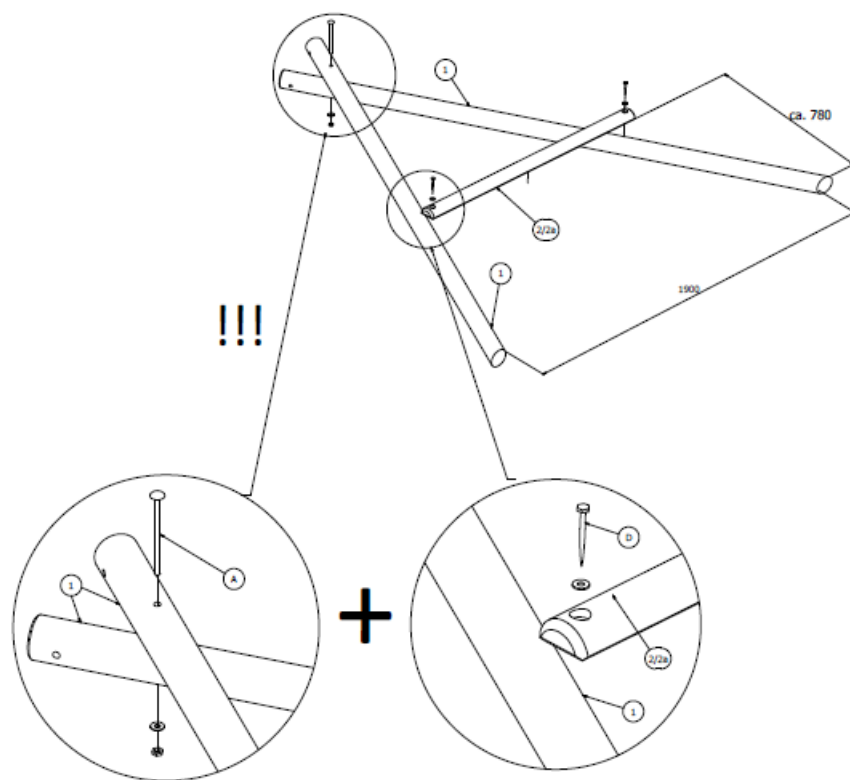


3. x1

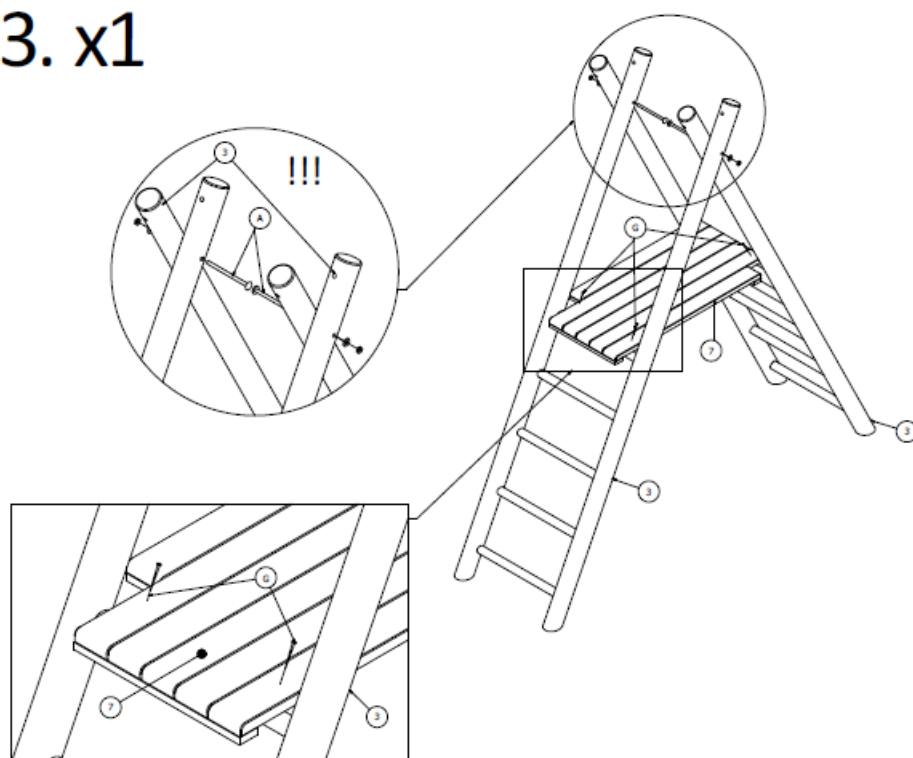

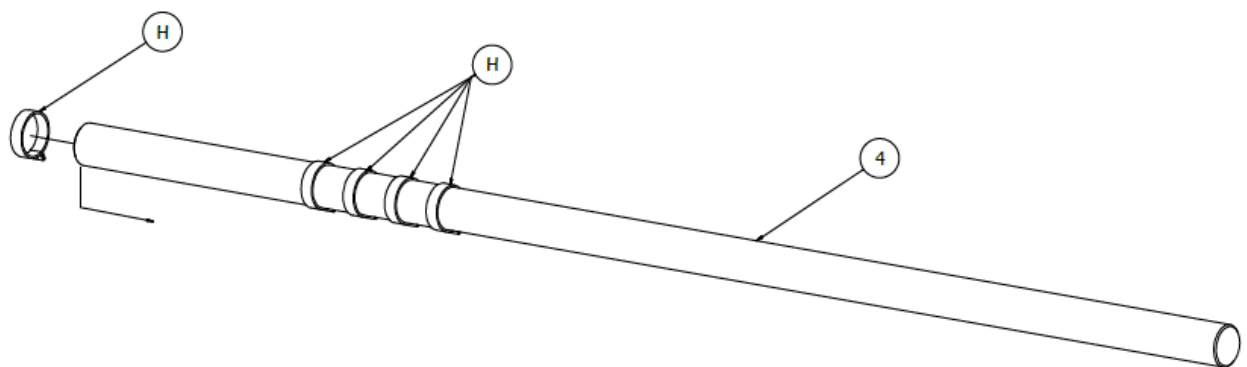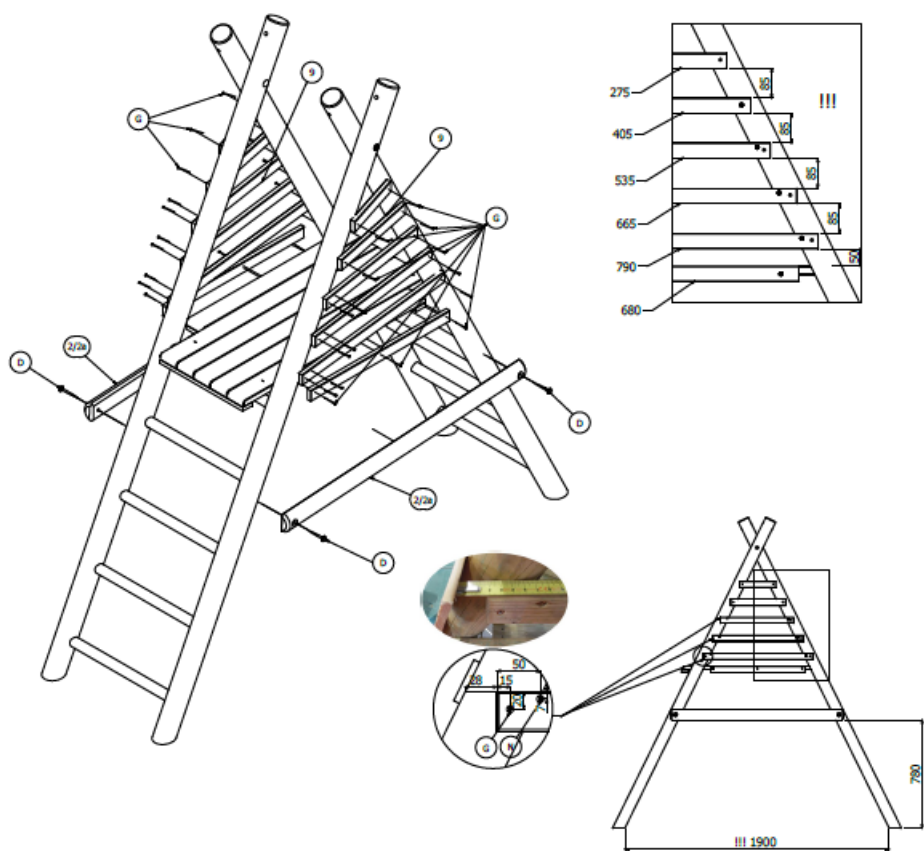
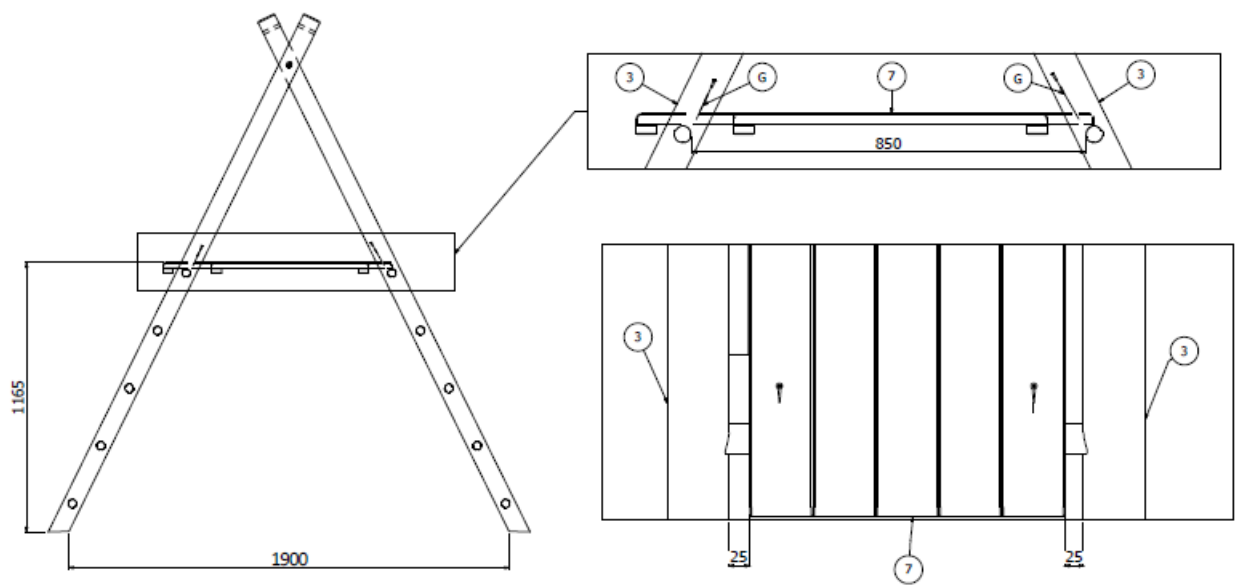





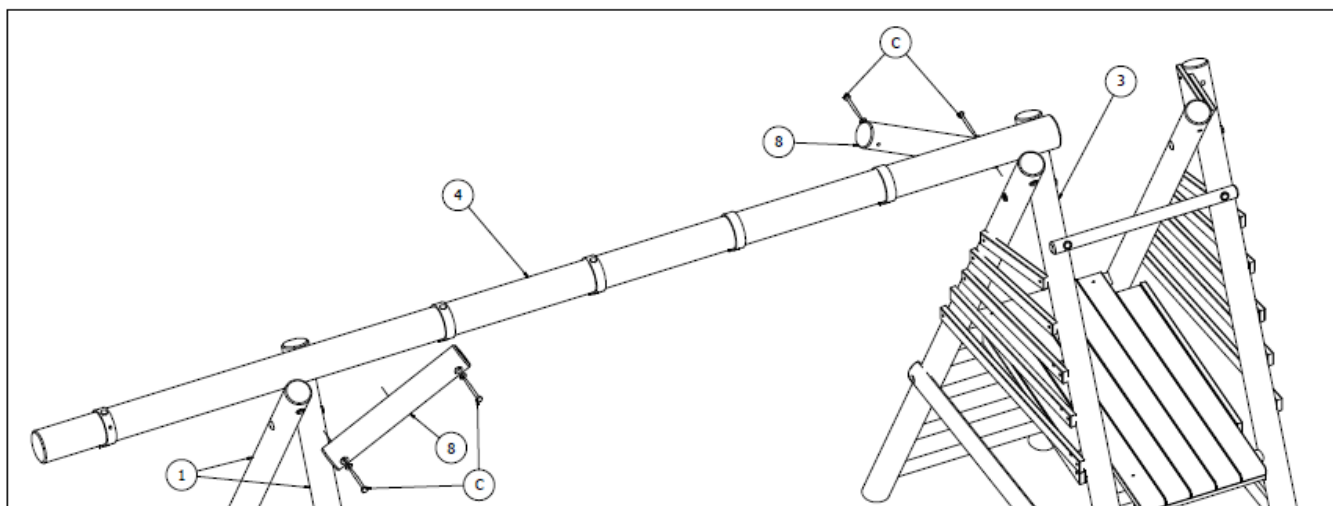
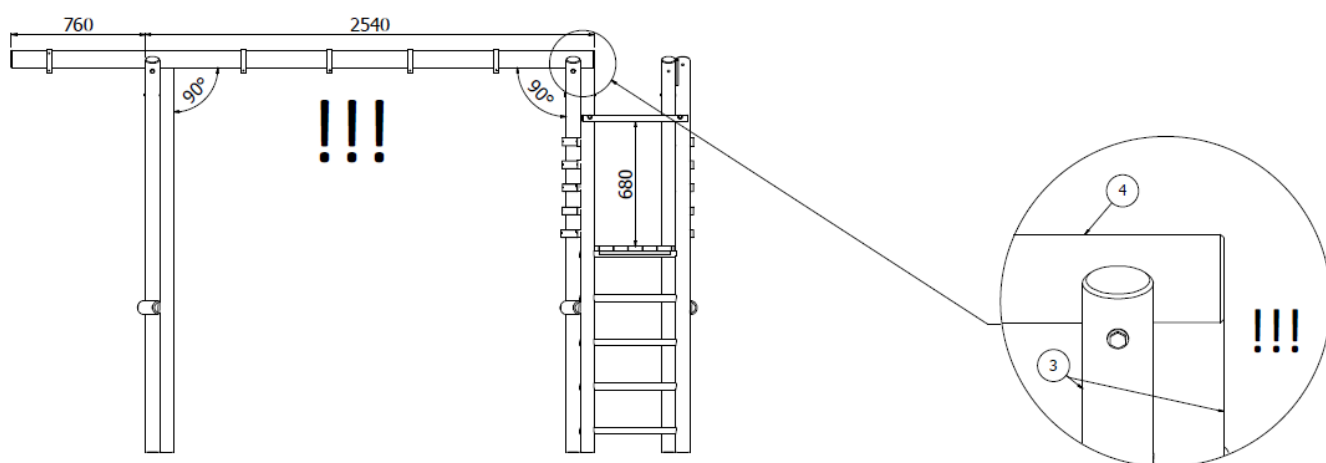
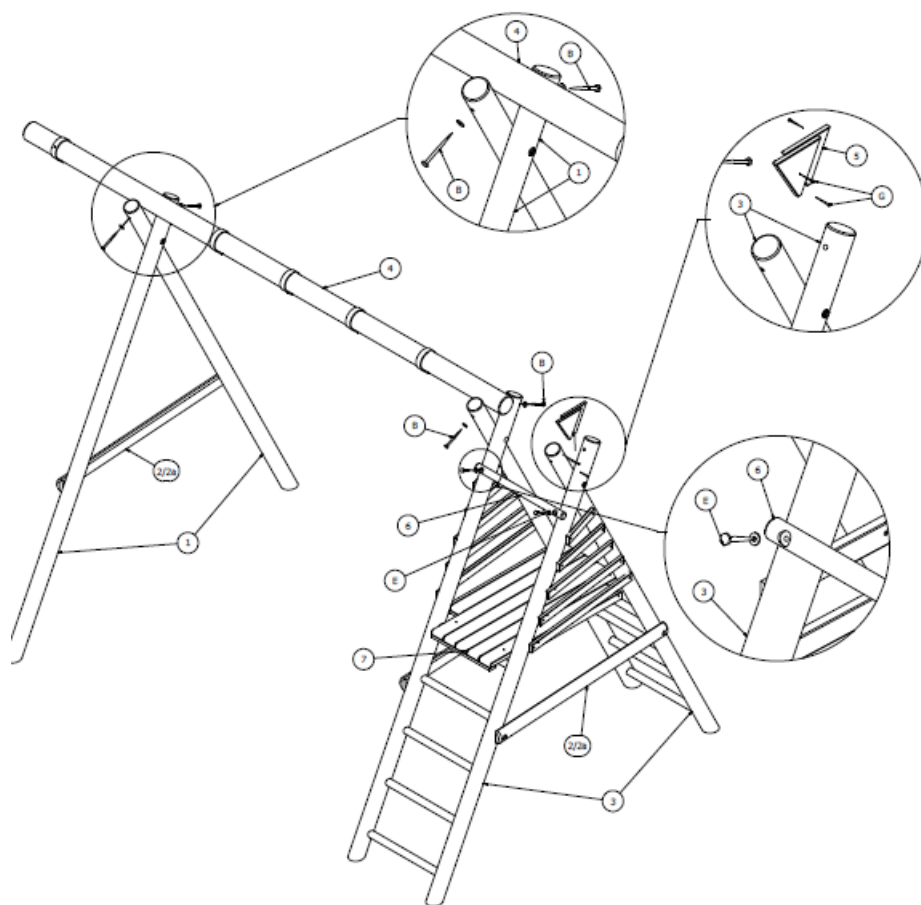


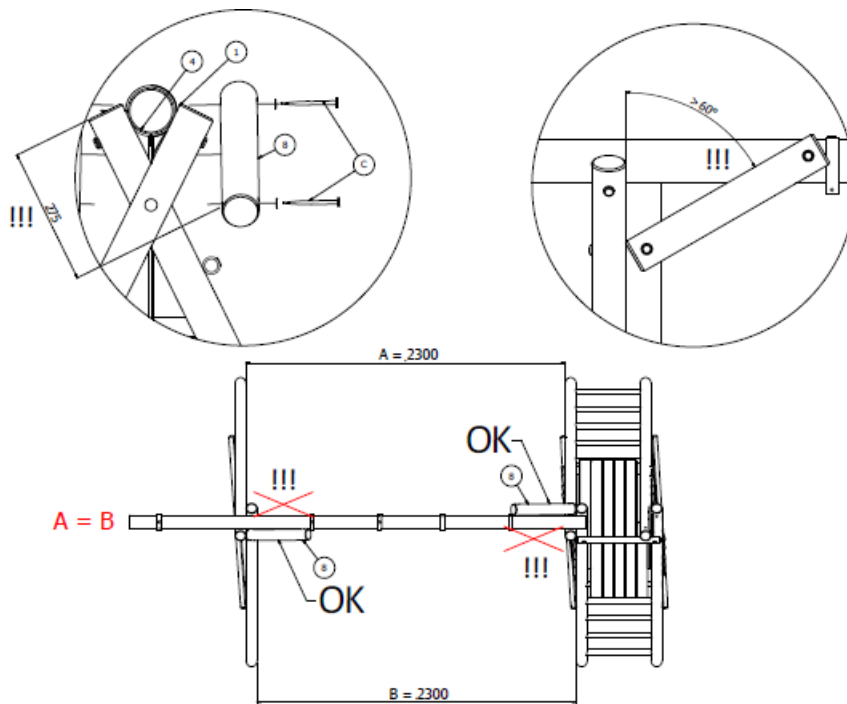

NOTE

For the safety of your children, the accessories should be installed according to the drawings below!

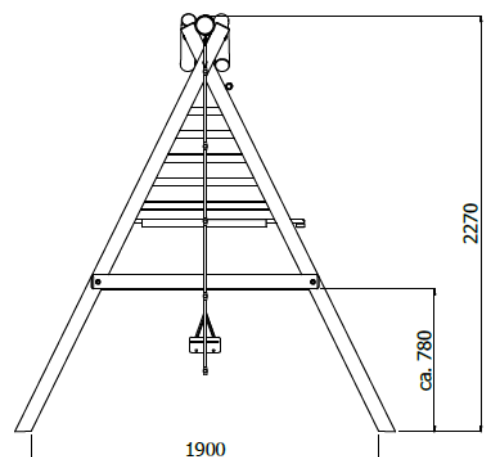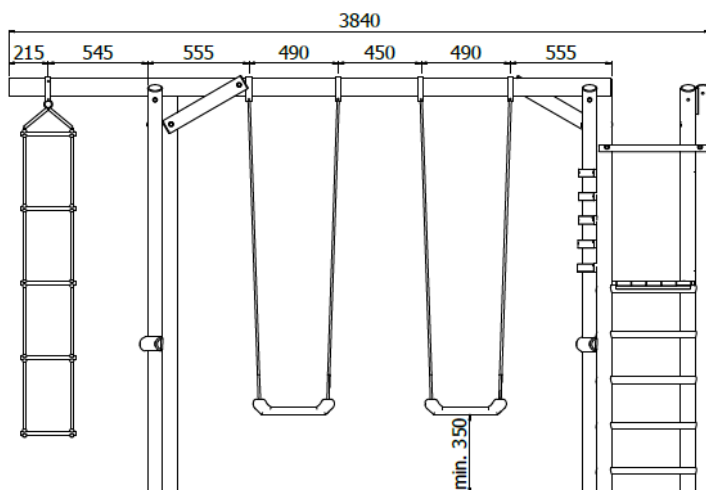


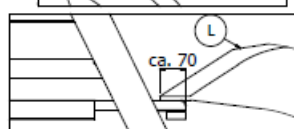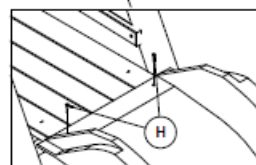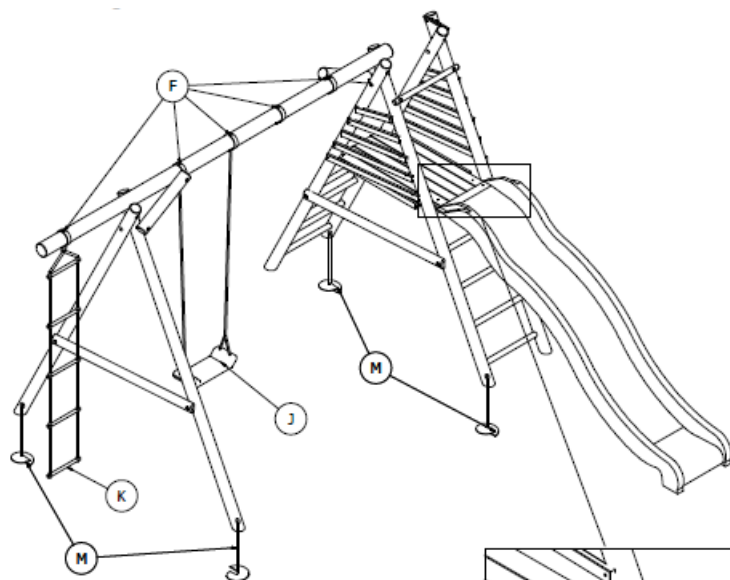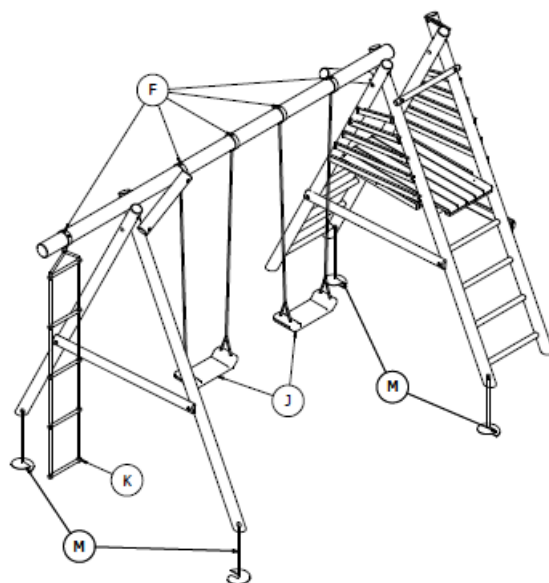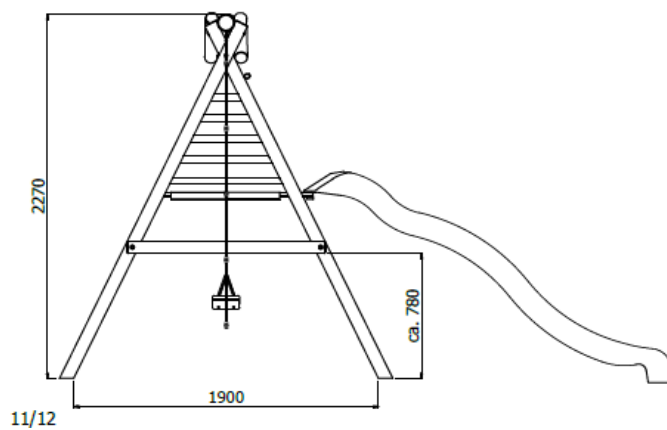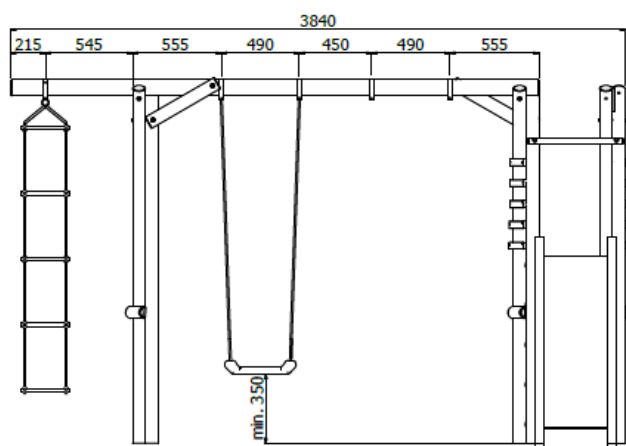

NOTE

Ground anchors (K) which should be used in order to attach the swing set to the ground. The anchors are not included in the kit, they have to be purchased separately. Installing the anchors is necessary to ensure the stability of the swing set and to minimize the risk of its tipping over.

The anchors (K) should be fastened to both posts of the swing frame (1) as well as to both posts of the ladders (3).

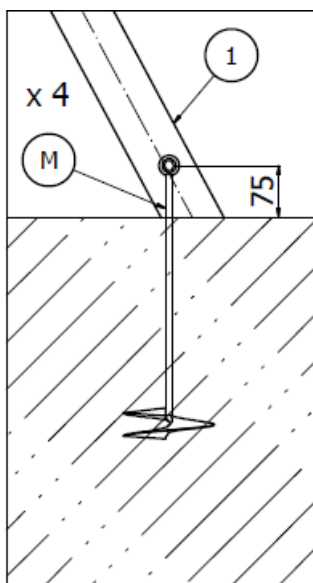

12/12


SOBEX Sp. z o.o.

ul. Poznanska 62 Trzebiecz

66-530 Drezdenko

Website: www.sobex.com.pl

Documents / Resources

	<p>SOBEX JB11KO000000B Swing [pdf] Instruction Manual JB11KO000000B Swing, JB11KO000000B, Swing</p>
---	---

References

- [User Manual](#)