



socket mobile DuraScan 600/700 NFC and RFID Contactless Reader/Writer Instructions

[Home](#) » [socket mobile](#) » socket mobile DuraScan 600/700 NFC and RFID Contactless Reader/Writer Instructions 



mobile DuraScan 600/700 NFC and RFID Contactless Reader/Writer Instruction Manual

Contents

- [1 Step 1: Remove Battery Door](#)
- [2 Step 2: Remove Battery](#)
- [3 Step 3: Insert New Battery](#)
- [4 Step 4: Secure Battery Door](#)
- [5 Documents / Resources](#)
- [6 Related Posts](#)

Step 1: Remove Battery Door

Use a screwdriver to loosen the screw and remove the battery door.



Step 2: Remove Battery

Use a flat head screwdriver and place it in the top right corner to gently push the battery out. Then, pull the connector to remove it.



Step 3: Insert New Battery

Plug the connector on the new battery.



Step 4: Secure Battery Door

Ensure the battery door is properly placed, then screw the battery door back on.



Step 5: Use a wall charger to charge the battery until the battery light turns solid green (up to 8 hours)

Charging Requirements: Min 5.0 VDC, 1 AMP, Max 5.5 VDC, 3 AMPs

04/2022
6430-00407B

Documents / Resources



[socket mobile DuraScan 600/700 NFC and RFID Contactless Reader/Writer](#) [pdf] Instructions

DuraScan 600 700 Battery Replacement, DuraScan 600, DuraScan 700, NFC and RFID Contactless Reader Writer, DuraScan 600 700 NFC and RFID Contactless Reader Writer