

socket Charging Stand User Guide

Home » **Socket** » socket Charging Stand User Guide

Contents [hide


- 1 socket Charging Stand
- **2 PACKAGE CONTENTS**
 - 2.1 PRODUCT INFORMATION
- **3 ATTACHING THE SECURITY CABLE**
- 3.1 INSERTING THE POST TO THE BASE
- **3.2 CHARGING STAND OPERATIONS**
- **4 COMMAND BARCODES**
- **5 AUTO SCAN MODE**
 - 5.1 How Auto Scanning Mode Works in the Stand or Dock
 - 5.2 How the Scanner reverts to Manual Mode (Not in the Stand)
- **6 PRODUCT SPECIFICATIONS**
- 7 Documents / Resources
 - 7.1 References
- **8 Related Posts**




socket Charging Stand



PACKAGE CONTENTS

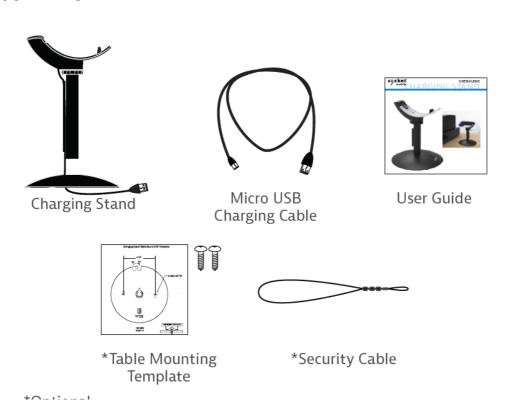


PRODUCT INFORMATION

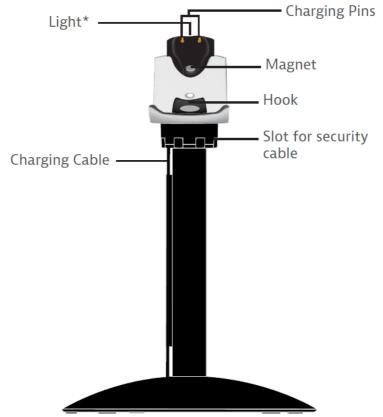


Illuminates Red when connected to AC Power.

ATTACHING THE SECURITY CABLE

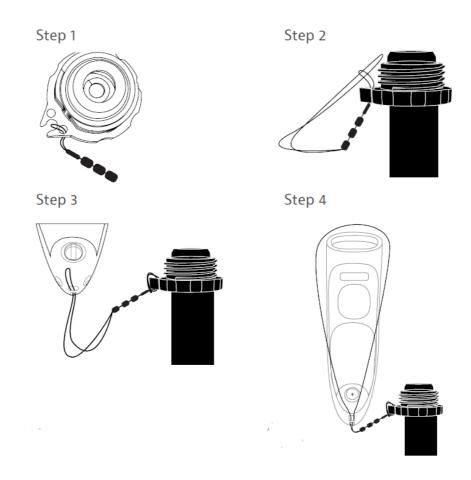

Security cable comes Pre-installed for your convenience. To remove, follow step 2 and step 1.

INSERTING THE POST TO THE BASE

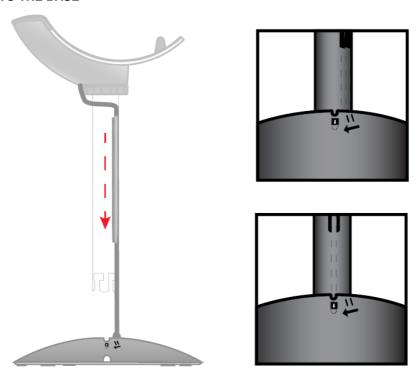


Insert the post into the top of the base, lining up the marker on the post to the unlock icon. Push down and turn the post towards the lock icon until you hear a click. Run the USB cord through the channel at the bottom of the base.

CHARGING STAND OPERATIONS

The charging pins must align to supply power to the scanner. The red light will illuminate and the scanner will beep twice.



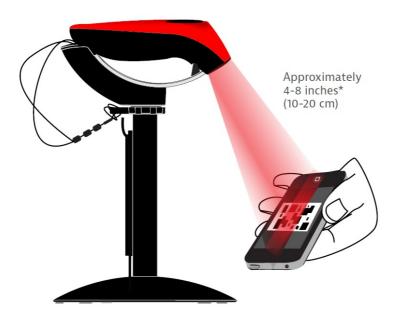



When set to Auto Scan with Socket Mobile's 2D barcode scanners (D740, D745, D750, D755, D760, S740, S760), the barcode should be 4 to 8 inches away.

OPTIONAL TABLE MOUNTING

Two keyholes are provided on the Charging Stand base for an optional installation on a wooden surface (screws and drill template included).

- 1. Place the Charging Stand on the drill template and position these in the desired location. Rotate the Charging Stand to align with the solid notch (not the dotted notch) on the template.
- 2. Rotate the Stand/template combination so the Socket Mobile logo faces the direction you want the scanner to aim.
- 3. Tape the template to the surface and remove the Charging Stand.
- 4. Drill two 3/32" holes through the drill marks on the template.
- 5. Tighten the two screws with about 1/4" of the screw head exposed.
- 6. Place the Charging Stand on the template aligned with the dotted notch.
- 7. You can now tear away the template.
- 8. Twist the Charging Stand clockwise to lock the screws in the keyholes.

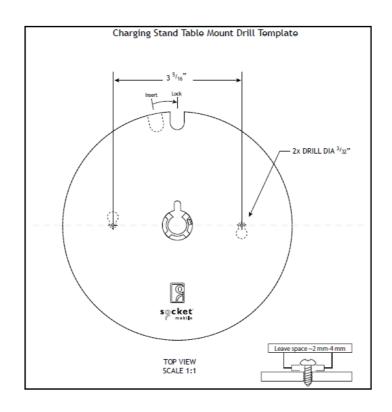

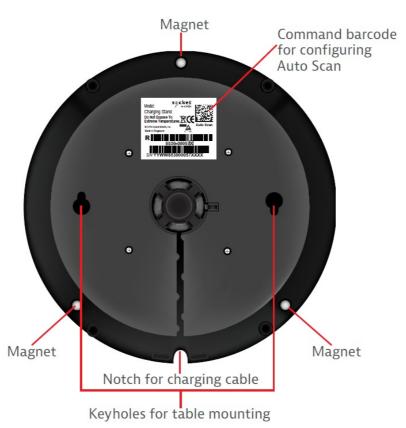

COMMAND BARCODES

Charging Stand Modes	
Auto Scan Scan the barcode to enable Auto Scan. This will allow the scanner to automatically scan barcodes without pressing the scan button.	#FNB 41FBA50003#
Manual Mode – Normal (default) Scan the barcode to configure the scanner back to normal. It will be in manual scan mode even when placed in the stand or cradle.	#FNB 41FBA50000#

Charging Stand Modes	
Stand Mode Scan the barcode to configure the scanner is permanently in Auto Sc an mode, regardless whether it is connected to power or not.	#FNB 41FBA50001#

This mode will drain the battery faster if not connected to power.

1. Scan command barcode to place your scanner in Auto Scan.

Note: Turn off host device's Bluetooth before scanning command barcode.

2. Once the scanner is in Auto Scan, it will switch to automatic scanning when it detects power coming from the charging pins of the Dock or Stand. Place a barcode in the scanners field of view and the scanner will automatically scan it.

AUTO SCAN MODE

How Auto Scanning Mode Works in the Stand or Dock

		Notification		
Action	Behavior	Beep Pattern	Light Activity	Vibrate
Place Scanner in the e Stand	Scanner switches t o Auto Scan Mode	High-high tone confir ms proper seating*	Battery Status Light is Disabled	None
Place a barcode in t he Scanners Field o f View	Decode barcode	1 Beep when Data s uccessfully scanned	Green Light blinks (while scanning)	None

How the Scanner reverts to Manual Mode (Not in the Stand)

		Notification		
Action	Behavior	Beep Pattern	Light Activity	Vibrate
Remove the Scanne r from the Stand and press the scan butto n	Scanner switches t o Manual Mode	None	Battery Status Light is Enabled	Enabled
Press the scan butto n	Decode barcode	1 Beep when Data s uccessfully scanned	Green Light blinks (while scanning)	Vibrate when Data successfully scanne d

Auto Scanning Mode: Barcodes placed in the Scanner's field of view are automatically scanned.

Manual Mode (default): Pressing the scan button initiates a scan.

PRODUCT SPECIFICATIONS

Dimensions			
Stand Height	6.5 in (165 mm)		
Charging Mount Width	1.80 in (46 mm)		
Charging Mount Length	5.50 in (140 mm)		
Base Diameter	5.75 in (146mm)		
Total Weight			
Without Scanner and Power Adapter	12.7 oz (360 g)		

HELPFUL RESOURCES

Technical Support and Product Registration: support.socketmobile.com

Phone: 800-279-1390 +1-510-933-3020 (worldwide)

Warranty Checker: socketmobile.com/warranty-checker

Socket Mobile Developer Program: socketmobile.com/developer

Download Socket Mobile's scanner User Guide and Command Barcodes at socketmobile.com/downloads

COMPLIANCE STATEMENT

The unit under test was found compliant with all the applicable Directives, 2004/108/EC and 2006/95/EC.

WASTE ELECTRICAL AND ELECTRONIC EQUIPMENT

The WEEE directive places an obligation on all EU-based manufacturers and importers to take-back electronic products at the end of their useful life.

ROHS STATEMENT OF COMPLIANCE

This product is compliant to Directive 2011/65/EU.

NON-MODIFICATION STATEMENT

Changes or modifications not expressly approved by the party responsible for compliance.



Documents / Resources



socket Charging Stand [pdf] User Guide Charging Stand

References

- Product Support Manuals & Image Downloads Socket Mobile
- P SocketCare Warranty Checker Socket Mobile

• Parcode Scanner, NFC Reader Writer Support - Socket Mobile

Manuals+, home

privacy