



PP1011 1 Gang Wall Socket Switch User Manual

[Home](#) » [Socket](#) » PP1011 1 Gang Wall Socket Switch User Manual 

SOCKET

SOCKET_13A 1-GANG WALL SOCKET SWITCH

PP1011

User Manual




Individual switch



Contents

- 1 Parts & Descriptions
- 2 ELECTRICAL SAFETY
- 3 How to use
- 4 How to clean
- 5 SPECIFICATION
- 6 WARRANTY
- 7 Documents / Resources

Parts & Descriptions

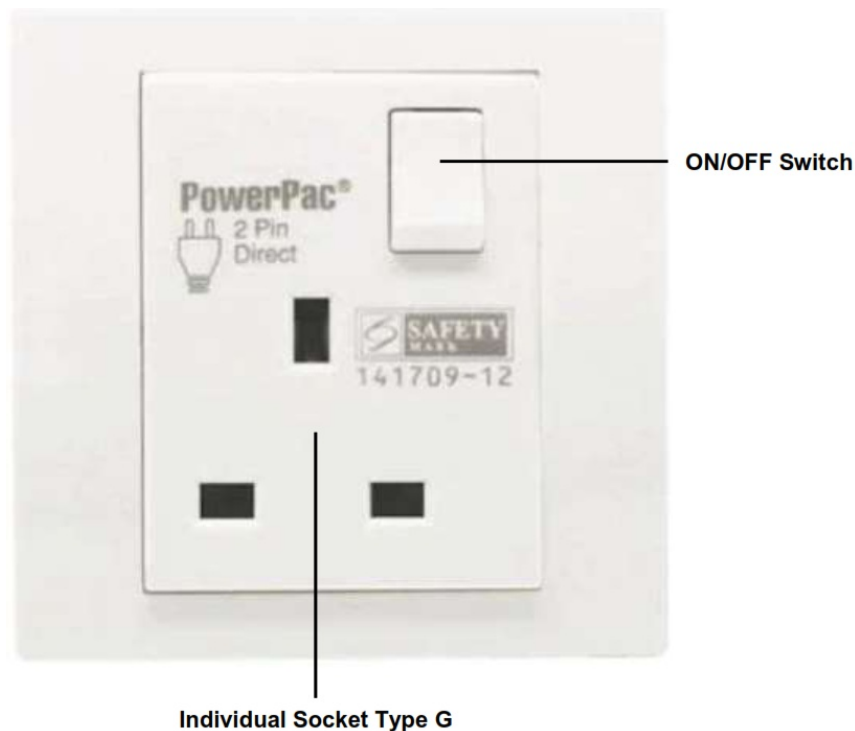

ELECTRICAL SAFETY

New installations and extensions to existing systems should always be carried out by a licensed electrician. Contact a licensed electrician to replace power switches and wall sockets, fit plugs, extension cords and light sockets.

Incorrect installation can result in fatal injury and the risk of fire.

Warnings

ATTENTION :

Read this booklet carefully as it contains important instructions for a safe installation, use and maintenance. Important instructions to be kept for future reference.

The following basic precautions should always be followed when using electrical appliances:

1. Read all instructions before using the Wall Socket Switch (henceforth referred to as “the device”). The Wall Socket Switch

2. The device must be used only for the purpose it was expressly designed; any use NOT complying with the instructions contained in the manual is considered inappropriate and dangerous. The manufacturer is NOT responsible for possible damages caused by the inappropriate and/or unreasonable use.
3. The installation of the device will be made by a licensed electrician. A wrong procedure may cause damages to persons, animals or objects, for which the manufacturer cannot be considered responsible.
4. Before use, check the integrity of the device. DO NOT operate the device when it is damaged. In case you are not sure, contact a licensed electrician. If the device is damaged, it must be replaced by the manufacturer or its service agent or a licensed electrician in order to avoid a shock hazard.
5. DO NOT attempt to connect multiple Adapters, or plug an Adapter into an Extension Socket, or vice versa into the device. This mistake can lead to fires, equipment failures and electrocution. Plugging two Adapters or Adapter + Extension Socket together reduces their current capacity which will result in voltage drop and overheating.
6. The packing materials (plastic bags, expanded polystyrene, etc.) must be kept out of the reach of children or disabled persons since they represent potential sources of danger.

Location

7. The device is NOT suitable to be used or stored near heat sources (open flame, ovens, heaters, stoves, etc.) and/or in an explosive environment (in the presence of flammable substances such as gas, vapour, mist or dust, in atmospheric conditions when, after ignition, the combustion is spread in the air). Items containing these substances should never be placed in the device, and never be used to clean the device in order to avert the risk of fire or explosion.
8. DO NOT install the device outdoors. Install the device only indoors, protected from weathering such as rain, direct radiation of the sun and dust. Outdoor sockets have insulation that protects against moisture, sunlight and abrasion, so using an indoor socket outdoors can create a fire hazard or result in electric shock.

Operation

9. If you are using the device for the first time, you should:
 - a. Clean the device with a slightly damp cloth. Ensure that the device is completely dry before use. DO NOT use metal scouring pads.
 - b. Make sure to remove any label or protective sheet which may prevent its proper functioning.

DO NOT:

- cover the device during functioning;
 - insert objects or body parts inside the protection cover of the device;
 - locate the device near curtains or textiles;
 - leave the device unsupervised during operation.
10. During operation, DO NOT touch the device with wet body parts, and it is recommended to have between you and the standing surface, an isolating element (for example, wearing shoes with rubber soles).
 11. DO NOT soak the device in water or other liquids, wash it under the tap, or let any liquid flow into the internal casing of the device to prevent electric shock.
 12. Switch the ON/OFF Switch of the device OFF and detach the plug of any appliance (holding it firmly with dry hands) inserted into the device if it is NOT used for a long period, and before storing, cleaning or performing any maintenance operation on those appliances.
 13. In case of malfunction or anomaly during the functioning (e.g. smoke coming out of the device), switch the ON/OFF Switch of the device OFF and check the cause of the anomaly, if possible, with the support of a licensed electrician.

14. The device is intended for commercial use but to be used in households and similar applications, such as:
 - Staff kitchen areas in shops, offices and other working environments;
 - Dormitories;
 - By clients in hotels, motels and other residential environments;
 - Bed and breakfast type environments. ;
15. The device can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall NOT play with the device. Cleaning and user maintenance shall NOT be made by children. Keep the device out of reach of children less than 8 years old.
16. Save these instructions.

How to use

1. When using an Adapter in which multiple appliances are plugged into it, add their wattages together to make sure the total DOES NOT exceed the Adapter's wattage rating.
2. Insert the plug of an appliance into the device.
3. Switch the ON/OFF Switch of the device ON.
4. When any appliance attached to the device is to be switched off, switch off the appliance followed by the ON/OFF Switch of the device and then detach the plug of the appliance from the device.

How to clean

1. Clean the device only when all plugs are removed and the ON/OFF Switch of the device is OFF.
2. Wipe the exterior of the device using a soft, damp cloth or sponge. Remove stubborn spots with a cloth moistened with mild liquid detergent. DO NOT use abrasive scouring pads or powders. DO NOT attempt to clean the interior of the device.
3. DO NOT soak the device in water or other liquids, wash it under the tap, or let any liquid flow into the internal casing of the device to prevent electric shock.
4. Ensure that the device is completely dry before use.

ENVIRONMENTAL TIP

This device, along with all other electronic appliances, should, when it is no longer capable of functioning, be disposed with the least possible environmental damage according to the local regulations in your area. In most cases you can discard the appliance at your local recycling centre.

DISPOSAL: Do not dispose this device as unsorted municipal waste. Collection of such waste separately for special treatment is necessary.

SPECIFICATION

Model	PP1011
Number of 3-Pin Sockets	1
2-Pin Direct	Yes
Safety Shutter	Yes
Maximum Current	13 A
Voltage range	230 V ~50 – 60Hz

WARRANTY

Warranty Conditions

1. This warranty provides against defective materials and manufacturing faults throughout for two years from the date of purchase of the appliance. The warranty on the Compressor is 10 years subject to the same conditions as above.
2. This warranty also does not cover normal wear and tear, replacement of consumable materials and accessories, and the cost of maintenance of the appliance.
3. This warranty does not cover the repair or replacement of part/s damaged by misuse, accidents, negligence, alterations, or modifications in any way, or repairs done by any repair organisation without the prior consent of Power Pac Electrical Pte Ltd.
4. Repair and service are to be performed at: 5 Changi South Lane #03-01 Singapore 486045. A transport fee will be charged for personal doorstep service.
5. The original purchaser of the appliance must furnish proof of purchase to our Service Centre with the email or number as registered during submission of warranty when this appliance is sent for repair/service. Failure to do so may delay the receipt of said repair/service by the customer.
6. Under no circumstances whatsoever shall the serial number be erased, defaced or altered by the customer and/or his representatives, or the dealer and/or his agents. Failure to ensure this shall invalidate the warranty.
7. This warranty is deemed to be void if the defect is caused by the attack of household pests, fire, lightning, natural disasters, pollution, abnormal voltage or the usage of generators.
8. This warranty is valid in Singapore only.
9. This warranty will be honored subject to the customer's registration of the warranty inclusive of original invoice or valid purchase receipt. Failure to present these documents will result in denial of service. However, if the customer still requests that the defective appliance be repaired, Power Pac Electrical Pte Ltd may, at its discretion, repair the appliance but impose a labour charge, as well as the costs of the replacement parts, to be borne solely by the customer.
10. Please refer to the attached picture for the location of one of our appliance's serial number, as an example.




Please complete the on-line registration warranty form available on our website. There is no further requirement to send us any hard copy as part of our efforts to save the environment.

In accordance with the terms and conditions of this limited warranty as stated above, Power Pac Electrical Pate Ltd, at its expense shall provide free services for the appliance within the warranty period from its date of purchase from our Authorised dealers.

SOCKET

Documents / Resources

	<p>SOCKET PP1011 1 Gang Wall Socket Switch [pdf] User Manual PP1011 1 Gang Wall Socket Switch, PP1011, 1 Gang Wall Socket Switch, Wall Socket Switch, Socket Switch, Switch</p>
---	---

[Manuals+](#).