



softing SW-PN Profinet Access Point Asset Management **Instruction Manual**

Home » softing » softing SW-PN Profinet Access Point Asset Management Instruction Manual



Contents

- 1 softening SW-PN Profinet Access Point Asset Management
- **2 PROFINET Access Point for Asset Management**
- 3 Parameterization, Plant Asset Management and Process
- 4 Asset Management and Parameterization of PROFINET **Devices**
- **5 Technical Data**
- 6 Documents / Resources
- **6.1 References**
- **7 Related Posts**




softening SW-PN Profinet Access Point Asset Management



PROFINET Access Point for Asset Management


- Access to PROFINET networks independent from the controller
- Integration without interference with the operation of existing installations
- Connect to PROFINET and PROFIBUS devices
- Compatible with products of leading device manufacturers

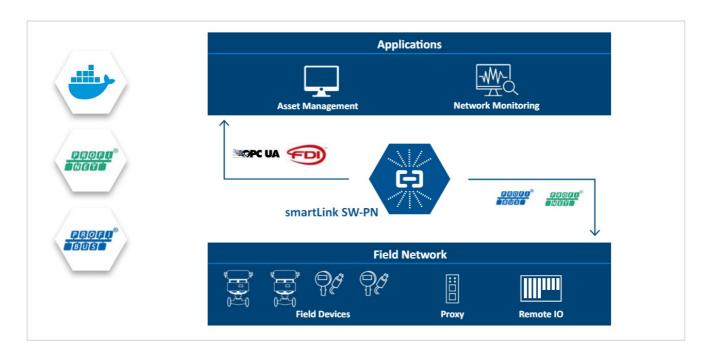


Parameterization, Plant Asset Management and Process

- Data Provision using Standard Industry Tools
- · Independent of configuration tools
- · Centralized and time-saving parameterization of
- PROFINET and PROFIBUS field devices directly from the control room
- Access from Plant Asset Management applications for field device configuration
- Ethernet Access Point to PROFINET networks
- Provides 2nd channel to access the field devices
- · Acts as a PROFINET supervisor
- Support of multiple PROFINET networks
- · Needs only a standard Ethernet (UDP) connection to the PROFINET networks
- Key Component for Transition to State-of-the-Art Technology
- Re-use of existing PROFINET networks without requiring modification
- Access to acyclic data via FDI communication server (OPC UA)

Asset Management and Parameterization of PROFINET Devices

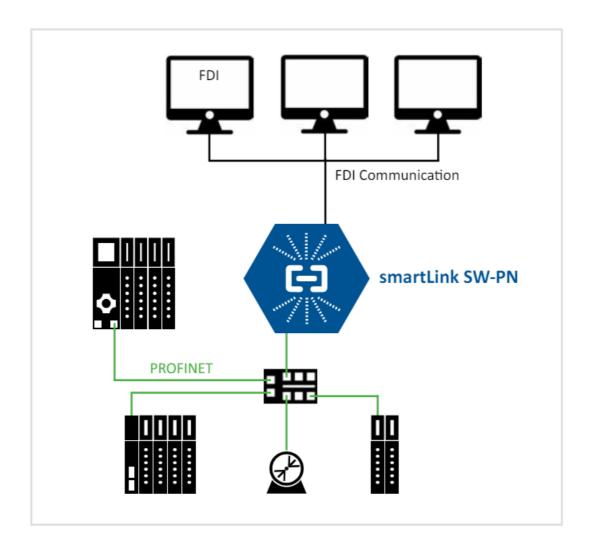

- Configuration, Parameterization, Plant Asset Management
- Secure, standardized access to devices
- Parallel to and independent of the controller
- Compatible with established communication standards
- Implements the standard FDI communication in the server interface based on OPC UA
- Configuration, Parameterization, Plant Asset Management
- Secure, standardized access to devices
- Parallel to and independent of the controller

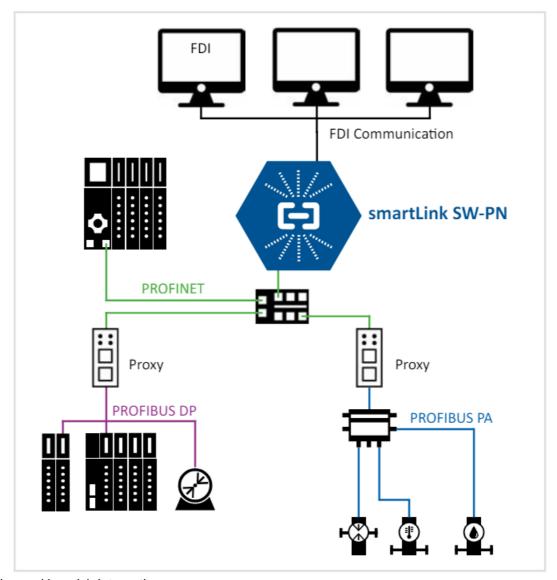

- Inexpensive and low-risk Integration
- Connection of PROFIBUS devices without additional hardware
- Use of existing infrastructure using the
- PROFINET/PROFIBUS proxy standard for connecting to the PROFIBUS devices
- Compatible with established communication standards
- Implements the standard FDI communication server interface based on OPC UA

Technical Data

Supported

Communication Protocols

PROFINET, PROFIBUS

FDI communication server (OPC UA)

PROFINET/PROFIBUS

Proxies

Softing:

pnGate DP, pnGate PA, pnGate PB

aplSwitch Field PA

Docker

Container

Minimum Hardware

Requirements

Docker Container: 200 MB free disk space, 500 MB RAM

Virtual Machine: VMware 3 GB free disk space, 2 GB RAM

Hyper-V 5 GB free disk space, 2 GB RAM

Node locked license for Docker container

Scope of Delivery	
Software	Virtual machine or Docker container – additionally available via Docker Hub
Documentation	User Guide as PDF download

Order Numbers	
	smartLink SW-PN – Try it with 1 field device for free
LRA-AA-027003	smartPlus PN, License access to one field device

Technical changes reserved © Softing Industrial Automation GmbH, smartLink_SW-PN_D-3S_EN_231212_100, December 2023

Documents / Resources

Licensing



softing SW-PN Profinet Access Point Asset Management [pdf] Instruction Manual SW-PN Profinet Access Point Asset Management, Profinet Access Point Asset Management, Point Asset Management, Asset Management

References

• User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.