



SOKER RJ-WC9B15 Universal Wireless Charging User Manual

[Home](#) » [SOKER](#) » SOKER RJ-WC9B15 Universal Wireless Charging User Manual 

Contents

- [1 SOKER RJ-WC9B15 Universal Wireless Charging](#)
- [2 Parts list](#)
- [3 FCC statement:](#)
- [4 Documents / Resources](#)
- [5 Related Posts](#)

SOKER

SOKER RJ-WC9B15 Universal Wireless Charging



Model: RJ -WC9B15

Input : 5V/2A; 9V/1.67A; 12V/1.67A

Output : 5W/7.5W (ios)/1 0W/1 SW

Transmission Distance: 8mm

Executive Standard: Qi Standard

Compatibility: Compatible with all

Parts list

- Wireless charging base *1
- Instructions *1

- Type-C Cable *1

Attention

1. Do not throw the Magnetic wireless charger into fire and do not repair it by yourself
2. Protect the Magnetic wireless charger from moisture and water
3. A metal phone case/cover should be taken off from your smart phone when you use our Magnetic wireless charger
4. Disconnect the Magnetic wireless charger before you clean it
5. Do not use the Magnetic wireless charger in extreme cold or heat environment

Note: The product having overheat protection will automatically stop working when the temperature is too high during charging (light goes out). Please re-plug the charger if this happened.

Directions for use

1. The wireless charging board is powered by a computer or adapter according to the input device supply power converted to its corresponding output power. (To charge the mobile phone effectively, it is recommended to use QC/PD equipment)
2. After the connection is powered on, the indicator light will blink blue and then be steady on (in standby mode).
3. Place the device that needs to be charged on the wireless board, and the charging will start. The blue light then turns to the red light and switches to the blue light when it is full

FCC statement:

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help. Changes or modifications not expressly approved by the party responsible for
- compliance could void the user's authority to operate the equipment.

Radiation Exposure Statement

This device complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. During the

operation of device a distance of 15 cm surrounding the device and 20 cm above the top surface of the device must be respected.

Documents / Resources

<div data-bbox="135 320 197 389">  </div> <div data-bbox="135 403 280 461"> <p>Warranty</p> <p>SOKER RJ-WC9B15 is a universal wireless charging pad. It is designed to be compatible with all Qi-enabled smartphones. The warranty period is 12 months from the date of purchase. If the product is found to be defective within this period, the user is entitled to a replacement or a refund, at the discretion of SOKER. The warranty does not cover physical damage, liquid damage, or damage caused by misuse. For more details, please refer to the warranty card included with the product.</p> </div>	<div data-bbox="316 421 1461 519"> <h2>SOKER RJ-WC9B15 Universal Wireless Charging [pdf] User Manual</h2> <h3>RJ-WC9B15, RJWC9B15, 2A497-RJ-WC9B15, 2A497RJWC9B15, RJ-WC9B15 Universal Wireless Charging, Universal Wireless Charging</h3> </div>
--	---