



Home » SOLAX POWER » SOLAX POWER Gateway ECC-B Energy Management Device User Manual ₹

Contents [hide]

- 1 SOLAX POWER Gateway ECC-B Energy Management Device
- 2 Product Information
- 3 Product Usage Instructions
- 4 INTRODUCTION
- 5 Explanation of Symbols
- 6 Preface
- 7 FCC
- 8 ECC-B System
- 9 Interface Description
- 10 Installation Preparation
- 11 STATEMENT
- 12 FAQ
- 13 Documents / Resources
 - 13.1 References



SOLAX POWER Gateway ECC-B Energy Management Device



Specifications

• Product Name: Gateway ECC-B

• User Manual Version: 2.0

• Website: <u>www.solaxpower.com</u>

Product Information

The Gateway ECC-B is a communication gateway energy control center with WiFi capabilities. It is designed for installation, electrical connection, commissioning, maintenance, and troubleshooting purposes.

Product Usage Instructions

Read this First

• Ensure you carefully read the user manual before operating the Gateway ECC-B.

Safety

 Follow all safety instructions provided in the manual to prevent any accidents or injuries.

ECC-B System Description

Provides an overview of the Gateway ECC-B system.

Highlights

Key features and functionalities of the Gateway ECC-B.

2.3 Appearance

- Overview: Describes the overall appearance of the Gateway ECC-B.
- **Dimensions:** Provides the measurements of the product.
- Symbols on the Label and ECC-B: Details the symbols used on the product.

Interface Layout

• Explains the layout of the interfaces on the Gateway ECC-B.

Terminal Use

• Instructions on how to use the terminals for connections.

Unpacking

• Guidelines for unpacking the Gateway ECC-B.

Packing List

List of items included in the packaging.

Selection of Installation Location

• Tips on selecting the appropriate location for installation.

INTRODUCTION

About This Manual

Scope of Validity

- This manual is an integral part of Gateway ECC-B. It describes the installation, electrical connection, commissioning, maintenance, and troubleshooting of the product. Please read it carefully before operating.
- Note: ECC-B refers to the communication gateway energy control center-WiFi.

Target Group

- The installation, maintenance, and grid-related settings can only be performed by qualified personnel.
- Are licensed and/or satisfy state and local jurisdiction regulations.
- Have good knowledge of this manual and other related documents.

Explanation of Symbols

The symbols that may be found in this manual are defined as follows:

Symbol	Description
<u> </u>	Indicates a hazardous situation which, if not avoided, will result in death or serious injury.
MARNING	Indicates a hazardous situation which, if not avoided, could result in death or serious injury.
CAUTION!	Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.
NOTICE!	Provides tips for the optimal operation of the product.

Change History

- Version 00 (2024-05-28)
 - Initial release

Preface

Read this First

• Gateway ECC-B is well designed and tested to meet all applicable state and

international safety standards.

- However, like all electrical and electronic equipment, safety precautions must be observed and followed during the installation of the ECC-B to reduce the risk of personal injury and to ensure a safe installation.
- Before installing the device, the installer must carefully read, fully understand, and strictly follow the detailed instructions of the user manual and other related regulations.
- And the safety instructions in this document are only supplements to local laws and regulations.
- SolaX shall not be liable for any consequences caused by the violation of the storage, transportation, installation, and operation regulations specified in this document, including, but not limited to.
- ECC-B damage due to force majeure, such as earthquake, flooding, thunderstorm, lightning, fire hazard, volcanic eruption, etc.
- ECC-B damage due to man-made cause.
- ECC-B used or operated against any items in the local policy.
- Failure to follow the operation instructions and safety precautions on the product and in this document.
- Installation and use under improper environmental or electrical conditions.
- Unauthorized modifications to the product or software.
- ECC-B damage was caused during transportation by the customer.
- Storage conditions that do not meet the requirements specified in this document.
- Installation and commissioning are operated by unauthorized personnel who are not licensed and /or do not satisfy state and local jurisdiction regulations.

Safety

• Save these important safety instructions. Failure to do so may result in damage to the ECC-B and injury.



- Install and operate the device under the provided instructions.
- This equipment complies with FCC radiation exposure limits set forth for an uncontr olled environment.
- This equipment should be installed and operated with a minimum distance of 20cm between the equipment & your body.
- End-users and installers must be provided with antenna installation instructions and equipment operating conditions for satisfying RF exposure compliance.

CAUTION!

- Before installation, ensure all power to the device has been cut off.
- Do not dismantle or scrap by force.
- Strictly follow the installation guide to connect cables, and the enclosure must be well locked before the device is electrified.
- Unauthorized opening and cable connection will void the warranty and cause lethal danger or serious injury due to electric shock.
- Refer to the corresponding installation guide for related safety requirements when it is connected to other devices.
- Anti-static measures should be taken to decrease the damage of static electricity to electronic components.
- Keep away from flammable, explosive materials.
- All the product labels and nameplates on the device shall be visible.
- Hereby, SolaX Power Network Technology (Zhejiang) Co., Ltd. declares that Energy Control Center with model ECC-B supports the WIFI function.
- It conforms with the relevant union harmonization legislation: Radio Equipment Directive: 2014/53/EU.
- The full text of the EU declaration of conformity is available at the following internet address: www.solaxpower.com

• For CE: 2.4 G WIFI: 2412~2472MHz

• For FCC: 2.4 G WIFI: 2412~2462MHz

FCC

FCC RULES

This equipment complies with FCC radiation exposure limits set forth for an uncontroll ed environment. This equipment should be installed and operated with a minimum dist ance of 20cm between the radiator & your body. This device complies with part 15 of t he FCC Rules. Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference, and
- 2. This device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, under part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used under the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CE DECLARATION OF COMFORMITY

- Hereby, [SolaX Power Network Technology (Zhejiang) Co., Ltd.] declares that [Ener gy Control Center Basic Version with model ECC-B] supports the WIFI function. It c onforms with the relevant union harmonization legislation: Radio Equipment Directiv e: 2014/53/EU. The full text of the EU declaration of conformity is available at the fol lowing internet address: http://www.solaxpower.com/
- WIFI EIRP: 802.11b/g/n: 17.05 dBm

ECC-B System

ECC-B System Description

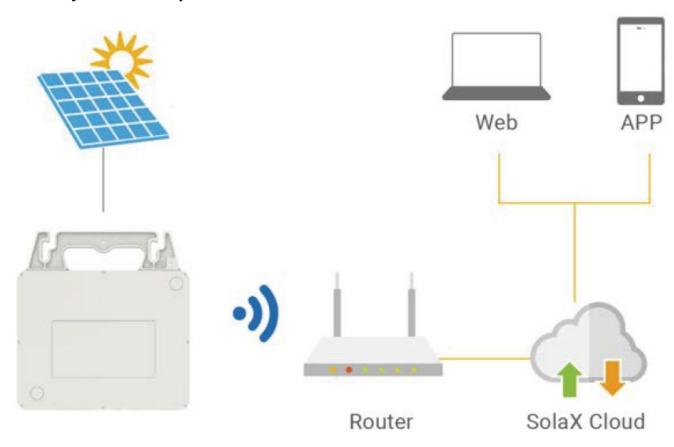


Figure 2-1 System overview diagram

ECC-B (energy control center)

- ECC-B is a crucial component in this ECC-B system, functioning as a communication gateway.
- It gathers the operation data of the system and uploads the data to SolaXCloud,

establishing a foundation for data monitoring and remote operation.

Microinverter

- Currently, we have developed A1-Micro 1 in 1, X1-Micro 2 in 1, and X1-Micro 4 in 1 series. 2 in 1 and 4 in 1 apply to the WiFi version, and 1 in 1 applies to the PLC version.
- For 2 in 1 and 4 in 1, the ECC-B only needs to be connected to the meter. For 1 in 1, ECC-B connects to ECC-PLC and matches to the whole system for use.

PV module A

- PV Module is an assembly of photovoltaic cells, also known as solar cells. To achieve
 a required voltage and current, a group of PV modules is wired into a large array
 called a PV array.
- A PV module is the essential component of any PV system that converts sunlight directly into direct current electricity.

Grid

• 220V / 230V/ 240V grid are supported.

SolaXCloud

- SolaXCloud is an intelligent, multifunctional monitoring platform that can be accessed either remotely or through a hard-wired connection. With the SolaX
- Cloud, the operators and installers can always view key and up-to-date data and set it remotely.
- You can log in to your user account at any time through a personal computer, IOS or Android device to view real-time monitoring data or historical data, and perform remote settings as needed.

Highlights

- Load consumption monitoring
- Flexible networking with Wi-Fi and Ethernet

- 5V USB port available
- Internal relay available to control external devices
- Support seamless communication with peripherals through RS485 and Ethernet
- Support remote operation and maintenance

Appearance

Overview

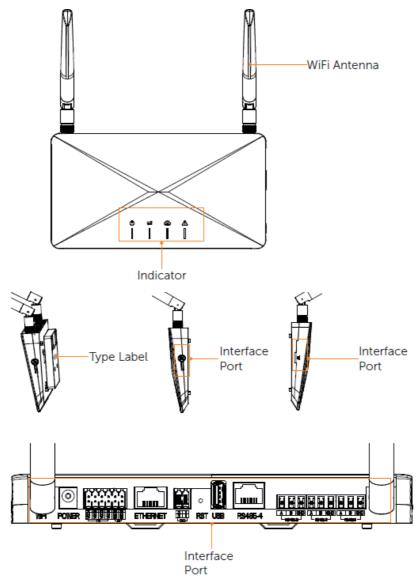


Figure 2-2 Apprearance

Table 2-1 Description of appearance

Item	Description
WiFi Atenna	To receive and transmit a 4G signal.

Indicator	Show the status of the device.
Type label	The type label identifies the device type, serial number, speci fic DC/AC parameters, certification, etc.
Interface port	The interface port is used for communication connection (like WiFi), power connection, grid connection, and other functions .

Dimensions

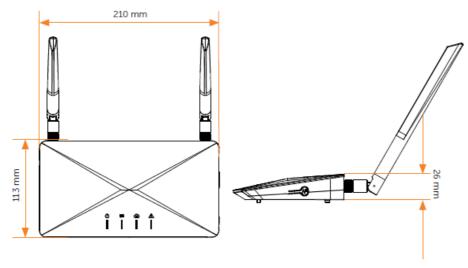


Figure 2-3 Dimensions

Symbols on the Label and ECC-B

Table 2-2 Description of symbols

Symbol	Description
C€	CE mark. The ECC-B complies with the requirementsof the applicable CE guidelines.
F©	FCC mark of conformity.
c € ® US	CSA mark for UL1973



Read the enclosed documentations



Do not dispose of the ECC-B together with household waste.

Interface Description

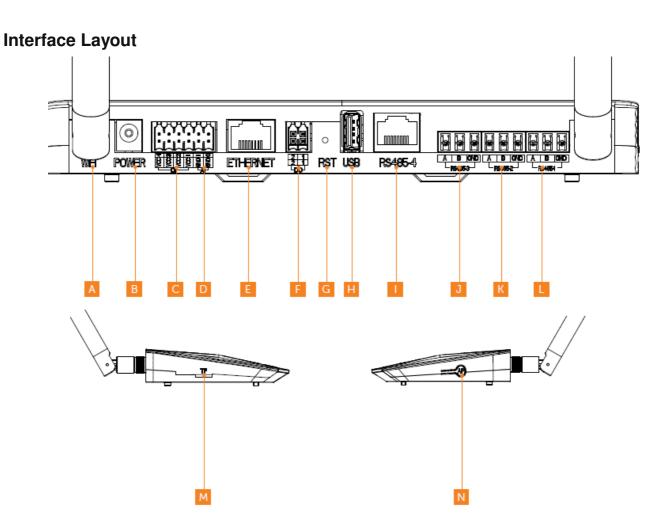


Table 3-3 Interface description


Number	Item	Description
Α	Wi-Fi antenna	1 string for connecting to the router
В	Power	Output voltage: 11.4 ~ 12.6 V
		Power supply adapter with round tip
С	DI	4 strings for DRM, including DRM0/5/6/7/8, which respond according to grid-connection needs
D	Al	2 strings
Е	Ethernet	10/100M network port for connecting to the router
F	DO port	2 active DO strings for dry contact and an adapter box
G	RST	Long press to restart ECC-B

Number	Item	Description
Н	USB port	1-string standard USB for local upgrade
1	RS485 port-4	For use with the adapter box
J	RS485 port-3	For communication with the energy storage system
K	RS485 port-2	For Modbus to be connected with third-party hosts
L	RS485 port-1	For communicating with the ECC-PLC and the wired mete
М	TF card slot	Supported maximum capacity: 64 GB for TF card installati on to realize data storage
N	AP button	To activate the hotspot of ECC-B, long-press for 10 secon ds to clear the networking information

Terminal Use


Wi-Fi antenna

• There are 2 methods of connecting ECC-B to the router. The WiFi antenna is the first method of connection between ECC-B and the router in a wireless way.

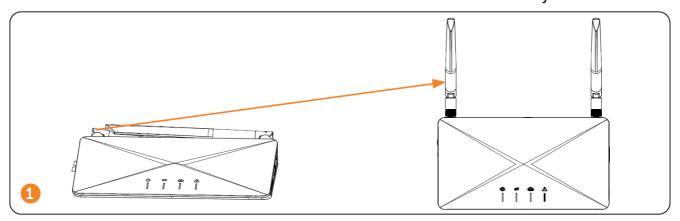


Power

 \bullet Plug in the power adapter to power on or off ECC-B. The output voltage is 11.4 $^{\sim}$ 12.6 V.

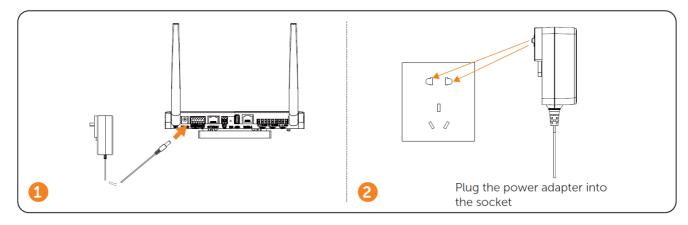


DI

• There are 4 strings of DI ports for DRM, including DRM0/5/6/7/8, which respond according to grid-connection needs

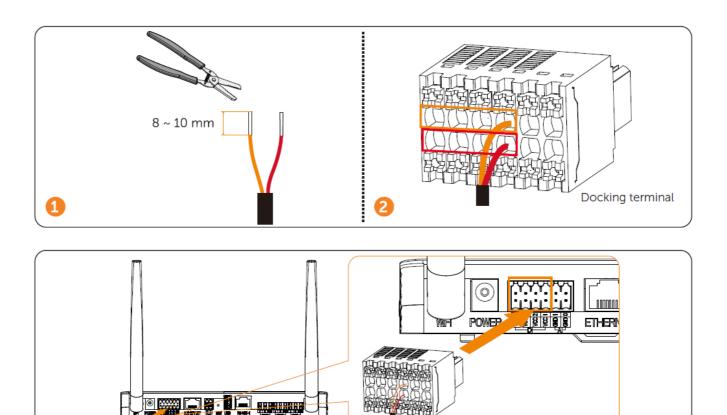


ΑI


• There are 2 strings of AI ports.

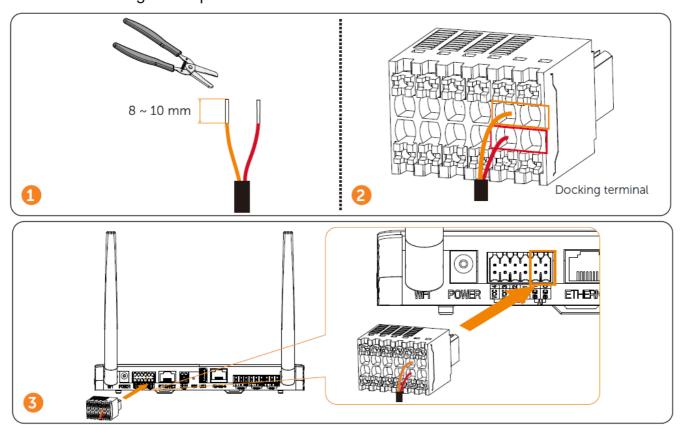

Ethernet


- There are 2 methods of connecting ECC-B to the router. Ethernet is the second method of connection between ECC-B and the router in a wired way.
- For stable communication between ECC-B and the router, an Ethernet cable connection is recommended.

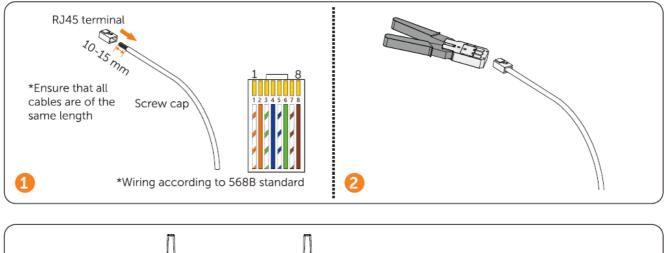


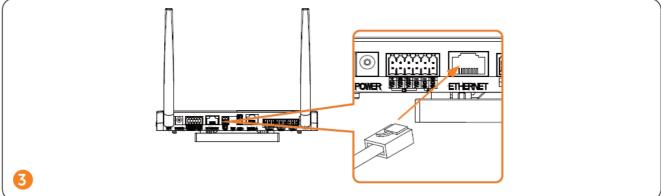

DO port


• There are 2 strings of active DO ports (12 V) used for dry contact and the adapter box

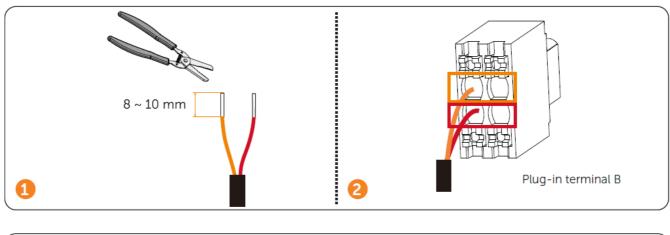

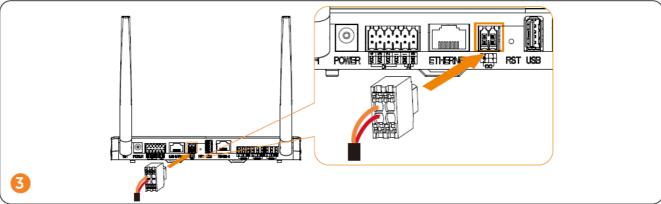


RST

• RST stands for the restart button. Long-press the button to restart the system.

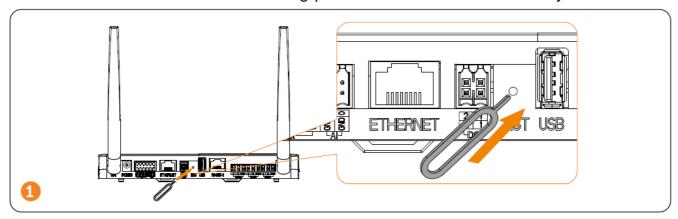


USB portThe


• USB port is designed for local upgrade. There is only 1 string of standard USB.

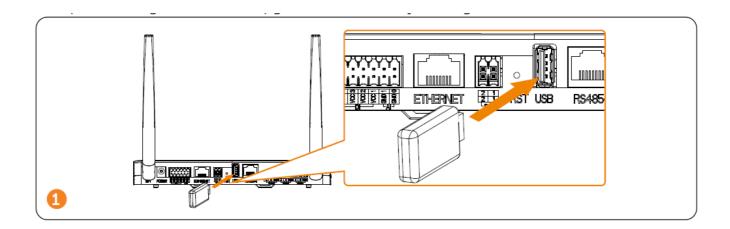

RS485 port-4

 There are 4 strings of RS485. RS-485 port 4 is used withan adapter box for communication.

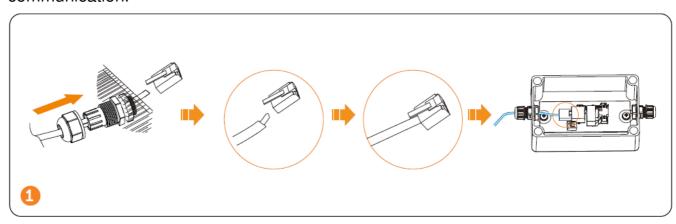


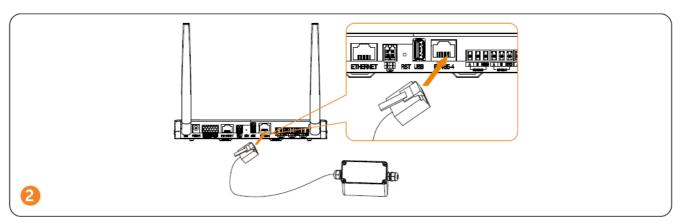


• **NOTICE:** For adapter box installation, please refer to the Quick Installation Guide or User Manual of the Adapter Box.


RS485 port-3

• There are 4 strings of RS485. RS485 port-3 is used for AC-coupling communication with the energy storage system.

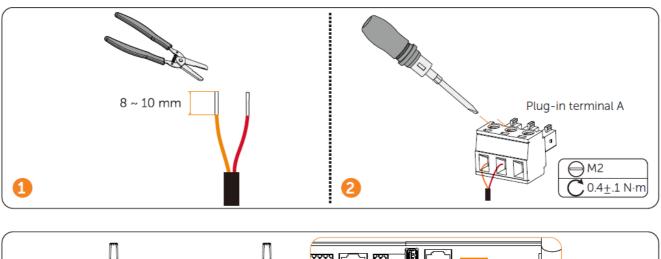


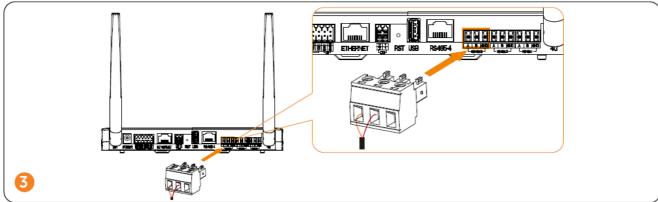


- **NOTICE:** To increase the communication performance, we recommend using shielded twisted pairs (STP).
- If you choose to use STP, please strip the wire and twist it, and then connect it to the GND port of the plug-in terminal A (as shown below).

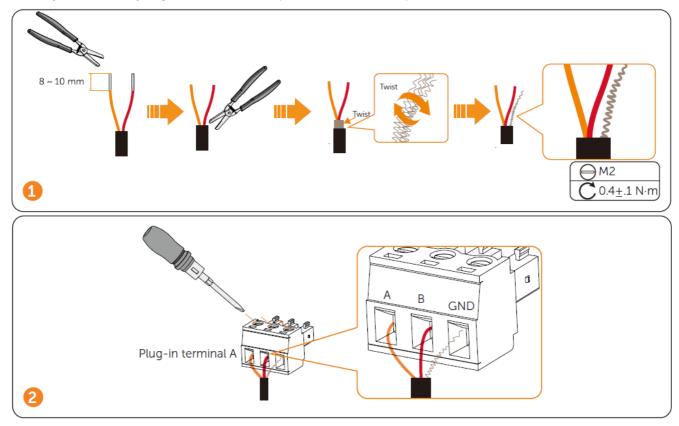



• There are 4 strings of RS485.RS485 port-2 is used for modbus communication with the third-party host (to measure wind speed, temperature, and radiation strength).

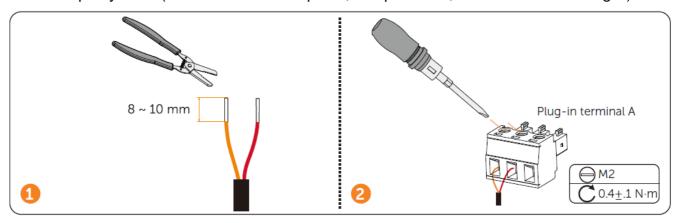

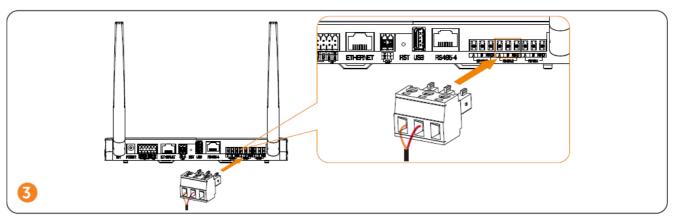


- NOTICE: To increase the communication performance, we recommend using shielded twisted pairs (STP).
- If you choose to use STP, please strip the wire and twist it, and then connect it to the GND port of the plug-in terminal A (as shown below).

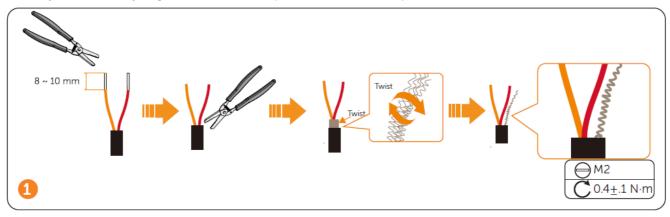

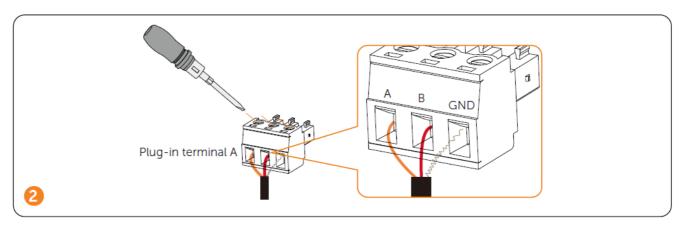



RS485 port-1

• There are 4 strings of RS485. RS485 port-1 is used with wired meters and to communicate with the ECC-PLC and the wired meter.

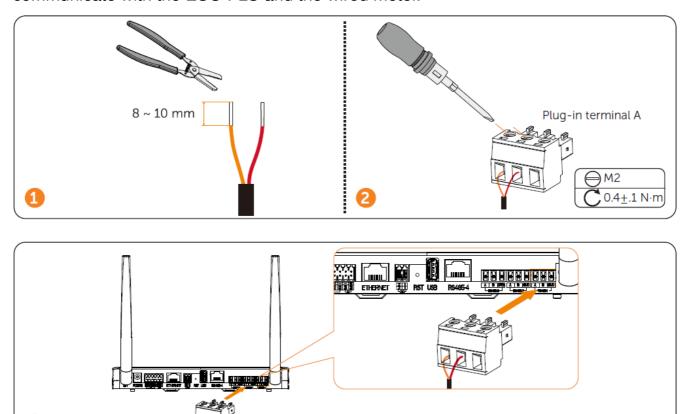


• **NOTICE:** To increase the communication performance, we recommend using shielded twisted pairs (STP). If you choose to use STP, please strip the wire and twist it, and then connect it to the GND port of the plug-in terminal A (as shown below).

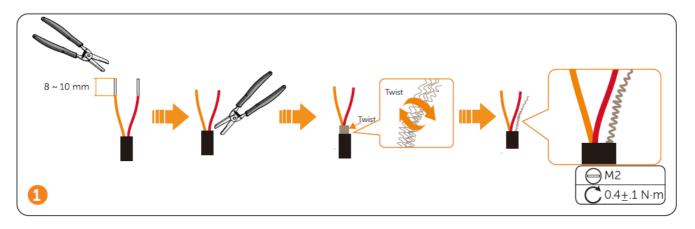

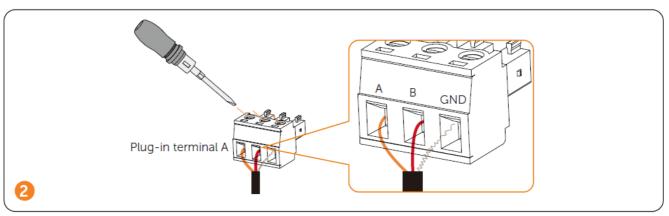


- **NOTICE:** To connect to the meter, we recommend a wire diameter ranging from 0.5-1.5 mm2, and the wire length depends on the actual installation conditions.
- For meter installation, please refer to the Quick Installation Guide or User Manual of the Meter.
- ECC-B meter X1-Micro 2 in 1/4 in 1

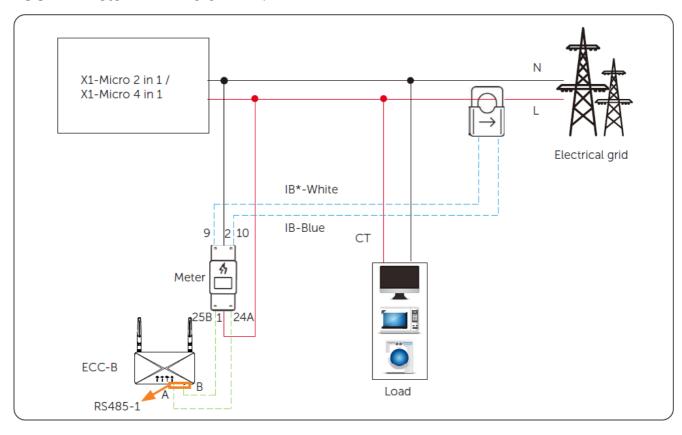


TF card slotThe

• TF card slot is applied for TF card installation, thereby achieving data storage.

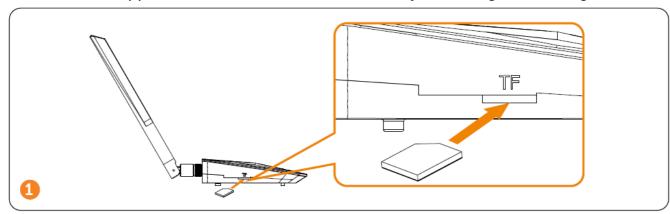

AP button

- AP is a networking button. Click the button, and the hotspot will be activated for 1 hour, and the hotspot will be turned off by default after 1 hour.
- Click the button again to turn it on; long-press for 10 seconds to clear the networking information.

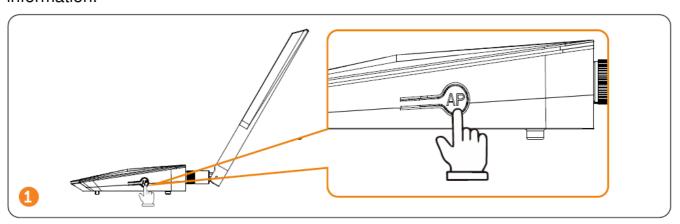

Installation Preparation

Unpacking

- The ECC-B undergoes 100% testing and inspection before shipping from the manufacturing facility. However, transport damage may still occur.
- Before unpacking the ECC-B, please verify that the model and outer packing materials are not damaged, such as holes and cracks.
- Unpacking the ECC-B according to the following figure.

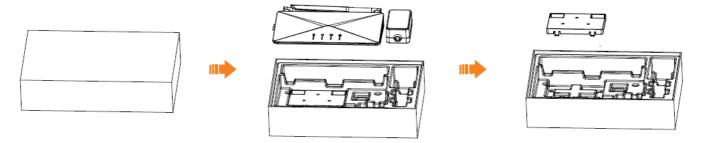


Figure 4-1 Unpacking the ECC-B

- Be careful when dealing with all package materials, which may be reused for storage and relocation of the ECC-B in the future.
- Upon opening the package, check whether the appearance of the ECC-B is damaged or lack of accessories. If any damage is found or any parts are missing, contact your dealer immediately.

Packing List

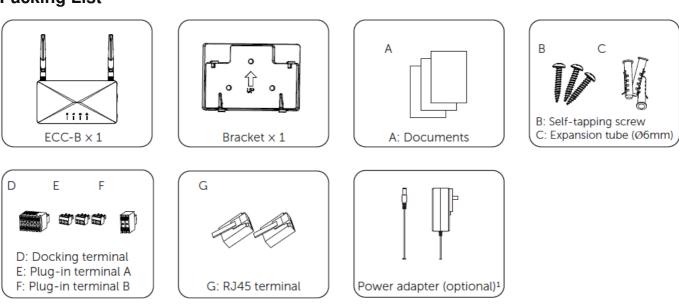


Table 4-4 Packing list

Item No.	Items	Quantity
/	ECC-B	1 pc
/	Bracket	1 pc
Α	Documents	1
В	Self-tapping screw	3 pcs

С	Expansion tube	3 pcs
D	Docking terminal	1 pc
E	Plug-in terminal A	3 pcs
F	Plug-in terminal B	1 pc
G	RJ45 terminal	2 pcs
/	Power adapter (optional)	1 pc

- 1. **Note:** 1. Select the power adapter according to the socket in the installation site.
 - The length of power adapter wire is 1.2 m. If the wire length doesn't meet the
 installation requirement, please use an appropriate power strip or choose an
 installation site near the socket.
- 2. Refer to the actual delivery for the optional accessories.

Selection of Installation Location

- The installation location selected for the ECC-B is quite critical in the aspect of the guarantee of machine safety, service life, and performance.
- It has the IP20 ingress protection, which allows it to be installed outdoors.
- The installation position shall be convenient for wiring connections, operation, and maintenance.

Environment Requirement

- The ambient temperature: -20°C to +60°C;
- The humidity shall be between 5%-95%.
- Do not install the ECC-B in areas where the altitude exceeds 2000 m.
- Install the ECC-B in a well-ventilated environment for heat dissipation.
- Do not install the ECC-B in areas with flammable, explosive, and corrosive materials;
- Do not install the ECC-B in areas near combustibles and antennas.

STATEMENT

Copyright

- Copyright © SolaX Power Network Technology (Zhejiang) Co., Ltd. All rights reserved.
- No part of this manual may be reproduced, transmitted, transcribed, stored in a
 retrieval system, or translated into any language or computer language, in any form or
 by any means without the prior written permission of SolaX Power Network
 Technology (Zhejiang) Co., Ltd.

Trademarks

- solax and other symbols or designs (brand name, logo) that distinguish the products or services offered by SolaX have been trademarked and protected.
- Any unauthorized use of above above-stated trademark may infringe the trademark right.

Notice

- All or part(s) of the products, features, and services described in this document may not be within your scope of purchase or usage.
- Unless otherwise specified in the contract, the contents, information, and recommendations in this document are provided as is; SolaX makes no kind of warranties, guarantees, or representations expressly or implicitly.
- The content of the documents is continually reviewed and amended, where necessary.
- However, discrepancies cannot be excluded. SolaX reserves the right to make improvements or changes in the product(s) and the program(s) described in this manual at any time without prior notice.
- The images contained in this document are for illustrative purposes only and may vary depending on product models.
- Please visit the website <u>www.solaxpower.com</u> of SolaX Power Network Technology (Zhejiang) Co., Ltd. for more information.
- SolaX reserves all the rights for the final explanation.
- www.solaxpower.com
- eManual in the QR code or at http://kb.solaxpower.com/



FAQ

- Q: What should I do if I encounter an error during commissioning?
 - **A:** If you encounter an error during commissioning, refer to the troubleshooting section of the user manual for guidance on resolving common issues.

Documents / Resources



SOLAX POWER Gateway ECC-B Energy Management Device [pdf] User

Manual

ECC-B, 2AMEH-ECC-B, 2AMEHECCB, Gateway ECC-B Energy Manage ment Device, Gateway ECC-B, Energy Management Device, Management Device

References

- Advanced Energy Storage Solutions | Home Battery Backup | SolaX Power USA
- Advanced Energy Storage Solutions | Home Battery Backup | SolaX Power USA
- User Manual

◆ 2AMEH-ECC-B, 2AMEHECCB, ECC-B, Energy Management Device, Gateway ECC-B, Gateway ECC-B Energy Management Device, Management Device, SOLAX POWER

—Previous Post

SolaX Power X1-Micro Single Phase Inverter User Guide

Next Post—

SOLAX POWER 2AMEH-ECC-B-2AMEHECCB Energy Control Center User Manual

Leave a comment

Your email address will not be published. Required fields are marked*
Comment *
Name
Email
Website
☐ Save my name, email, and website in this browser for the next time I comment.
Post Comment
Search:
e.g. whirlpool wrf535swhz

Manuals+ | Upload | Deep Search | Privacy Policy | @manuals.plus | YouTube

are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.