



SolidGoldFX FX 76 MKII Octave Fuzz User Guide

[Home](#) » [SolidGoldFX](#) » SolidGoldFX FX 76 MKII Octave Fuzz User Guide 



76 MKII OCTAVE FUZZ USER GUIDE

Contents

- [1 What is the 76 Fuzz?](#)
- [2 What does this do?](#)
- [3 Warranty Information](#)
- [4 Documents / Resources](#)
 - [4.1 References](#)
- [5 Related Posts](#)

What is the 76 Fuzz?

While the Western world was preoccupied with its smooth and soulful Fuzz Faces and Muffs, the Orient was bubbling up with gnarly fuzzes heavily imparted with Godzilla DNA. This very distinct era in fuzz history gave us many treasures that have been crowned fuzz legends—the Univox Super Fuzz, Ibanez Standard Fuzz, Ace Tone Fuzz Master, Shin-Ei Companion and several others.

Our 76 offers up a comprehensive guided tour to the best that the Standard Fuzz and its ilk has to offer without any of the drawbacks. On its face, the 76 gives you a multi-voiced fuzz unit that offers loads of octave-up snarl and clang while it ruthlessly pummels your amp with hair and fangs.

Armed with a JFET input and built around a specific set of Toshiba transistors, the 76's dual Texture and Color tone controls allow you to precisely sculpt your fuzz while the octave switch allows you to dial back the octaves and overtones for a smoother finish. Topped off with silent, soft touch true bypass switching and top jacks, the 76 is everything you need if you're looking for a musical yet powerful fuzz capable of leveling Tokyo!

What does this do?

Level: Allows you to boost or cut your volume level.

Fuzz: Turning the Fuzz up ranges from a little crunch to more gain than you could ever want.

Texture: This control adjusts the mid frequency of the 76. Go from a deep scoop to a mid-drenched grind with a simple twist.

Color: This controls a mild Low Pass Filter on the output of the fuzz to round off some highs and further sculpt the tone. Turn it CCW for darker tones and CW for brighter ones.

Octave Switch: Toggle this switch down for octaves and overtones or up for more conventional fuzztones.

True Bypass Switch: Allows you to engage or bypass the effect.

9V DC Input: This pedal uses a negative ground, 9-18VDC power supply with a 2.1mm barrel plug and negative center. Current draw is less than 10mA.

IMPORTANT: USE OF AN IMPROPER POWER SUPPLY WILL VOID WARRANTY


Warranty Information

All SolidGoldFX products purchased through the solidgoldfx.com website or our authorized dealers come with a three-year warranty against failure resulting from defective parts and/or faulty workmanship. Cosmetic flaws or issues related to wear and tear are not covered.

The warranty applies only to the original owner of the product and is not transferable. Warranty coverage terminates three years after the owner receives the product. While a product is under warranty, the product will be repaired free of charge. The owner of the product will be responsible for both shipping to and from SolidGoldFX. Warranty coverage will be automatically cancelled should the product be tampered with, modified, abused, damaged through misuse, repaired by an unauthorized third party, or damaged through failure to follow the operating instructions. Use of an improper power supply will void warranty.

www.solidgoldfx.com – info@solidgoldfx.com

Documents / Resources

	SolidGoldFX FX 76 MKII Octave Fuzz [pdf] User Guide FX 76 MKII Octave Fuzz, FX 76 MKII, Octave Fuzz
---	--

References

-  [SolidGoldFX](#)
-  [SolidGoldFX](#)