



Solidremote L-keychain-1 Replacement Remote for Security+ Family User Manual

[Home](#) » [Solidremote](#) » Solidremote L-keychain-1 Replacement Remote for Security+ Family User Manual 

 
Solidremote L-keychain-1 Replacement Remote for Security+ Family




Contents

- [1 Programming Instructions for Garage Door Opener](#)
- [2 HOW TO ERASE ALL CODES FROM MEMORY](#)
- [3 Change Button's Working Mode on Remote](#)
- [4 Battery](#)
- [5 Documents / Resources](#)
- [6 Related Posts](#)

Programming Instructions for Garage Door Opener

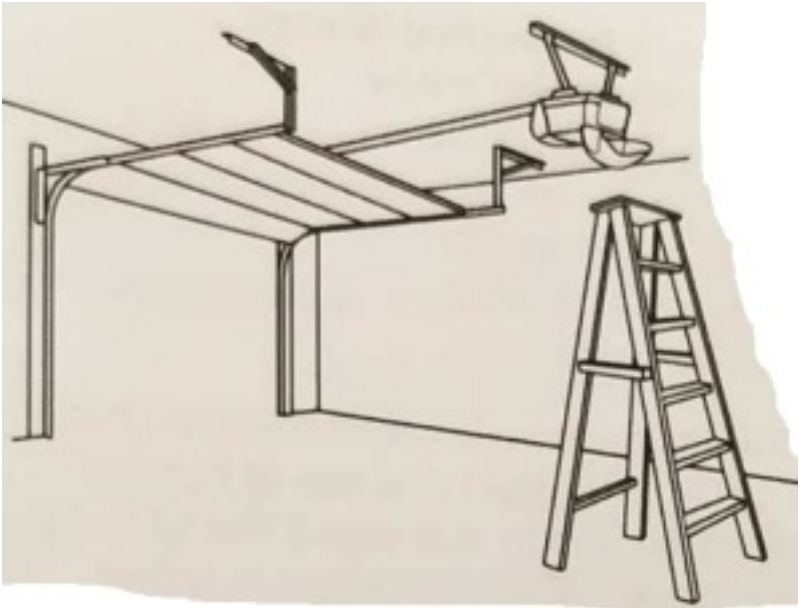

 1. Locate the Smart / Learn button on your garage door opener (you will need a ladder).
2. Press and release the learn button on the motor unit. The learn indicator will glow steadily for 30s.
3. Within 30 seconds, press and hold the button you wish to use on hand-held remote.

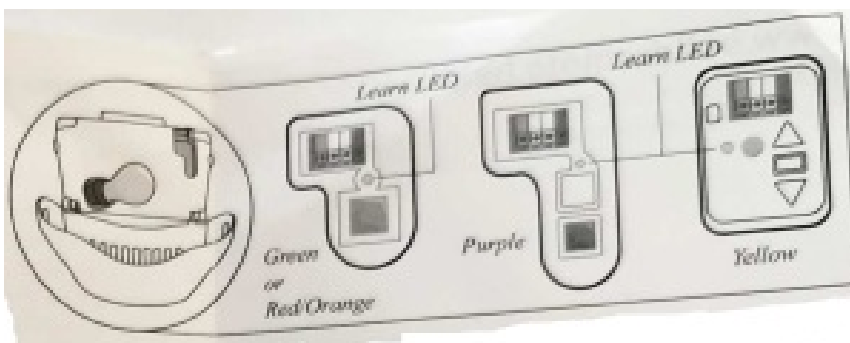

4. Release remote control button when the motor unit light blinks OR two clicks are heard.
5. Your remote is successfully programmed.

HOW TO ERASE ALL CODES FROM MEMORY

Press and hold the learn button on the motor unit for 6 seconds until the learn indicator light turns off.

Note: Use when programming failed due to full memory or you have accidentally programmed unwanted buttons. After erasing, you will need to program all remotes again.

Change Button's Working Mode on Remote

Mode 1 – works with Purple/ Red/ Orange

Mode 2 – works with Green/ Yellow

Important Note: Some learn button color may NOT be supported by your remote. Refer to product listing description for actual compatibility info. **Buttons A+B** are the two buttons with hatching lines illustration on manual cover page.

1. Press and hold buttons A+B simultaneously for 3 seconds until LED blinks, then release all buttons.
2. Press and hold the button you would like to change working mode, LED will change to either **SOLID (Mode 1)** or **FLASHING (Mode 2)**.
3. Release the button (which just changed to new working mode), try program it again with opener .



 
 
LED always flashes in step 2 above?

Please change battery follow steps.

 
Battery

The LED on your remote will turn dim and show rapid flashes when the battery is low and needs to be replaced. To replace battery, open the case as shown below. Remove circuit board if necessary. Slide old battery out of holder, and replace it with only 3V CR2032 coin cell batteries.

Use #0 Philips screwdriver to remove all 3 screws on bottom cover.

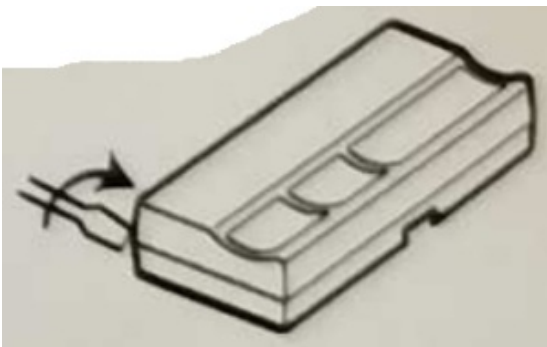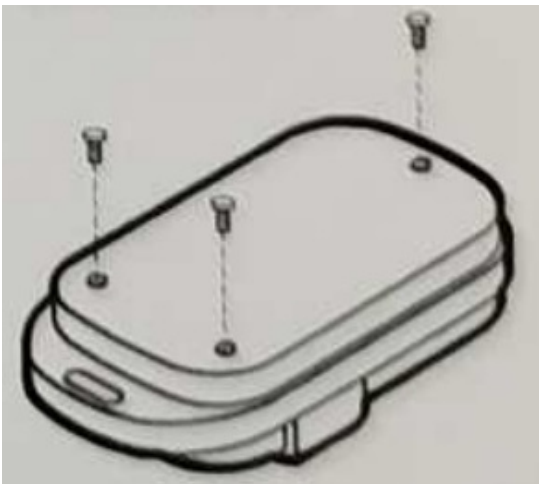

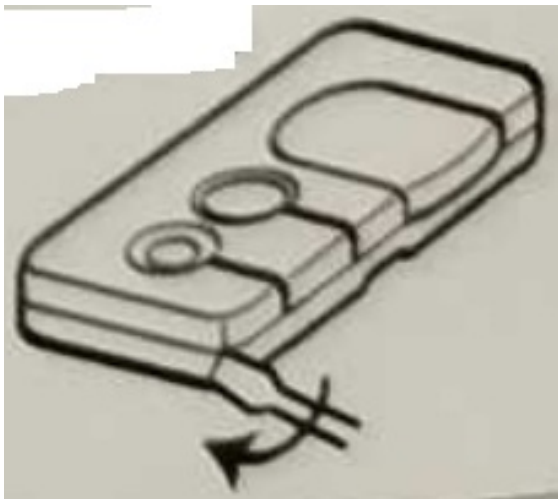

Use flat-head screwdriver blade to pry open case.



www.solidremote.help

Documents / Resources

	<p>Solidremote L-keychain-1 Replacement Remote for Security+ Family [pdf] User Manual L-visor-1, L-visor-2, L-keychain-1, Replacement Remote for Security Family</p>
	<p>SOLIDREMOTE L-Keychain-1 Replacement Remote For Security [pdf] Installation Guide G4, 2AYZ7-G4, 2AYZ7G4, L-Keychain-1 Replacement Remote For Security, Replacement Remote For Security</p>