

**SOLIGHT**  
**WO8018 LED**  
**Lighting with**  
**Remote Control**



# SOLIGHT WO8018 LED Lighting with Remote Control Instructions

[Home](#) » [Solight](#) » SOLIGHT WO8018 LED Lighting with Remote Control Instructions 

## Contents

- 1 SOLIGHT WO8018 LED Lighting with Remote Control
- 2 Product Information
- 3 Introduction
- 4 TECHNICAL PARAMETERS
- 5 INSTALLATION
- 6 REMOTE CONTROL
- 7 CONTACT
- 8 FAQ
- 9 Documents / Resources
  - 9.1 References
- 10 Related Posts



**SOLIGHT WO8018 LED Lighting with Remote Control**



## Product Information

- Switch off the power supply before installation.
- Insert dowels into pre-drilled holes.
- Remove the rear of the luminaire and thread the supply cable through the hole.
- Drill the back of the luminaire.
- Connect the supply cable to the terminal block ensuring correct connection.
- Attach the front of the luminaire to the rear by rotating it.
- Switch on the power supply.
- The luminaire has a memory function that retains the last-used mode.
- This applies to both wall switch and remote control operations.

**Note:** The light source in this luminaire is non-replaceable. When it reaches the end of its service life, the entire luminaire must be replaced and disposed of properly.

## CE Declaration of Conformity

- The product has a CE declaration of conformity in accordance with regulations. For more information, contact the manufacturer at [info@solight.cz](mailto:info@solight.cz) or visit [www.solight.cz/en](http://www.solight.cz/en).

## Introduction

- Dear customer, thank you for purchasing our product.
- Please read the following instructions carefully and follow them to serve you safely and to your full satisfaction.
- This will prevent misuse or damage.
- Avoid unprofessional handling of this appliance and always observe the electrical appliance usage guidelines.
- Do not hang or cover the luminaire with anything.

- Keep the instruction manual carefully. Installation must only be carried out by qualified personnel.

 
## TECHNICAL PARAMETERS

	WO8018	WO8019
<b>Voltage</b>	220-240V AC	220-240V AC
<b>Consumption</b>	36W for 4000K, 18W for 3000K, and 6500K	36W for 4000K, 18W for 3000K, and 6500 K
<b>Luminous flux</b>	2700lm for 4000K, 1400lm for 3000K and 6500K	2700lm for 4000K, 1400lm for 3000K and 6500K
<b>Chromaticity</b>	3000K – 6500K	3000K – 6500K
<b>Coverage</b>	IP20	IP20
<b>LED lifetime</b>	20.000 hours	20.000 hours
<b>Dimensions</b>	300 x 30 mm	300 x 30 mm
<b>Operating temperature</b>	-20°C to 50°C	-20°C to 50°C
<b>Color</b>	Black	White


## INSTALLATION

### Switch off the power supply before installation!

1. Insert the dowels into the pre-drilled holes.
2. Remove the rear of the luminaire by turning it and threading the supply cable through the hole in the rear of the luminaire.
3. Drill the back of the luminaire.
4. Connect the supply cable to the terminal block and make sure that the connection is correct.
5. Rotate to attach the front of the luminaire to the rear.
6. Switch on the power supply.

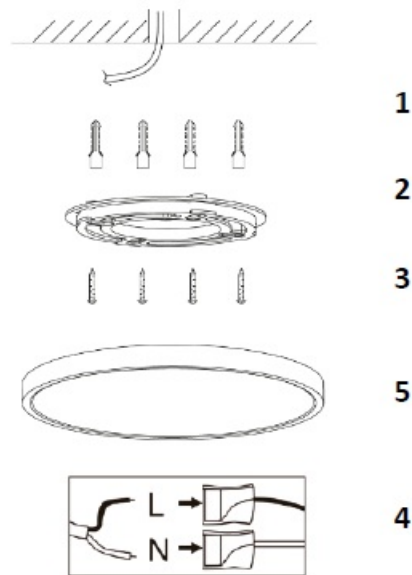

## REMOTE CONTROL

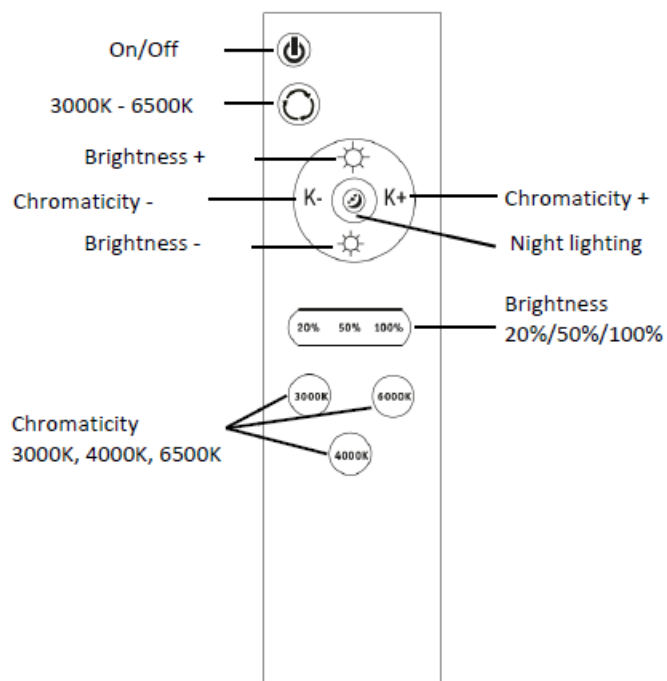 

## Memory function

1. If you turn on the light with the classic wall switch and leave it on for at least 30 seconds, then turn it off for at least another 30 seconds with the wall switch, the last used mode will be lit the next time you turn it on. The same time delays apply for setting the light mode with the remote control and then switching it off and on with the wall switch.
2. When switching the light on and off with the remote control, the light always remembers the last mode used, regardless of the time intervals between switching on and off.

The light source of this luminaire is non-replaceable, at the end of its service life the entire luminaire must be replaced and disposed of in a designated place. This product contains a light source that for design reasons cannot be removed for verification and therefore the entire product is considered a light source. The manufacturer is not liable for any damage caused by improper use.

The product has been issued with a CE declaration of conformity under the applicable regulations.

On request from the manufacturer: [info@solight.cz](mailto:info@solight.cz), or downloadable from [www.solight.cz/en](http://www.solight.cz/en).



 
## CONTACT

Solight Holding, s.r.o., Na Brně 1972, Hradec Králové 500 06, Czech Republic.

## FAQ

- **Q: Can the light source be replaced?**
- **A:** The light source in this luminaire is non-replaceable. When it reaches the end of its service life, the entire luminaire must be replaced.
- **Q: How do I reset the memory function?**
- **A:** To reset the memory function, turn off the light using the wall switch for at least 30 seconds after turning it on. The next time you turn it on, it will reset to default mode.

## Documents / Resources

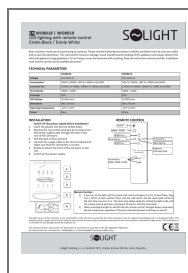

[SOLIGHT WO8018 LED Lighting with Remote Control](#) [pdf] Instructions  
WO8018, WO8018 LED Lighting with Remote Control, LED Lighting with Remote Control, Lighting with Remote Control, Remote Control

## References

- 🍷 [SOLIGHT.cz](http://SOLIGHT.cz) | Your B2B partner and wholesale for Lighting, Electrical, Smart Home, Measuring technology and other 1500+ products
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.