

[Skip to content](#)

Manuals+

User Manuals Simplified.



solis EN2-8M Data Logger LAN Stick User Guide

[Home](#) » [solis](#) » solis EN2-8M Data Logger LAN Stick User Guide

Contents [hide](#)

[1 solis EN2-8M Data Logger LAN Stick](#)

[2 Delivery Content](#)

[3 Introduction](#)

[4 Electrical Connection](#)

[5 LAN configuration](#)

[6 LAN configuration](#)

[7 Create Solis monitoring account](#)

[8 Create plant](#)

[9 Distributor/Installer creates plant](#)

[10 Link distributor/installer](#)

[11 Documents / Resources](#)

[12 Related Posts](#)

solis



 
solis EN2-8M Data Logger LAN Stick

Delivery Content

- 1 pc LAN Stick
- 1 pc Data Logger LAN Stick Quick User Guide

Introduction

Data Logger LAN Stick is mainly used in inverters to realize simple and quick access to Internet. Users can easily check device information by logging in the monitoring center. The communication topology is as shown below:

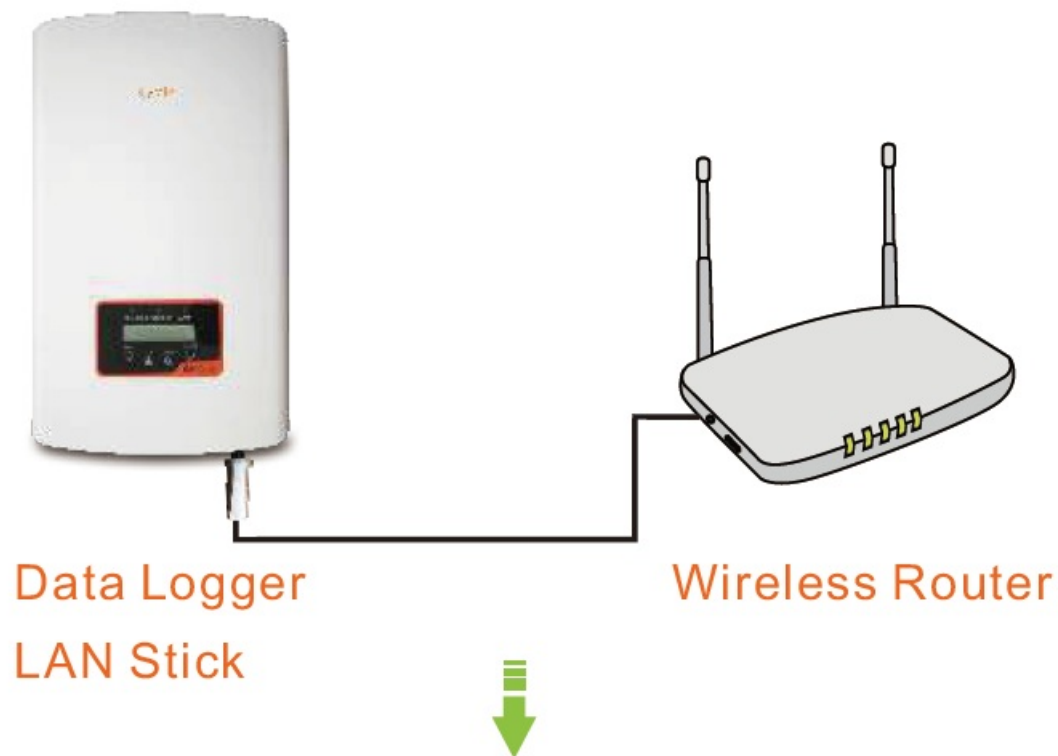


Description of Symbols

To ensure normal use of the datalogger, before using the datalogger, be sure that:

- The connected wireless router can normally access to Internet;
- The communication address of the inverter MUST BE "01", which is default value.
- A computer is connected to this device for parameter setting.

Electrical Connection

 Connect LAN Stick to the corresponding interface on the inverter. Solis-1P5K-4G is used as an example in this manual. Please perform relevant operations as indicated below:

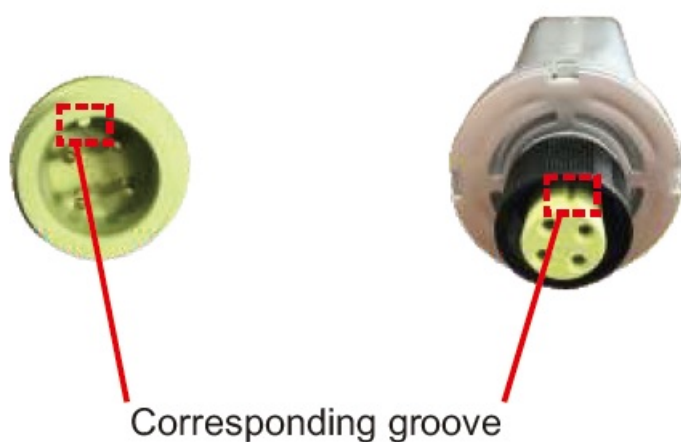


Corresponding groove

Data Logger LAN Stick Interface

Data Logger LAN Stick Installation

 - Insert LAN Stick to COM port.

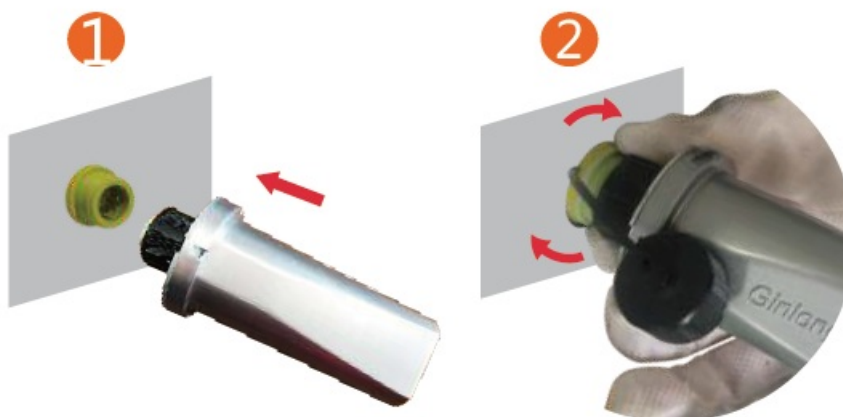

- Fasten the LAN Stick.

NOTES

LAN Stick automatically obtains IP by default. If the network cable supports automatically obtains IP, please jump to “ ” f3 or APP registration. 3 If network cable do not support obtains IP automatically , please continue to follow “ ” f2 or IP settings.

LAN configuration

- Step 1: Enter 169.254.173.207 in the web browser, open the following configuration interface. (If you can't open it, please skip to 3)
Enter username admin and password admin.



Sign in

http://169.254.173.207


Your connection to this site is not private

Username: admin

Password: *****

Sign in Cancel

- Step 2: Select the "Quick Set". Enter IP address Subnet mask Gateway address DNS server address for network cable. Then click the "Save". (Please enter 1 in the "Network name", otherwise it cannot be saved)

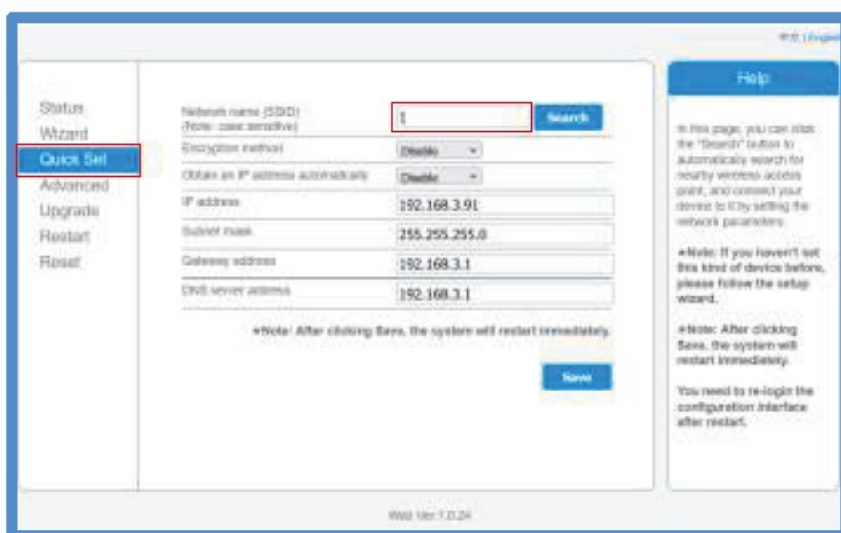

Quick Set

Network name (SSID) (Role: case sensitive): [1] Search

Encryption method: [Disable]

Obtain an IP address automatically: [Disable]

IP address: [192.168.3.91]

Subnet mask: [255.255.255.0]

Gateway address: [192.168.3.1]

DNS server address: [192.168.3.1]

Note: After clicking Save, the system will restart immediately.

Save

Help

In this page, you can click the "Search" button to automatically search for nearby wireless access point, and connect your device to it by setting the network parameters.


Note: If you haven't set this kind of device before, please follow the setup wizard.

Note: After clicking Save, the system will restart immediately.

You need to re-login the configuration interface after restart.

WMS Ver: 1.0.24

- Step 3: The following interface pops up to indicate that the setting is successful, please skip to 4. Otherwise

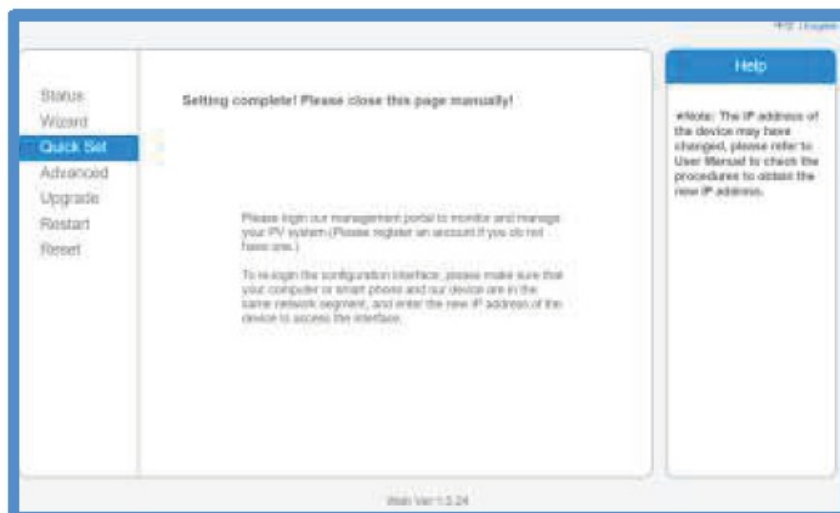

Setting complete! Please close this page manually!

Please login our management portal to monitor and manage your IPV system. (Please register an account if you do not have one.)

To re-login the configuration interface, please make sure that your computer or smart phone and our device are in the same network segment, and enter the new IP address of the device to access the interface.

Help

 
Note: The IP address of the device may have changed, please refer to User Manual to check the procedures to obtain the new IP address.

WMS Ver: 1.0.24


please try LAN configuration again.

LAN configuration


- Step 1: With a network cable to connect the computer and LAN Stick, right-click the computer icon in the lower right corner of the computer, enter the network and sharing center.

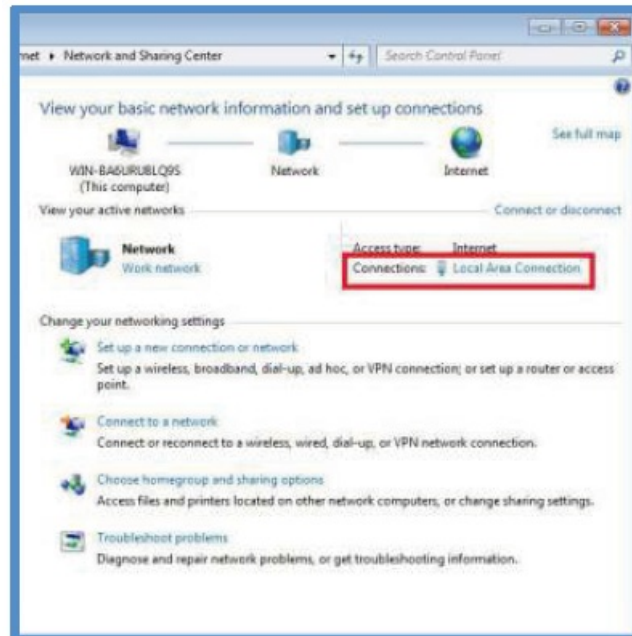

 
- Step 2: Select the local connection options.
- Step 3: Left double-click "Properties" into the "local connection status".

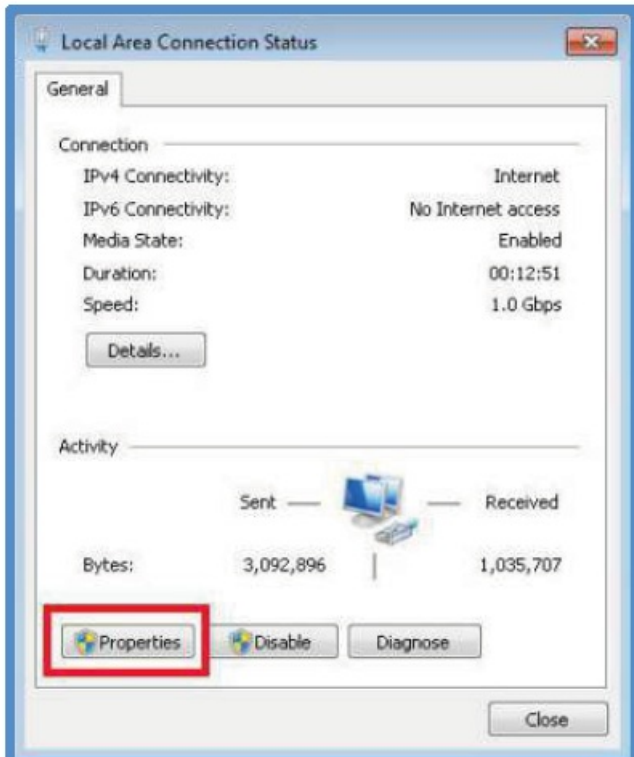

 
- Step 4: Left double-click: "Internet Protocol version 4 (TCP / Ipv4)".

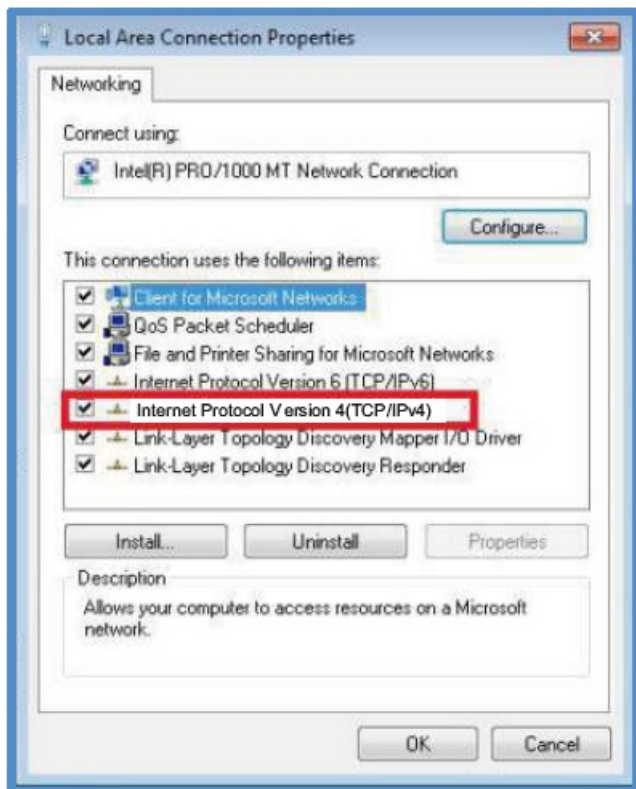

 - Step 5: While the computer's IP is configured as a static IP (as shown below).

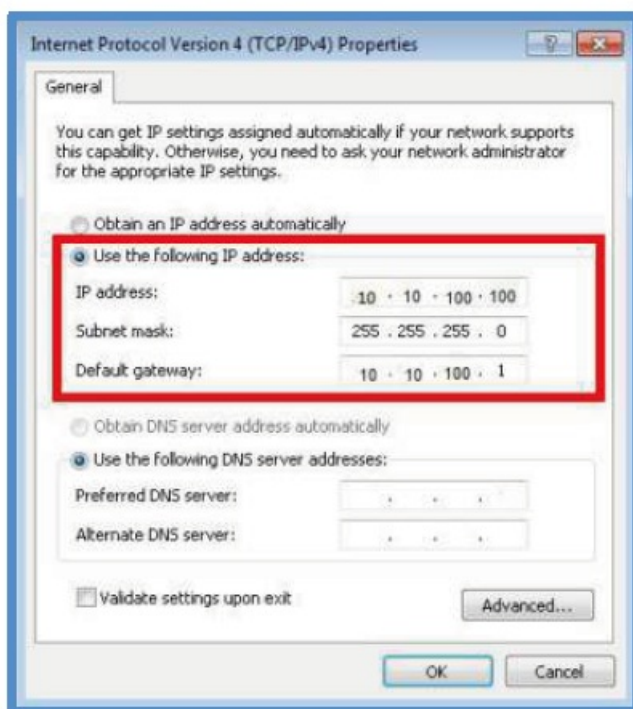

 
- Step 6: Enter 10.10.100.254 in the web browser, open the following configuration interface. Select the

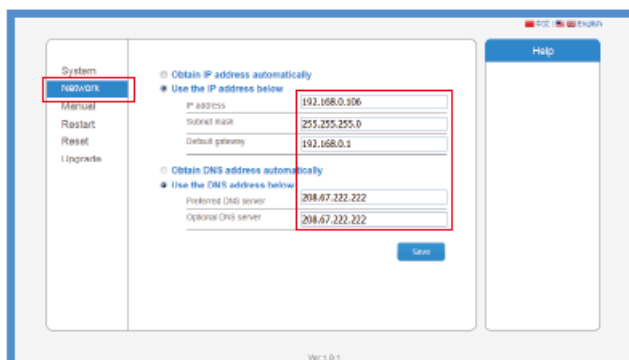

“Network”.

- Step 7: Enter IP address Subnet mask Default gateway Preferred DNS server and Optional DNS server for

 network cable. Then click the “Save” and “Restart” to restart the LAN Stick.

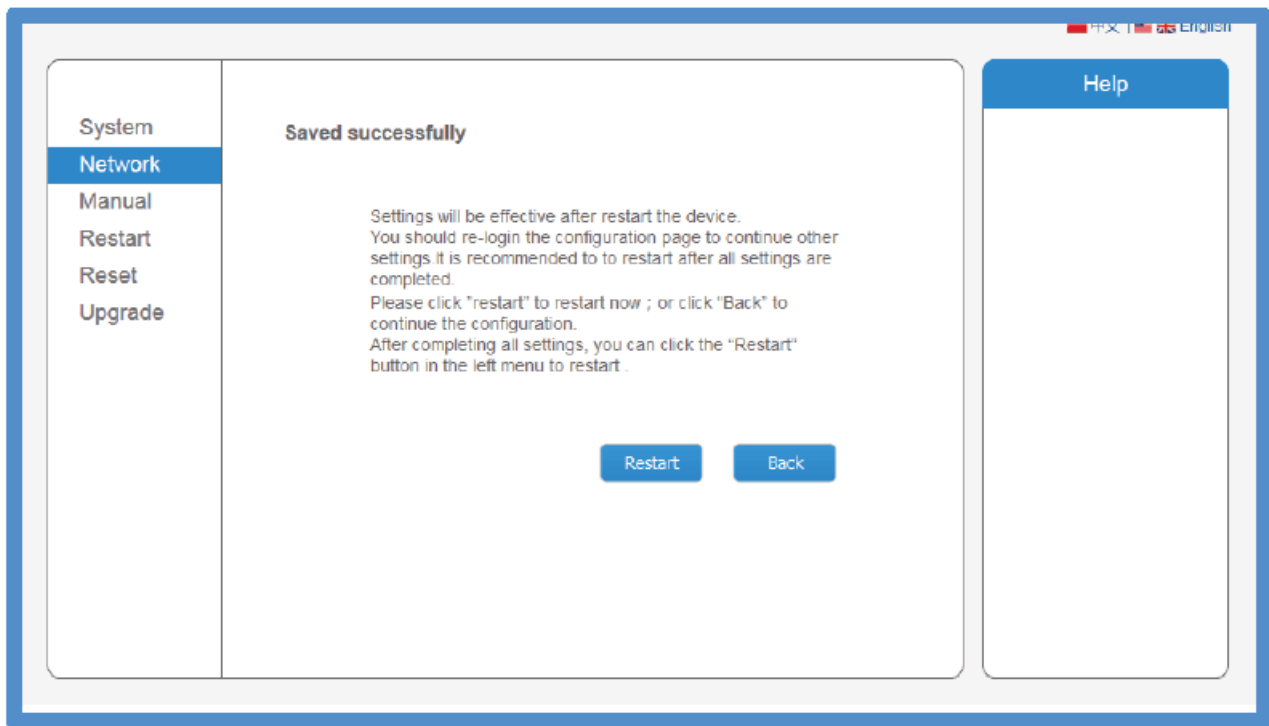


Create Solis monitoring account

- Step 1: Mobile phone scan the QR code to download the APP, or in the APP Store or Google Play search Solis



 
Home or Solis Pro.

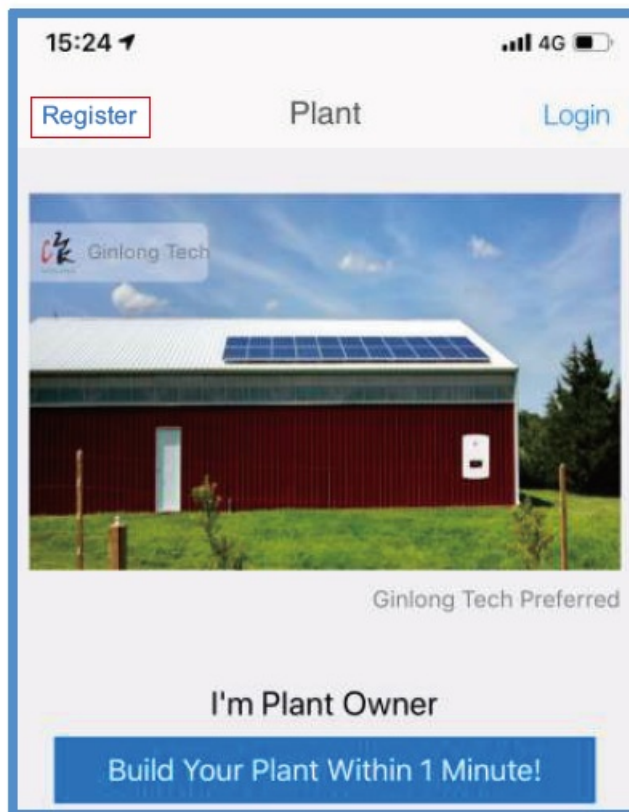

- Step 2: Click on the “Register”.
- Step 3: Fill in the form as required and click the “Register”.

Create plant

 - Step 1 In the APP homepage and click “Build Your Plant Within 1 Minute!” in the middle of the screen. Or click

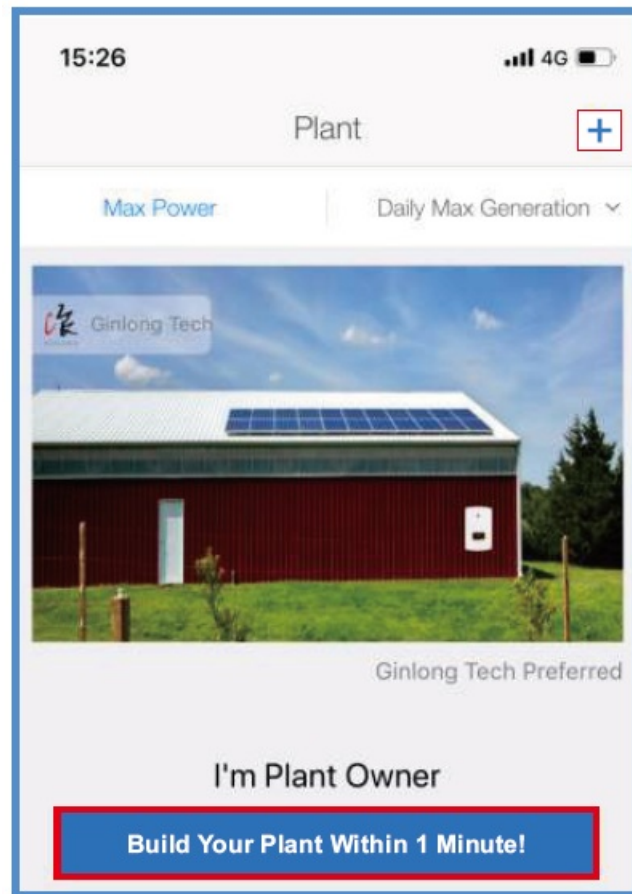

the “+” in the upper right corner.

- Step 2: Enter the SN of the datalogger. The datalogger SN can be automatically scanned by placing the purchased device bar code in the scan box. If you can't scan, you can also manually enter the datalogger SN



(just enter the digital serial number).

Note: Please scan the SN number on the datalogger, not the SN number on the inverter.

- Step 3: Enter the plant information. Then click the “Next”.
- Step 4: Enter the plant name and contact information of the plant owner. Then click the “Done”.

 
Distributor/Installer creates plant

In order to easy registration and easy manage, you can also let the distributor/installer register the plant, then Link it to you. Click the [] and tell the “ID” to your Distrubutor/installer to build the plant for you. (Note: your

Distrubutor/installer must have a Solis Pro account)


Link distributor/installer

- Step 1: In order to easy manage to your plant. Select the plant and enter Intro. Click the “installer” or

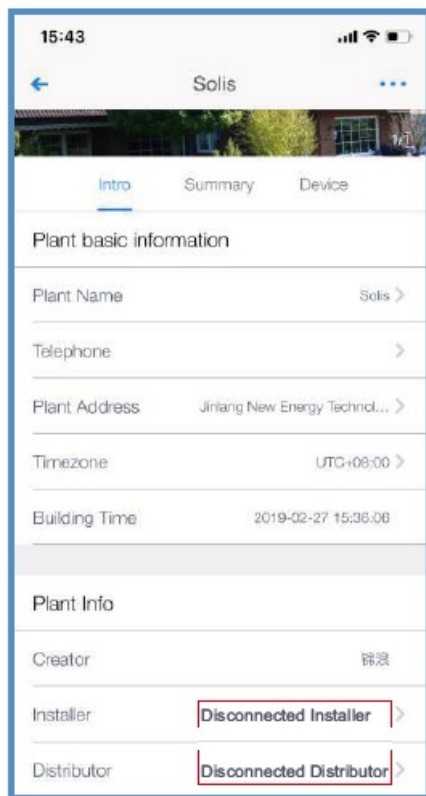


“distributor” .

 - Step 2: Enter the company name of the installer or distributor. Then click the “Search”.

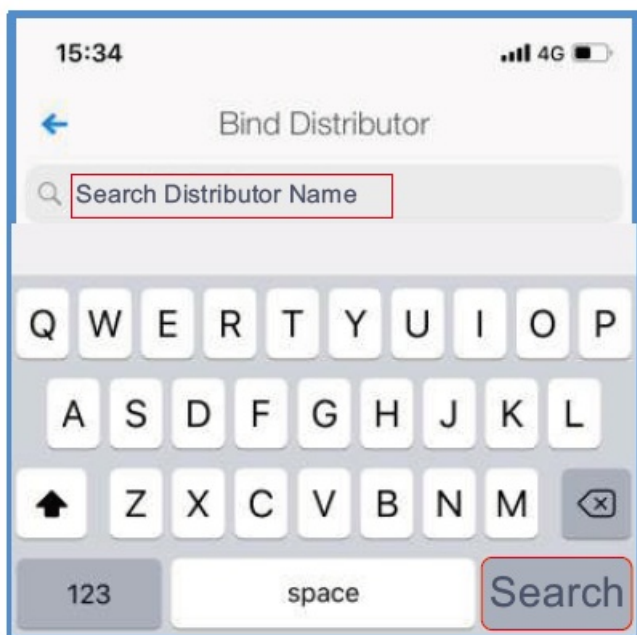

 - Step 3: Click the [Bind Distributor/Installer] and the plant will appear in your installer/distributor monitoring interface. (Note: your installer/distributor must have a Solis Pro account to appear in the search list)

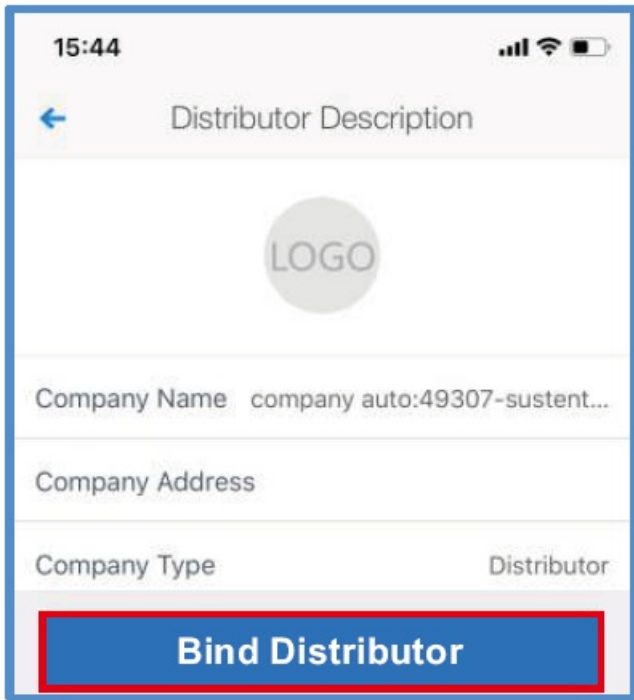

Contact If you have any technical questions about our products, please contact us. Before contacting us, please confirm the following items:

- Equipment model
- Serial number of the datalogger
- Problem description
- Screenshot of the Status page in the configuration interface

Ginlong Technologies Co., Ltd. No. 57 Jintong Road, Binhai Industrial Park, Xiangshan, Ningbo, Zhejiang, 315712, P.R.China.

- Tel: +86 (0)574 6578 1806
- Fax: +86 (0)574 6578
- 1606 Email info@ginlong.com
- Web www.ginlong.com

Documents / Resources



[solis EN2-8M Data Logger LAN Stick](#) [pdf] User Guide

EN2-8M Data Logger LAN Stick, EN2-8M, Data Logger LAN Stick

[Manuals+](#),

- [home](#)
- [privacy](#)