



solis EN2-8M WiFi Stick Datalogger Installation Guide

[Home](#) » [solis](#) » solis EN2-8M WiFi Stick Datalogger Installation Guide 

solis EN2-8M WiFi Stick Datalogger



Contents

- 1 [Delivery Content](#)
- 2 [Install](#)
 - 2.1 [Install the datalogger](#)
 - 2.2 [Install with multiple inverters](#)
- 3 [LED and Button](#)
- 4 [WIFI Configuration](#)
- 5 [Create the Solis Cloud Account](#)
- 6 [Create Plant](#)
- 7 [FCC Certification](#)
- 8 [Customer Support](#)
- 9 [Documents / Resources](#)
- 10 [Related Posts](#)

Delivery Content

- WiFi stick
- WiFi Antenna
- Quick Installation Manual

Install

Install the datalogger

Connect the datalogger to the corresponding 4-pin COM port of the inverter. A Solis 5K inverter is used here as an example.

Please follow the instructions below:



Install the datalogger:

1. Install the antenna to the datalogger.

2. Match the joint, and then insert the datalogger to the inverter COM port.
3. Rotate the black ring in clockwise.



2



3

 


NOTE

Only rotate the black ring at the connection end, not rotate the silver cover.

Install with multiple inverters

If you need to collect data from multiple inverters, please follow the inverter user manual to establish a communication connection with the inverter using the RS485 communication cable in a “daisy chain” manner.

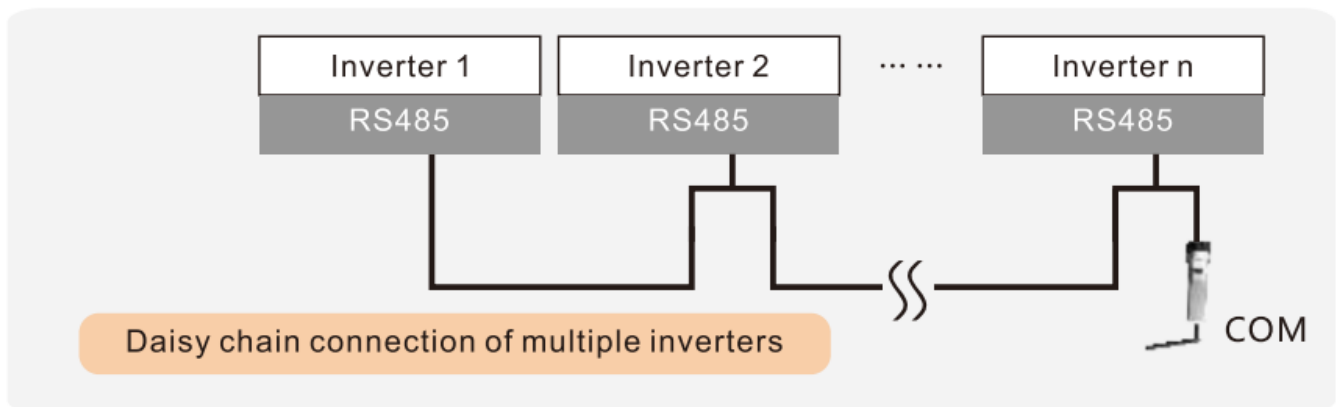

After the datalogger is installed on the inverter, if the inverter is powered on, you need to set the inverter slave address, the default slave address of the inverter is 01, and each inverter on the communication circuit needs to be assigned with different slave address (like 01, 02, 03, 04 ...).






NOTE

The device must be installed away from the strong magnetic field produced by large electrical appliances such as microwave oven, refrigerator, telephone, metal walls, etc. Otherwise, the communication quality may be affected. It may also be affected by lightning storm.

LED and Button

LED Lights Status:

LED indicators	Description	LED Status	Meanings
Internet Indicators  (NET)	Shows the connection status between the datalogger and the server.	Flashing	Trying to connect with server
		ON	Successfully connected
		OFF	Abnormal connection
Inverter COM Indicators  (COM)	Shows the connection status between datalogger and the inverter.	Flashing	Trying to connect with inverter
		ON	Successfully connected
		OFF	Abnormal connection
Power Indicator  (PWR)	Shows the power supply status of the datalogger.	ON	Datalogger is powered up normally
		OFF	Datalogger is powered up abnormally

Button Instruction:

The **[RESET]** button on the back is used for connection .

- Short press will send the data immediately.
- Long press for 5 seconds will enter into config mode for connection router.
- Long press for 10 seconds will reset the connection.

The three constantly ON LED lights indicate the datalogger is working normally.

WIFI Configuration

Step 1: Use you phone to scan the QR code to download and register the Solis Cloud APP. Or directly download from APP Store or Google Play Store by searching “Solis Cloud”.



Solis Cloud

Step 2: If it is a new datalogger, please configure it first, then click the “WiFi Configuration”.

Unlogged account, click on “More Tools” and select “WiFi Configuration”


[Register](#)

Hello, Welcome to Solis


☐ Remember [Forget Password](#)

[Language](#) | [More Tools](#) | [Data Migration](#)

 
If you have logged in, please click “Tool” to enter “WiFi Configuration”

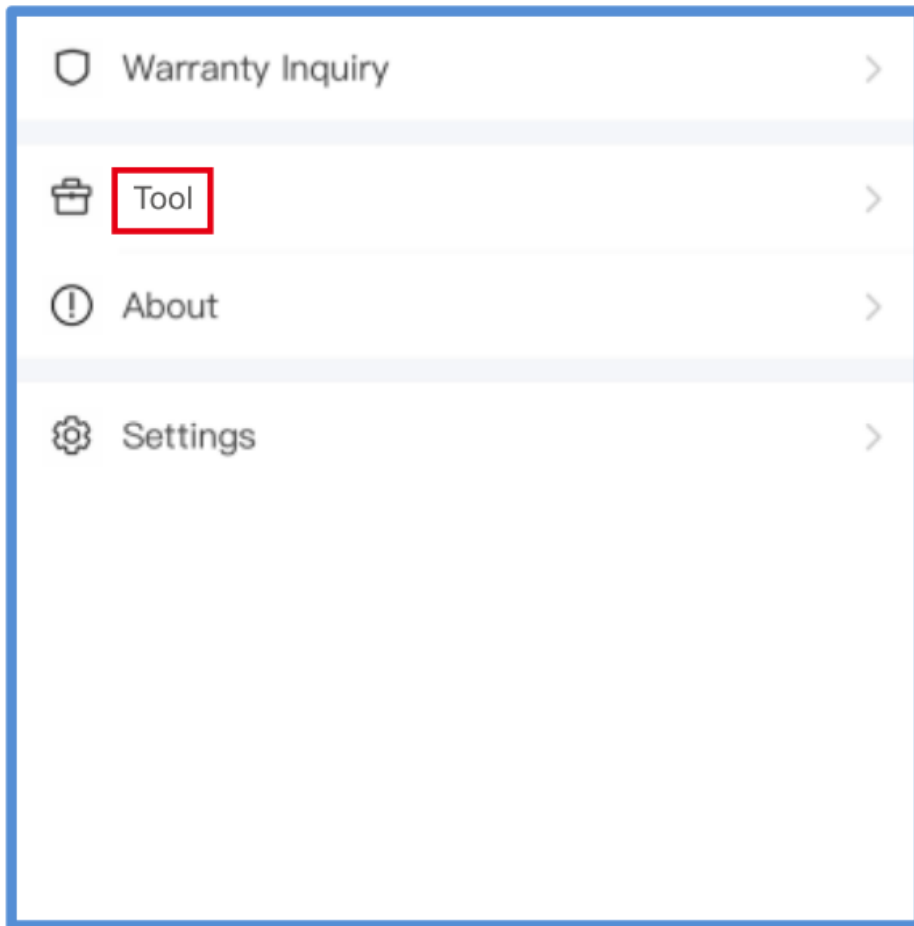

 
Step 3: Manually input datalogger SN or Scan the SN on the datalogger.

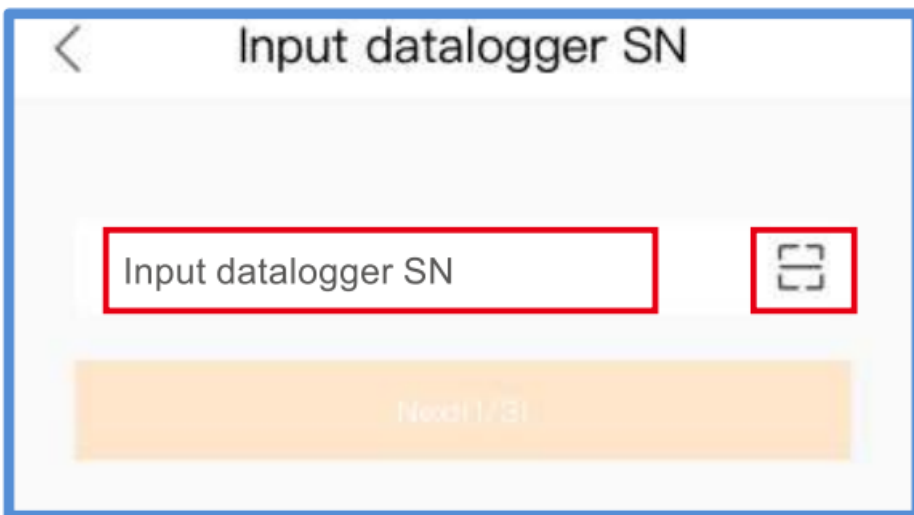

 Step 4: Choose the configuration method, recommended click "Browser Configuration".

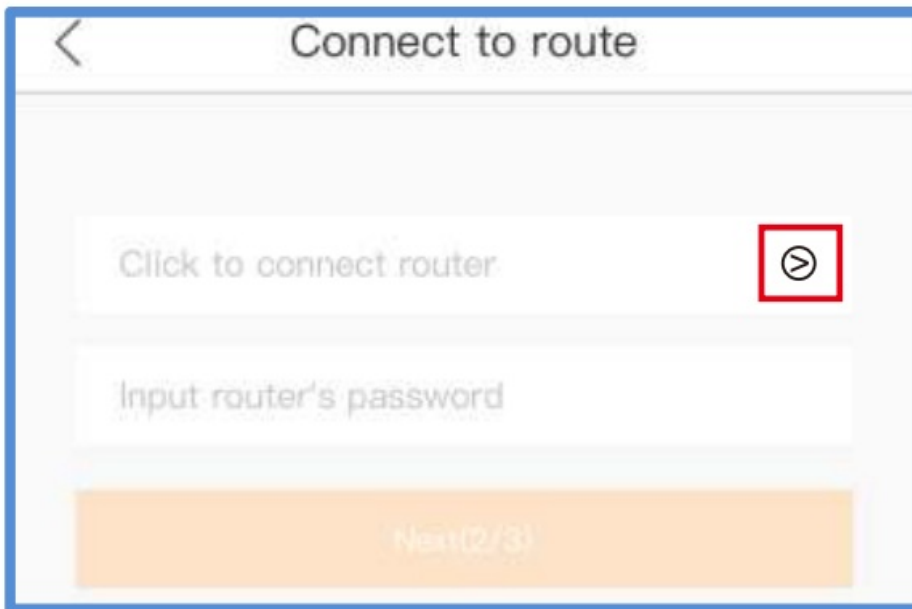

 
Step 5: Long press the “Reset” button for 5 seconds until the yellow and green LEDs are quickly flashing . Then click the “It’s flashing “.

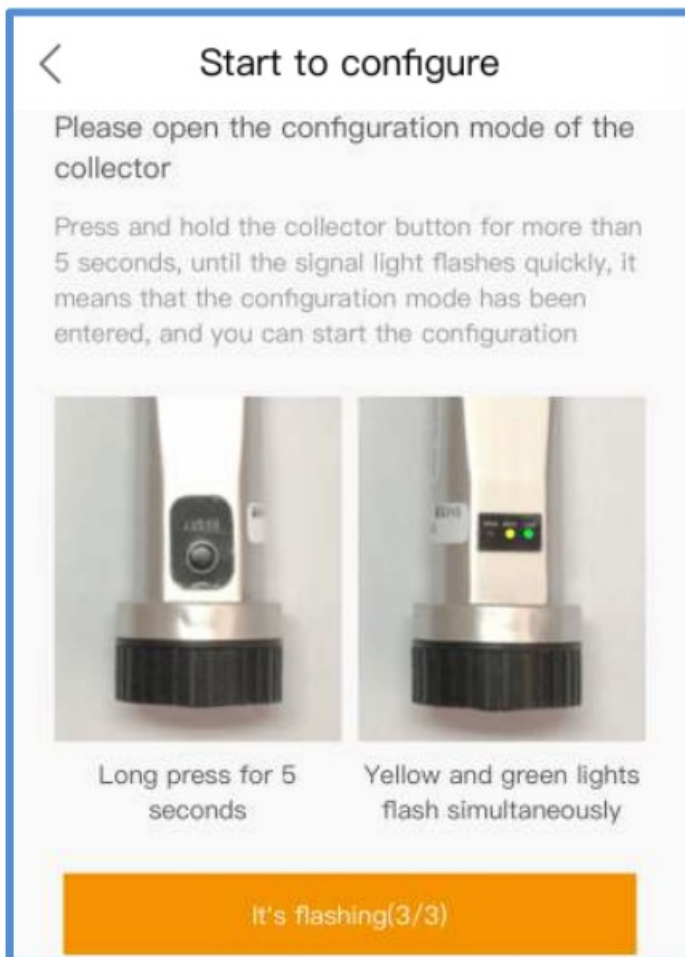

Step 6: Connect to the data logger network Solis.



 
Step 7: The wireless device(mobile phone or laptop) connects to the datalogger hotspot (**Solis_serial number**). The Password is 123456789.

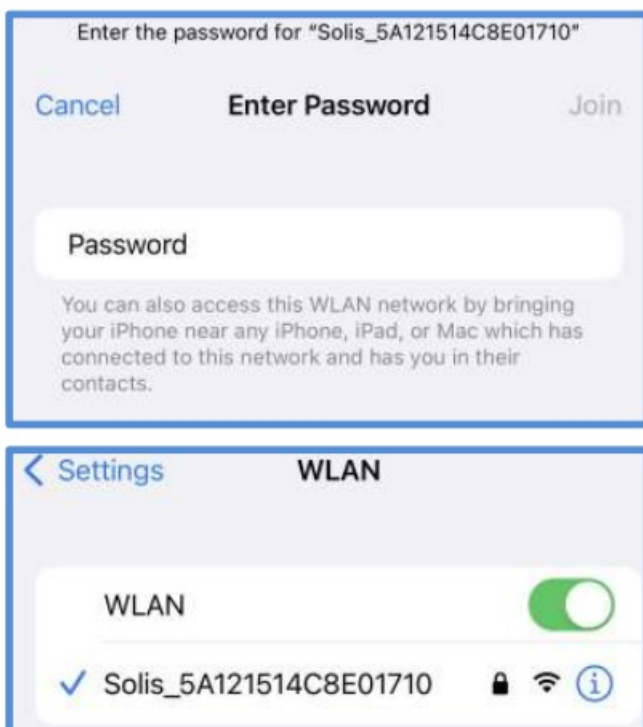


Step 8: After that, return to APP.

Step 9: Click "➡", make sure the phone is connected to router WiFi and switch back to the page to fill in the WiFi password, then move to next step.

 Connect to route [view the tutorial](#)


Connect to route



Next(2/3)

Step 10: Configuration Complete.

Configuration Complete

 


Configuration Complete

OK(3/3)


Create the Solis Cloud Account


Step 1: Click the "Register".

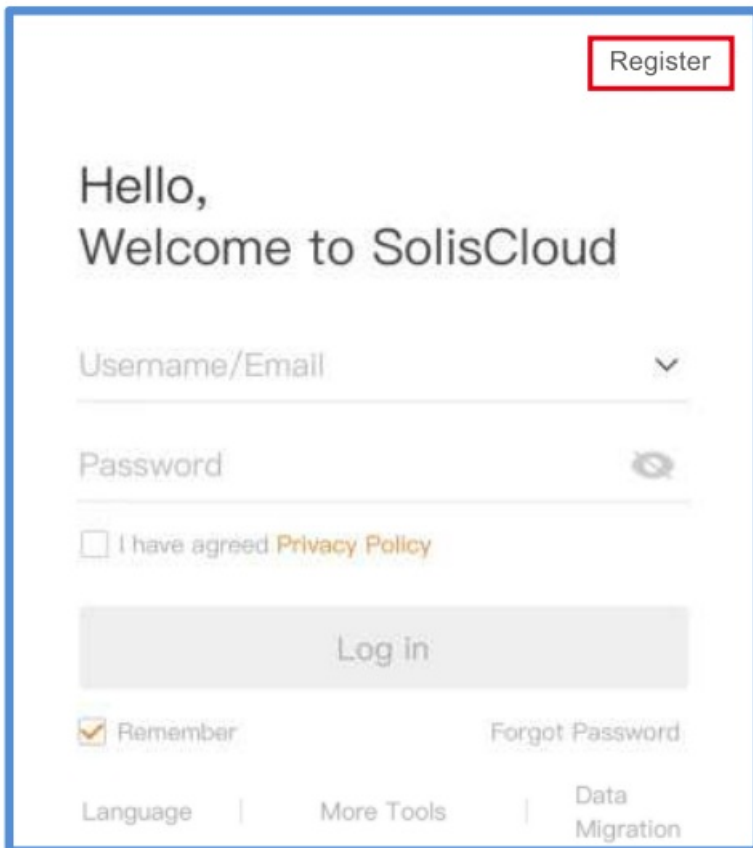

Register

Hello,
Welcome to SolisCloud

Username/Email 

Password 


☐ I have agreed [Privacy Policy](#)

Log in

☒ Remember [Forgot Password](#)


Language | More Tools | [Data Migration](#)

 
Step2: Select Owner or Organization for email address registration.

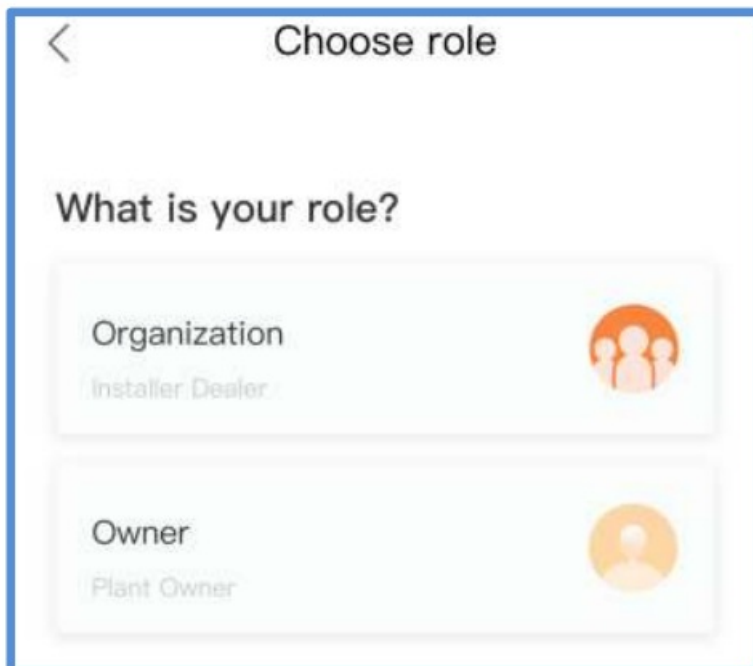

< Choose role

What is your role?

Organization
Installer Dealer 

Owner
Plant Owner 

Step3: Enter the email to get the verification code, than enter your account and password, last click the "Register".

<

Owner

* Registration Method

Input email

Input verification code

Send

* User Name

Input 2 to 60 English letters, not pure n...

* Password

Input 6 to 32 letters, symbols and...

* Time Zone

(UTC+08:00) PRC

>

☐ * I have agreed [Privacy Policy](#)

Register

Owner Register

Organization

Note: If your organization has registered an account in SolisCloud, you do not need to register again. Please contact the administrator to add you as a sub-organization or member in organization management.

* Organization (Company) Name

Input 2 to 60 characters

* Registration Method

Input email

Input verification code

Send

* User Name

Input 2 to 80 English letters, not pure n...

* Password

Input 6 to 32 letters, symbols and...

* Organization Code

541248

* Time Zone

(UTC+08:00) PRC

 
☐ * I have agreed [Privacy Policy](#)

Register

Organization Register

Create Plant

Step1 : Enter the main page of Solis Cloud APP, click “+”at the top right corner and select “Add plant”

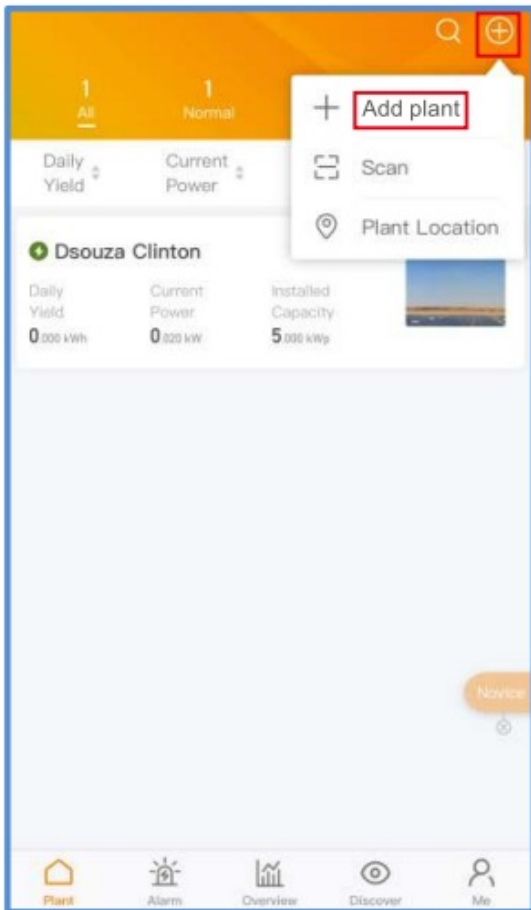

Step 2: Input the information of the plant as required. Then click “Done”.

The screenshot shows the 'Create Plant' form. At the top, there's a back arrow, the title 'Create Plant', and a 'Done' button (highlighted with a red box). The form contains several input fields, each with a red asterisk indicating it's required. The fields are: 'Plant Name' (placeholder: 'Input plant name'), 'Installed Capacity(kWp)' (placeholder: 'Installed Capacity'), 'Area' (placeholder: 'Location' with a location icon), 'Plant Address' (placeholder: 'Input detailed address'), 'Earning per kWh' (placeholder: 'Input Earning per kWh'), 'Organization Code' (placeholder: 'Input Organization Code' with a chevron), 'Add Guest' (with a plus icon), 'Installer Phone' (placeholder: 'Input installer phone'), 'Installer Email' (placeholder: 'Input installer's email'), 'Module' (placeholder: 'Input number of modules'), 'Plant Type' (placeholder: 'Residential' with a chevron), 'Grid Connection Type' (placeholder: 'Entire Energy to Grid' with a chevron), 'Time Zone' (placeholder: '--' with a chevron), and 'Currency' (placeholder: '--' with a chevron).

Step 3: Confirm the plant information. Click “Create plant”.

Create plant

Plant Name: test

Rated Power(kWh): 5

Location: China Zhejiang Ningbo

Plant Address: Ningbo Ginlong Technologies Co.,Ltd.

Currency: CNY

Earning per kWh(CNY/kWh): 0.3949

 
 
Inclination: 30

Timezone: (UTC-12:00) Sun Line West

Installation: 2020-04-03

Buttons: Cancel, **Create plant**

Step 4: Click “View plant” to enter the plant homepage , then add the datalogger.

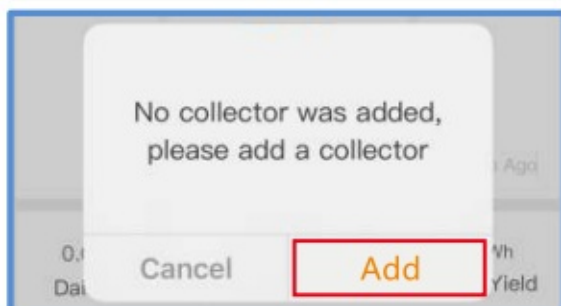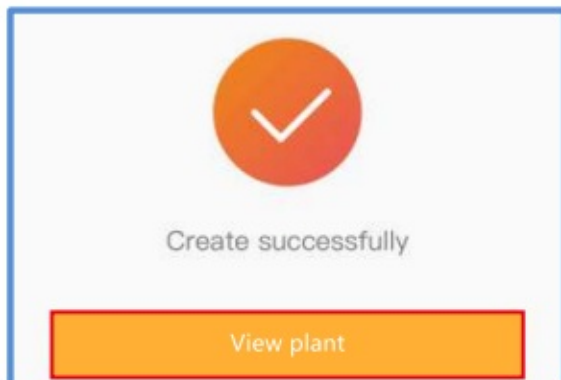


Step 5: Scan the datalogger SN QR code or manually input it.



Note: Scan the datalogger, SN , NOT the inverter SN.



 Step 6: Plant creation succeeds. Click “Continu ... atalogger” to check the monitoring data . If the plant has multiple dataloggers, please click “View Plant”.

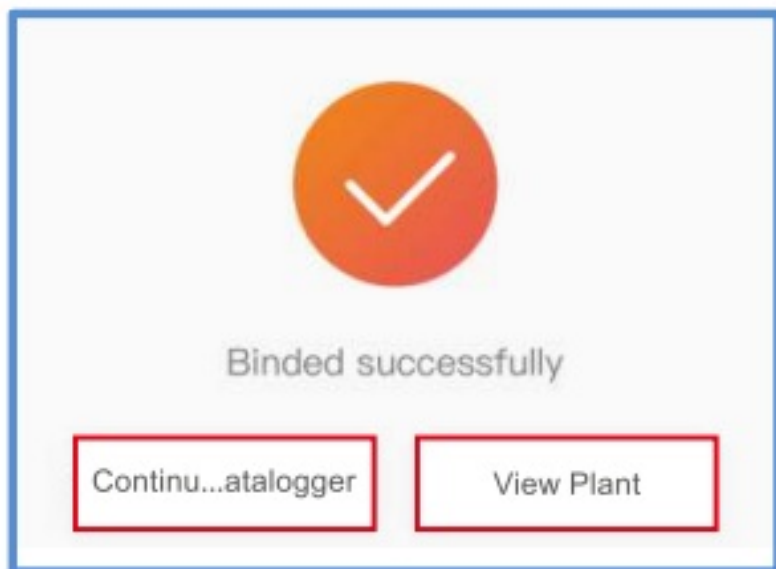

FCC Certification

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC warning:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Customer Support

Contact

Please contact us if you have any technical problems in terms of the product. Please provide the following information as well:

- Inverter SN
- Datalogger SN
- Problem Description


Ginlong Technologies Co., Ltd.

No. 57 Jintong Road, Binhai Industrial Park,
Xiangshan , Ningbo, Zhejiang, 315712, P.R.China.

Tel: +86 (0)574 65781806
Fax: +86 (0)574 6578 1606
Email : info@ginlong.com
Web : www.ginlong.com



Documents / Resources

	solis EN2-8M WiFi Stick Datalogger [pdf] Installation Guide S3, EN2-8M, EN2-8M WiFi Stick Datalogger, WiFi Stick Datalogger, Stick Datalogger, Datalogger
---	--

[Manuals+](#)