



solis Export Limit Settings Using Export Power Manager Instructions

[Home](#) » [solis](#) » **solis Export Limit Settings Using Export Power Manager Instructions** 

Contents

- [1 solis Export Limit Settings Using Export Power Manager](#)
- [2 INSTALLATION STEPS](#)
- [3 Documents / Resources](#)
 - [3.1 References](#)
- [4 Related Posts](#)



solis Export Limit Settings Using Export Power Manager



INSTALLATION STEPS

- STEP 1: Press Enter on the EPM.
- STEP 2: Scroll down to 'Advanced Settings' using the Up/Down keys. Press Enter.

Type the password – <0010> and click Ent.

You will see the following options.

Select Advanced Settings from the Main Menu to access the following options:
1. Inverter Qty. Set 2. Backflow Power 3. Set Meter CT 4. FailSafe ON/OFF
5. Backflow Work Mode 6. PELD ON/OFF 7. System Updade 8. Reset Password
9. Restore settings 10. Set EPM Regulator

- STEP 3: Set the inverter quantity by selecting the 'Inverter Qty' option. Press Ent to save.
- STEP 4: Select 'Backflow Power' and Press Enter.
Define the Backflow power as per your requirement using the Up/Down keys. Press Enter to select and save.
- STEP 5: Select 'Set Meter CT' to define the CT ratio parameter. For example, if your CT clamp rating is 100A/5A then the ratio is 20:1. Press Enter to select and save.
- STEP 6: Press ESC twice to exit.


'ALL DONE' HAVE A GOOD DAY!

Web: www.solisinverters.com.au

Ph: 03 8555 9516

E: service@ginlongaust.com.au

Documents / Resources

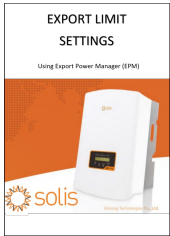

[solis Export Limit Settings Using Export Power Manager](#) [pdf] Instructions
Export Limit Settings, Using Export Power Manager, Export Limit Settings Using Export Power Manager

References

-  solisinverters.com.au