



Sollos TR12PC-INT-100 100W Transformer with Integrated Photocell and Timer Instruction Manual

[Home](#) » [sollos](#) » Sollos TR12PC-INT-100 100W Transformer with Integrated Photocell and Timer Instruction Manual 



TR12PC-INT-100 100W Transformer with Integrated Photocell and Timer Installation Instructions

Contents

- [1 WARNING:](#)
- [2 IMPORTANT SAFETY WARNINGS:](#)
- [3 TRANSFORMER MOUNTING INSTRUCTIONS](#)
- [4 CIRCUIT BREAKER](#)
- [5 LOW VOLTAGE WIRING INSTRUCTIONS](#)
- [6 TRANSFORMER/PHOTOCELL OPERATION](#)
- [7 Documents / Resources](#)
- [8 Related Posts](#)

WARNING:

- DO NOT Use with submersible fixtures
- DO NOT Use with extension cords
- DO NOT Submerge in water
- DO NOT Connect multiple transformers in parallel


- DO NOT Use with a dimmer
- DO NOT Exceed total fixture wattage of 100W

IMPORTANT SAFETY WARNINGS:

All wiring and installation must be in accordance with local building and electrical codes. Only plug transformer in to 120V GFCI receptacle marked for "wet location." Always disconnect transformer from power source before performing work on lighting system. Calculate lighting capacity correctly total wattage of fixtures may not exceed 100W.

TRANSFORMER MOUNTING INSTRUCTIONS

1. Select a suitable location near a 120V covered GFCI marked for "wet location." Avoid mounting transformer near night light sources or in areas that are not exposed to sunlight. Photocell will not work properly in these locations.
2. Mount transformer at least one foot above ground.
3. Drill one 3/16" hole on appropriate mounting surface.
4. Install anchor and screw, leaving enough room to mount transformer using the hole on the back of the transformer.

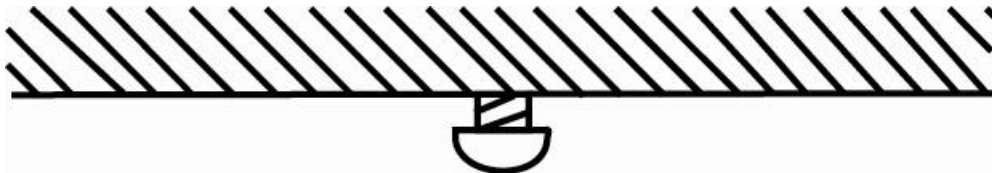

5. Do not plug in transformer until after low voltage wiring is complete.

CIRCUIT BREAKER

If a circuit break occurs, immediately disconnect the transformer from the power source. Common causes for a circuit break are:

- Low voltage wires incorrectly connected to transformer output terminals.
- Overload or short circuit (bare wires touching) somewhere along cable.
- Fixtures incorrectly installed along the cable.
- Fixtures along cable exceed 100W total.

Make all repairs to the lighting system before reconnecting the transformer to the power source. After the problem has been determined and solved, reset the breaker by pushing the button.

LOW VOLTAGE WIRING INSTRUCTIONS

NOTES: Verify correct wire is being used 12 gauge wire rated for direct burial is recommended. Distribute fixtures evenly along the cable with higher wattage fixtures closer to the transformer, if possible. Verify total wattage of all fixtures does not exceed 100W.

1. Split cable about 2" and strip approximately 1/2" to 3/4" of insulation from wire ends and twist tightly (see diagram below).


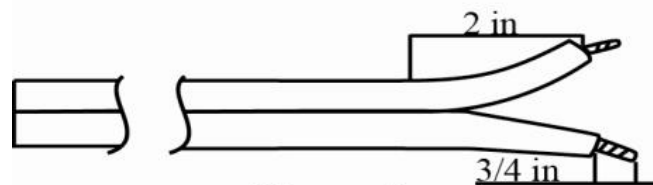


Diagram 2

2. Loosen screws on transformer output terminals.
3. Thread the stripped/twisted cables firmly into the terminals.
4. Firmly tighten the terminal screws. Gently pull on the wires to ensure that they are properly inserted.
5. Mount transformer on surface and plug into GFCI outlet.

TRANSFORMER/PHOTOCELL OPERATION

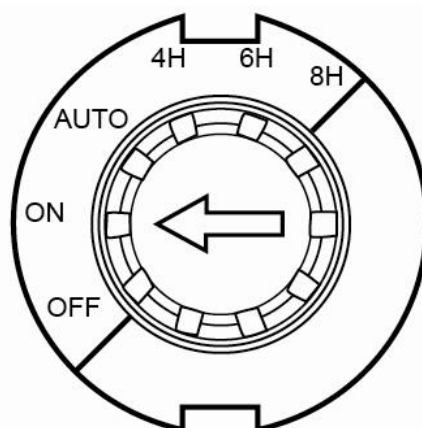

This transformer includes a photocell feature that allows light fixtures to operate either manually, on a timer, or automatically. The photocell may take up to 30 seconds to activate upon change in light levels.

Manual Operation - Turn dial on transformer to “ON” to leave fixtures on continuously or “OFF” to turn fixtures off permanently.

Timed Operation - Turn transformer dial to desired “4H/6H/8H” position. The fixtures will turn on when light levels are low (dusk), and turn off after the indicated amount of time.

Automatic Operation - Turn transformer dial to “AUTO”. Light fixtures will turn on when light levels are low (dusk) and turn off when light levels are high (dawn).

Sollos Landscape Lighting · 2940 Pacific Drive · Norcross, GA 30071 · 888-976-5567 · www.solloslighting.com

Documents / Resources

	Sollos TR12PC-INT-100 100W Transformer with Integrated Photocell and Timer [pdf] Instruction Manual TR12PC-INT-100 100W Transformer with Integrated Photocell and Timer, TR12PC-INT-100, 100W Transformer with Integrated Photocell and Timer, Integrated Photocell and Timer, Photocell and Timer
--	--