

 **Solplanet**  
ASW75K-LT Three  
Phase Inverters



# Solplanet ASW75K-LT Three Phase Inverters Installation Guide

[Home](#) » [solplanet](#) » Solplanet ASW75K-LT Three Phase Inverters Installation Guide 

## Contents

- [1 Solplanet ASW75K-LT Three Phase Inverters](#)
- [2 GENERAL INFORMATION](#)
- [3 SAFETY](#)
- [4 EU DECLARATION OF CONFORMITY](#)
- [5 OVERVIEW](#)
- [6 SCOPE OF DELIVERY](#)
- [7 CONTACT](#)
- [8 Mounting Environment](#)
- [9 DIMENSION](#)
- [10 DC connection](#)
- [11 Documents / Resources](#)
  - [11.1 References](#)
- [12 Related Posts](#)



**Solplanet ASW75K-LT Three Phase Inverters**



ASW75K-LT/ASW80K-LT/ASW100K-LT/ASW110K-LT



Android



iOS

## GENERAL INFORMATION

This quick installation guide does not replace the description in the user manual. The contents of this guide may be updated or revised due to product development. The information in this guide is subject to change without notice. The latest version of this document and the manual for installation, commissioning, configuration and decommissioning are to be found in PDF format at [www.solplanet.net](http://www.solplanet.net).

## SAFETY

### Intended use

- The product is a transformerless PV inverter which converts the direct current of the PV generator into grid-compatible three-phase alternating current and then feeds the three-phase alternating current into the public power grid.
- The product is intended for indoor and outdoor applications.
- The product must only be connected with PV modules of protection class II (in accordance with IEC 61730, application class A). PV modules with a high capacitance to ground must only be used if their capacity does not exceed 5 $\mu$ F. Do not connect any sources of energy other than PV modules to the product.
- The product is not equipped with an integrated transformer and therefore has no galvanic isolation. The product must not be operated with PV modules which require functional grounding of either the positive or negative PV conductors. This can cause the product to be irreparably damaged. The product may be operated with PV

modules with frames that require protective earthing.

- All components must remain within their permitted operating ranges and their installation requirements at all times.
- Use the product only in accordance with the information provided in the user manual and with the locally applicable standards and directives. Any other application may cause personal injury or damage to property.
- The product must only be used in countries for which it is approved by A Solplanet and the grid operator.
- The type label must be permanently attached to the product and must be in a legible condition.
- This document does not replace any regional, state, provincial, federal, or national laws, regulations, or standards that apply to the installation, electrical safety, and use of the product.

### **Important safety instructions**

- The product has been designed and tested strictly according to the international safety requirements. As with all electrical or electronical devices, there are residual risks despite careful construction. To prevent personal injury and property damage and to ensure long-term operation of the product, read this section carefully and observe all safety information at all times.

### **DANGER**

Danger to life due to high voltages of the PV array When exposed to sunlight, the PV array generates dangerous DC voltage which is present in the DC conductors and the live components of the product. Touching the DC conductors or the live components can cause to lethal electric shocks. If you disconnect the DC connectors from the product under load, an electric arc may occur leading to electric shock and burns.

- Do not touch non-insulated cable ends.
- Do not touch the DC conductors.
- Do not touch any live components of the product.
- Do not open the product.
- All work on the product must only be carried out by qualified personnel who have read and fully understood all safety information contained in this document and the user manual.
- Disconnect the product from voltage and energy sources and ensure it cannot be reconnected before working on the product.
- Wear suitable personal protective equipment for all work on the product.

### **DANGER**

Danger to life due to electric shock when touching live system components in case of a ground fault If a ground fault occurs, parts of the system may still be alive. Touching live parts and cables may result in death or lethal injuries due to electric shock.

- Disconnect the product from voltage and energy sources and ensure it cannot be reconnected before working on the device.
- Only touch the cables of the PV modules on their insulation.
- Do not touch any parts of the substructure or frame of the PV array.
- Do not connect PV strings with ground faults to the product.

### **WARNING**

Danger to life due to electric shock from the destruction of the measuring device due to overvoltage. Overvoltage can damage a measuring device and result in voltage being present in the enclosure of the measuring device. Touching the live enclosure of the measuring device results in death or lethal injuries due to electric shock.

- Only use measuring devices with a measurement span higher than the DC input voltage range equal to or higher than the voltage rating of the product.

## CAUTION

### Risk of burns due to high temperature.

Some parts of the enclosure can become hot during operation.






- During operation, do not touch any parts other than the enclosure lid of the product.

## CAUTION

Risk of injury due to weight of product. Injuries may result if the product is lifted incorrectly or dropped while being transported or mounted.

- Transport and lift the product carefully. Take the weight of the product into account.
- Wear suitable personal protective equipment for all work on the product.

## Symbols on the label

	<b>Beware of a danger zone</b> This symbol indicates that the inverter must be additionally grounded if additional grounding or equipotential bonding is required at the installation site.
	<b>Beware of high voltage and operating current</b> The inverter operates at high voltage and current. Work on the inverter must only be carried out by skilled and authorized electricians.
	<b>Beware of hot surfaces</b> The inverter may become hot during operation. Avoid contact during operation.
	<b>Capacitor discharge</b> Danger to life due to high voltages in the inverter. Do not touch live parts for 25 minutes after disconnection from the power sources.
	<b>Observe the documentation</b> Observe all documentation supplied with the product.


## EU DECLARATION OF CONFORMITY

Within the scope of the EU directives

- Radio Equipment Directive 2014/53/EU (L 153/62-106. May 22. 2014) (RED)


- Restriction of the use of certain hazardous substances 2011/65/EU (L 174/88, June 8, 2011) and 2015/863/EU (L 137/10, March 31, 2015) (RoHS) AISWEI Technology Co., Ltd. confirms herewith that the products described in this document are in compliance with the fundamental requirements and other relevant provisions of the above-mentioned directives. The entire EU Declaration of Conformity can be found at [www.solplanet.net](http://www.solplanet.net).

## OVERVIEW

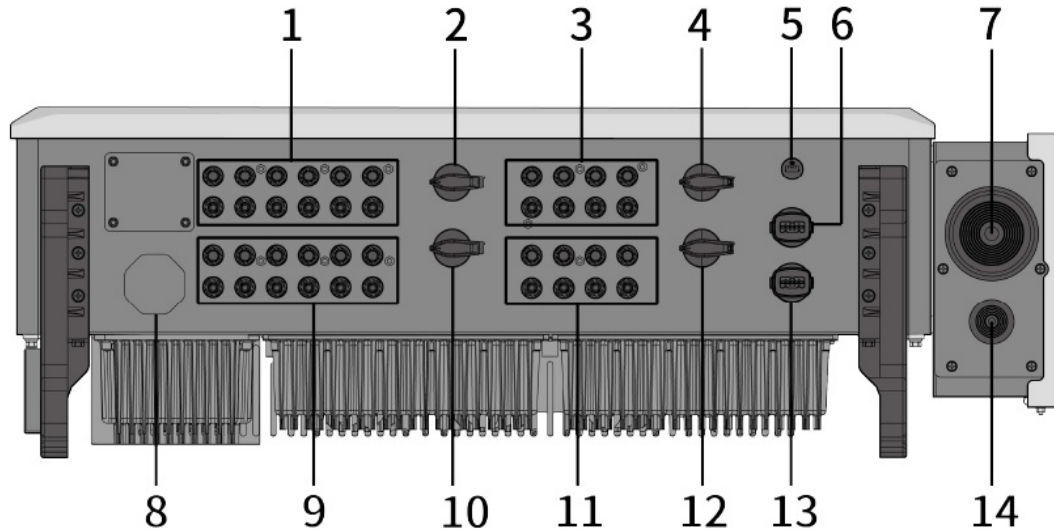

1. DC connector inputs 1-6 connected to DC switch 1
2. DC switch 1
3. DC connector inputs 13-16 connected to DC switch 3
4. DC switch 3
5. COM1: Ai-Dongle port
6. COM2: RS485 Communication port
7. AC cable – knockout seal
8. Lock valve
9. DC connector inputs 7-12 Connected to DC switch 2
10. DC switch 2
11. DC connector inputs 17-20 Connected to DC switch 4
12. DC switch 4
13. COM3: RS485 Communication port
14. Reserved grounding – knockout seal

## SCOPE OF DELIVERY

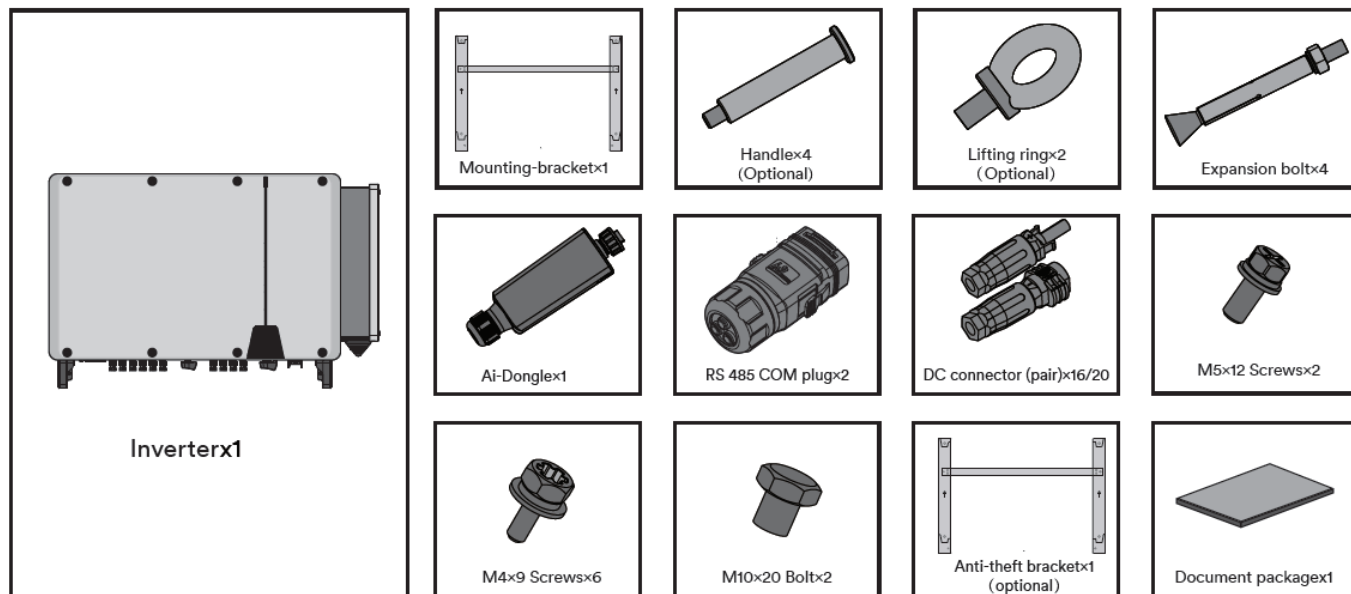

## CONTACT

Please contact our Service Department if you have any technical questions about our products. The following information is needed to provide necessary assistance:

- Inverter model
- Inverter serial number
- Photovoltaic module model
- Photovoltaic modules number and strings number connected to each MPPT ——Fault code
- Installation location
- Warranty card

## EMEA

- Service email: [service.EMEA@solplanet.net](mailto:service.EMEA@solplanet.net) APAC
- Service email: [service.APAC@solplanet.net](mailto:service.APAC@solplanet.net) LATAM
- Service email: [service.LATAM@solplanet.net](mailto:service.LATAM@solplanet.net) Aiswei Greater China
- Service email: [service.china@aiswei-tech.com](mailto:service.china@aiswei-tech.com)
- Hotline: +86 400 801 9996

## Taiwan

- Service email: [service.taiwan@aiswei-tech.com](mailto:service.taiwan@aiswei-tech.com) Hotline: +886 809089212
- <https://solplanet.net/contact-us>

Scan QR code:









Android


Scan QR code:



iOS


## Mounting Environment

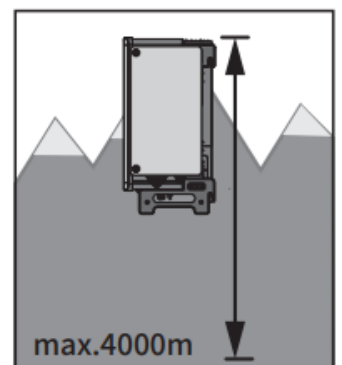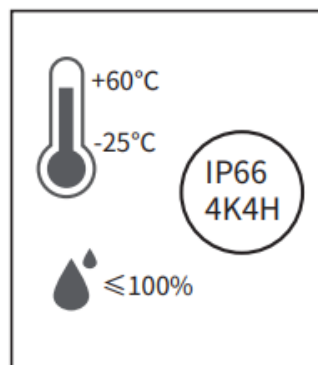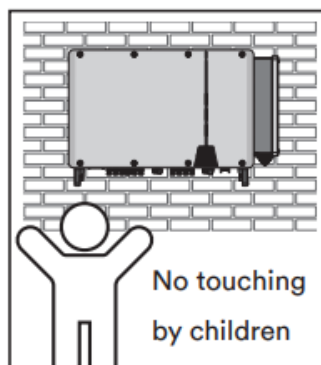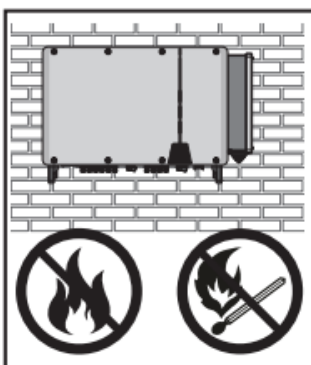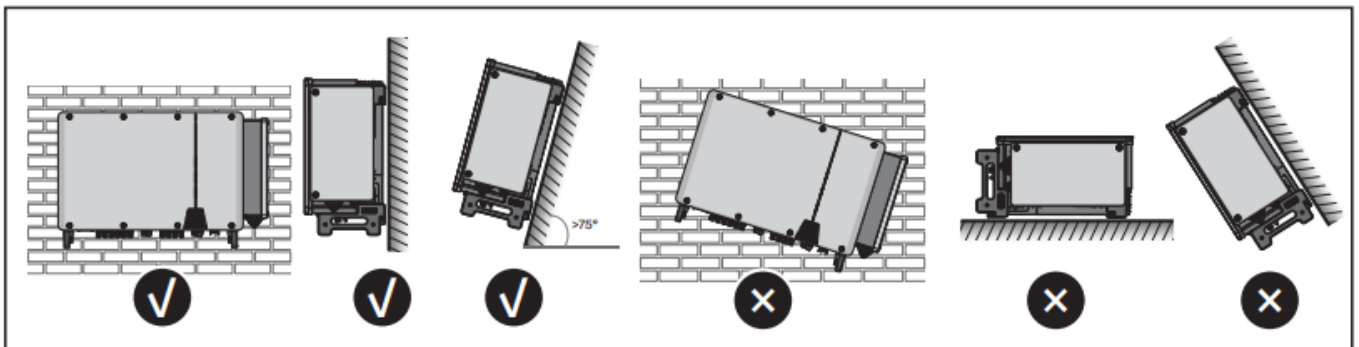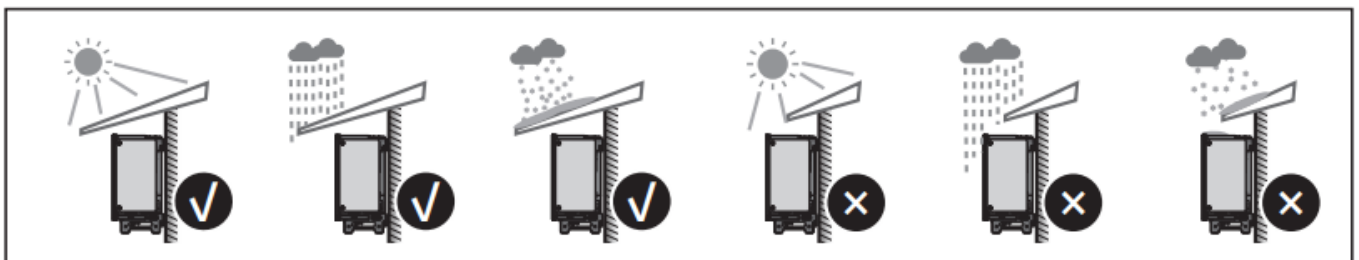

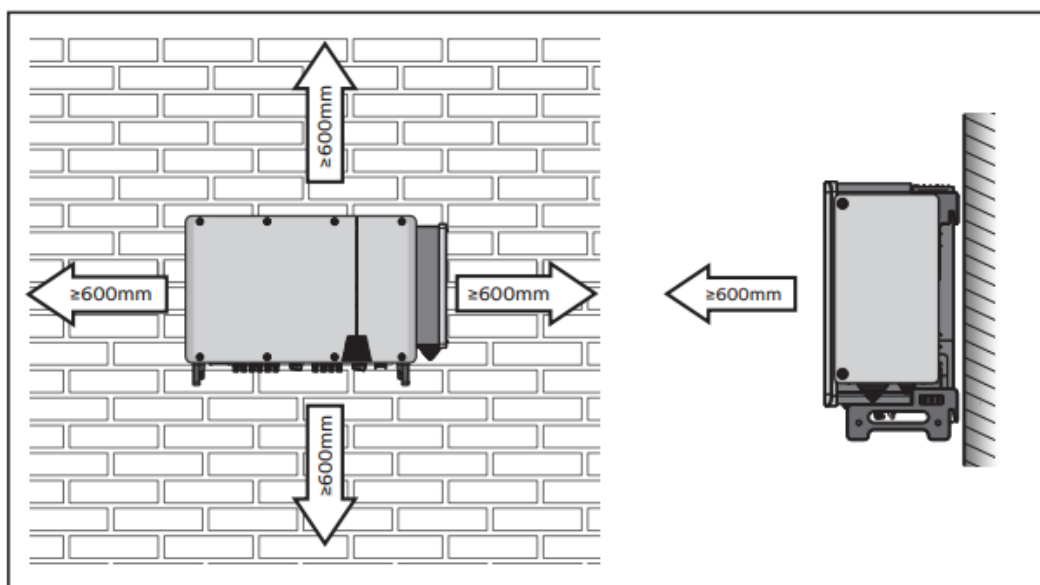





## DIMENSION

Unit:mm



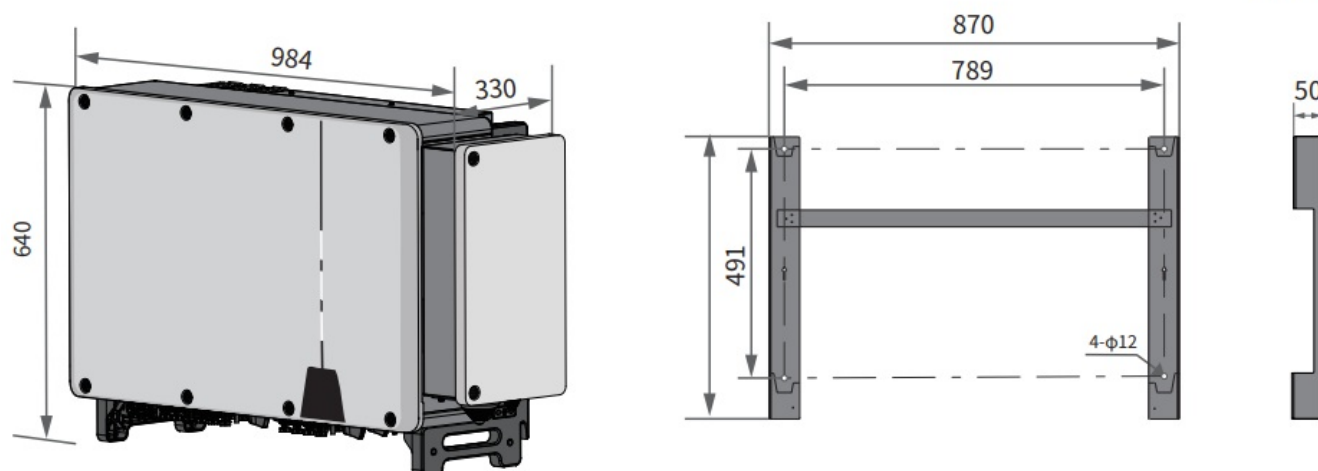




Take out the inverter



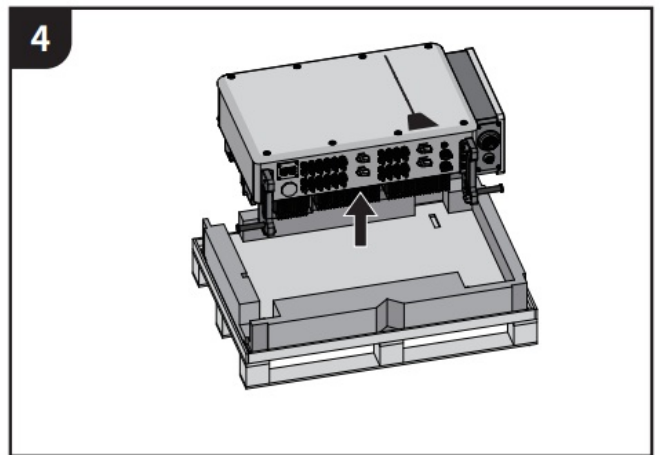
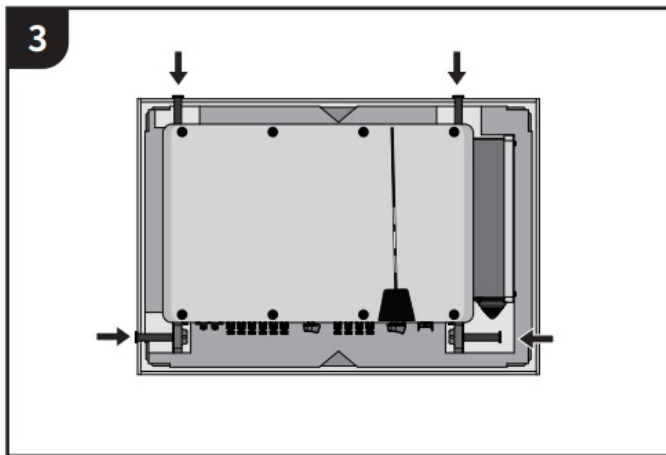
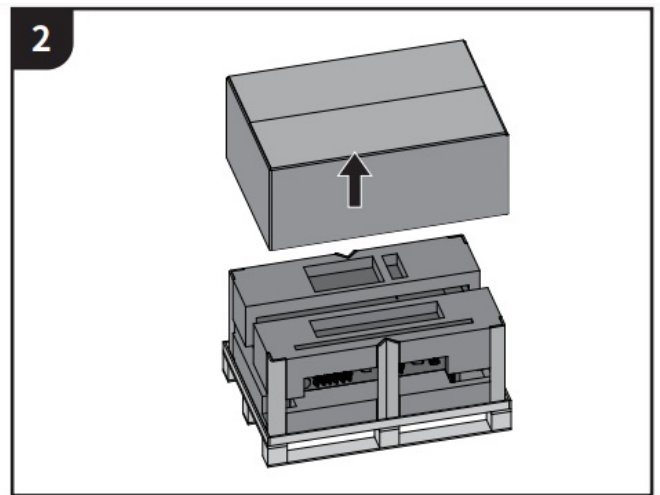
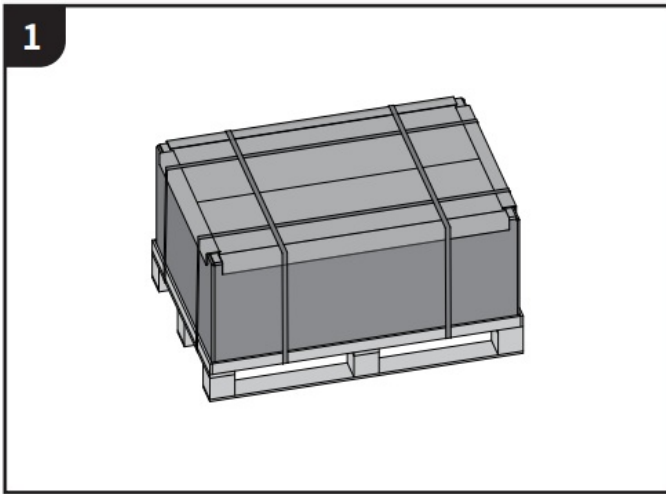




#### Moving the inverter (Optional)

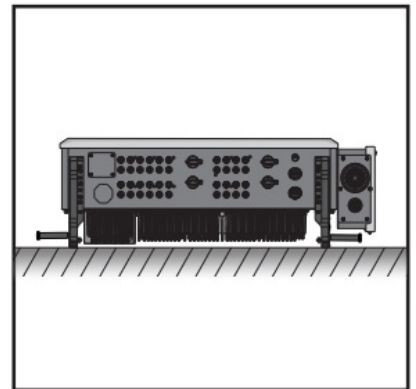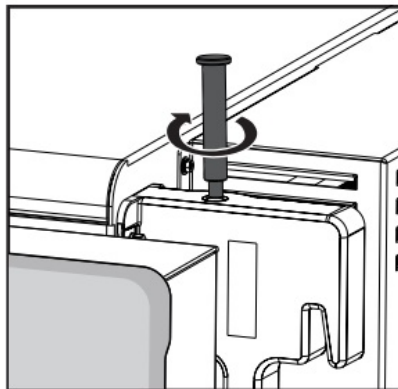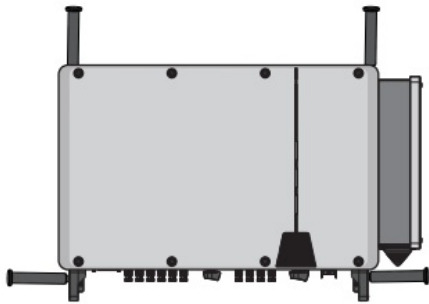


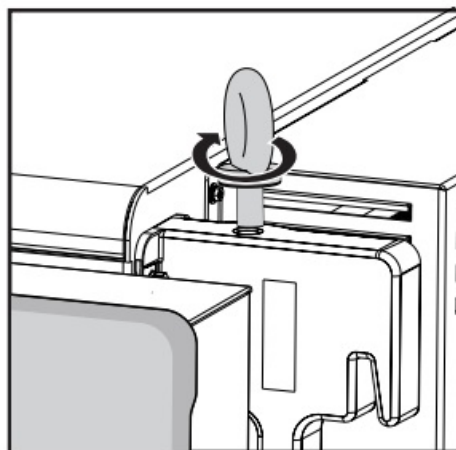
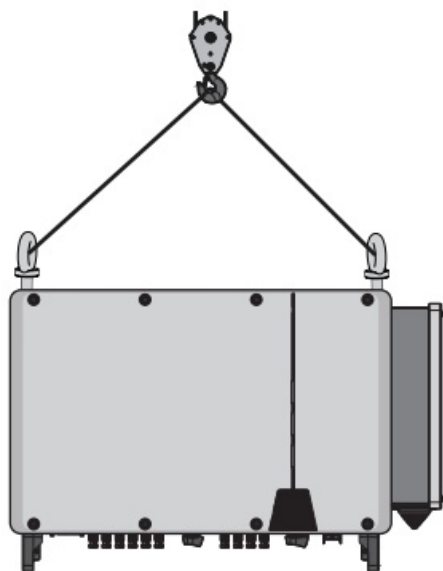


### Mounting-bracket

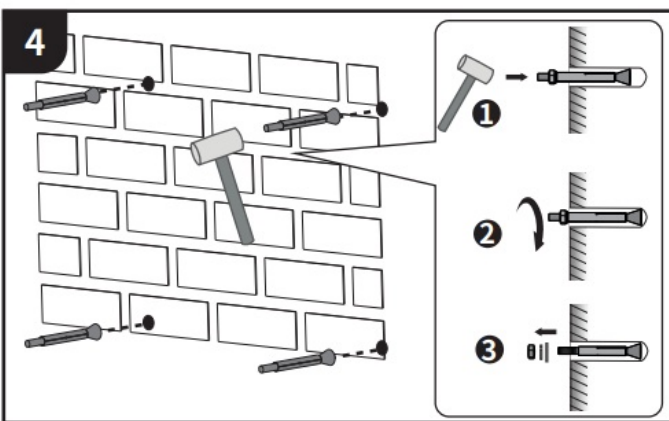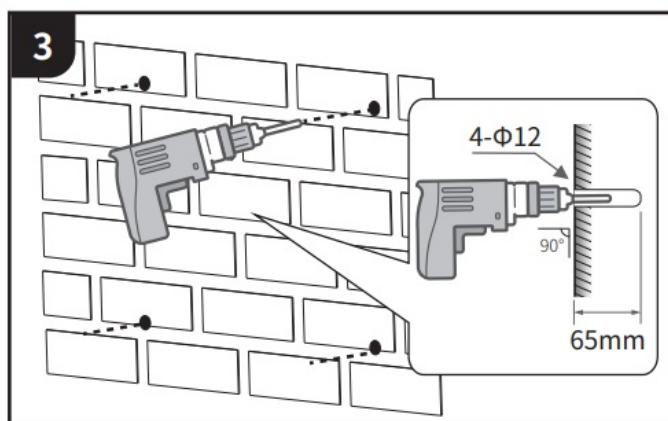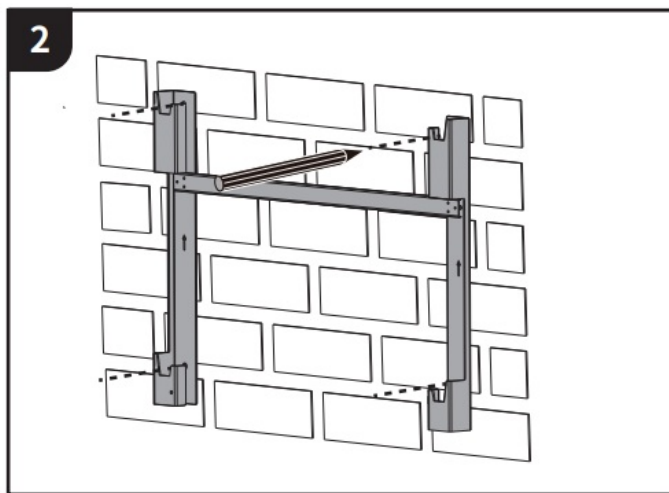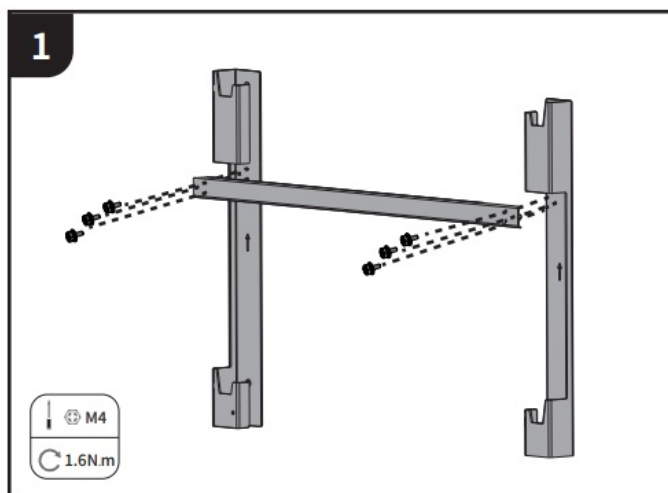

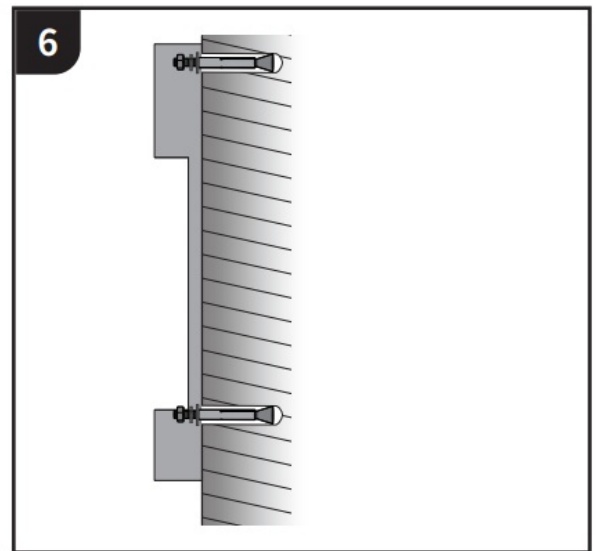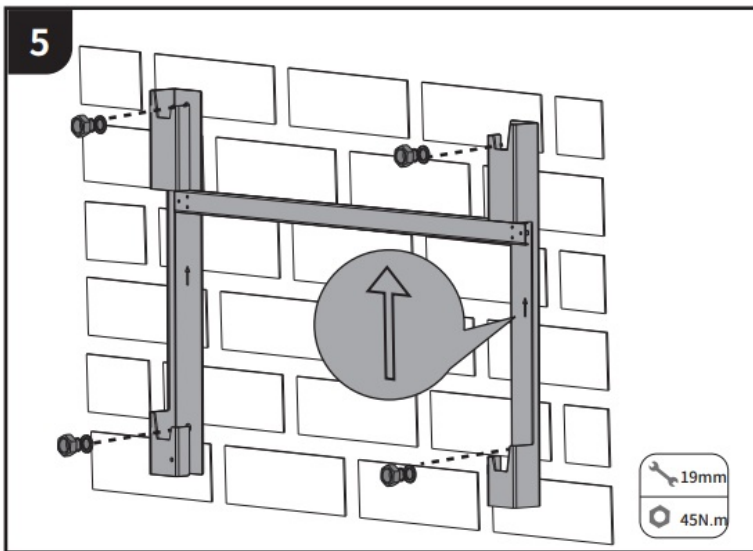


### Wall-Mounted Installation

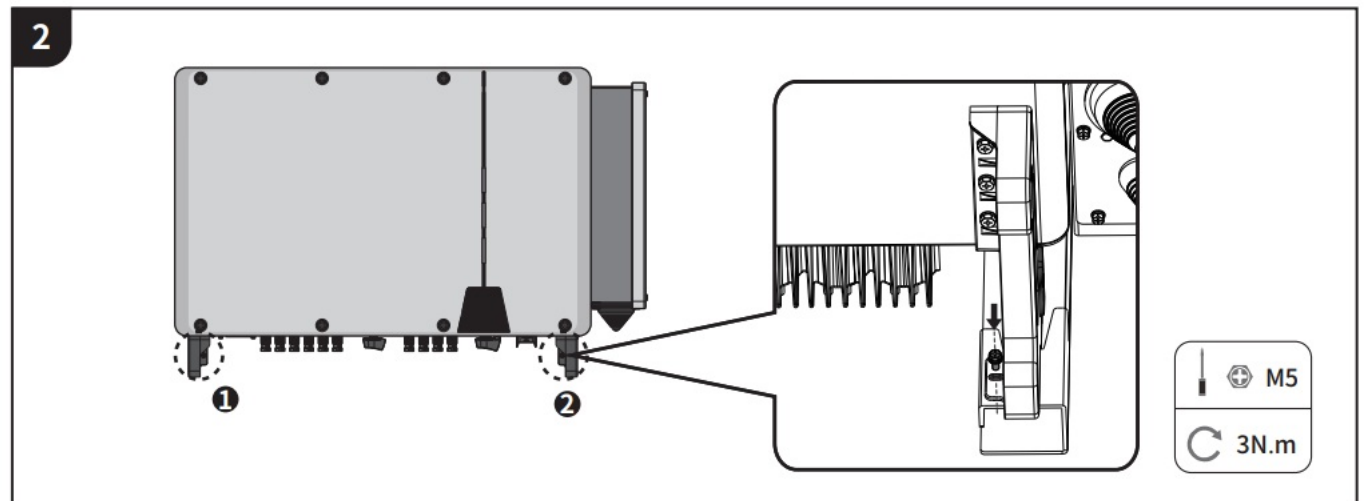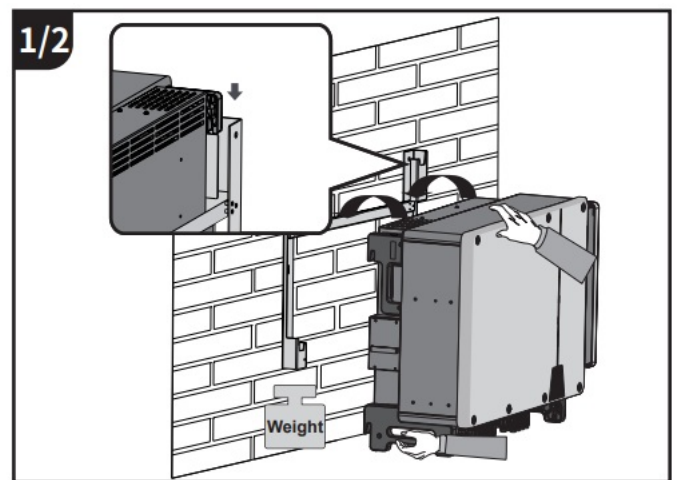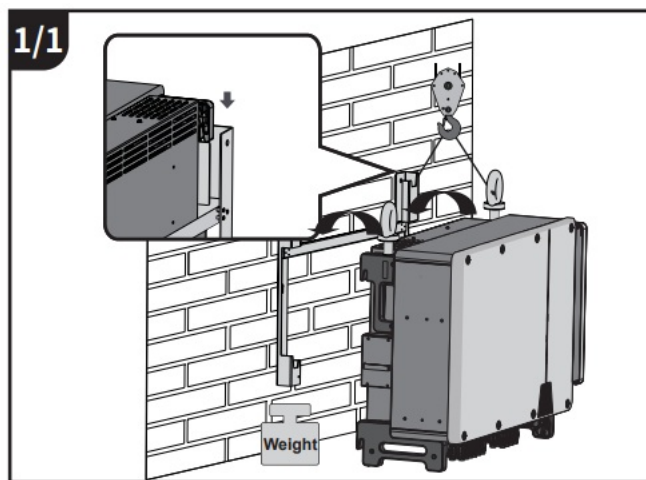


In Europe, customers can install an anti-theft lock on the side of the inverter if required.


- The lock is not included in the package and can be purchased by the user.










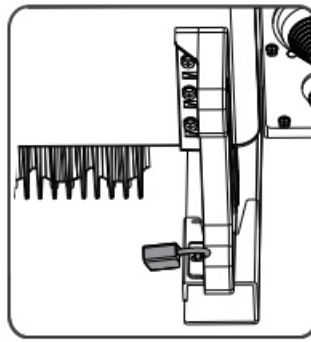


## Second protective grounding

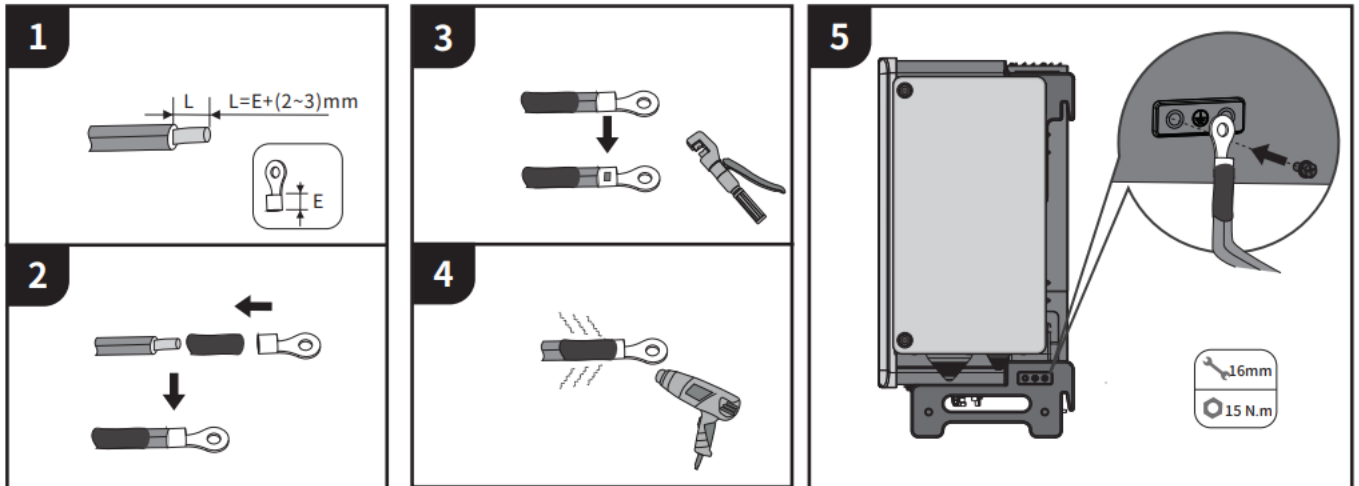






## AC connection

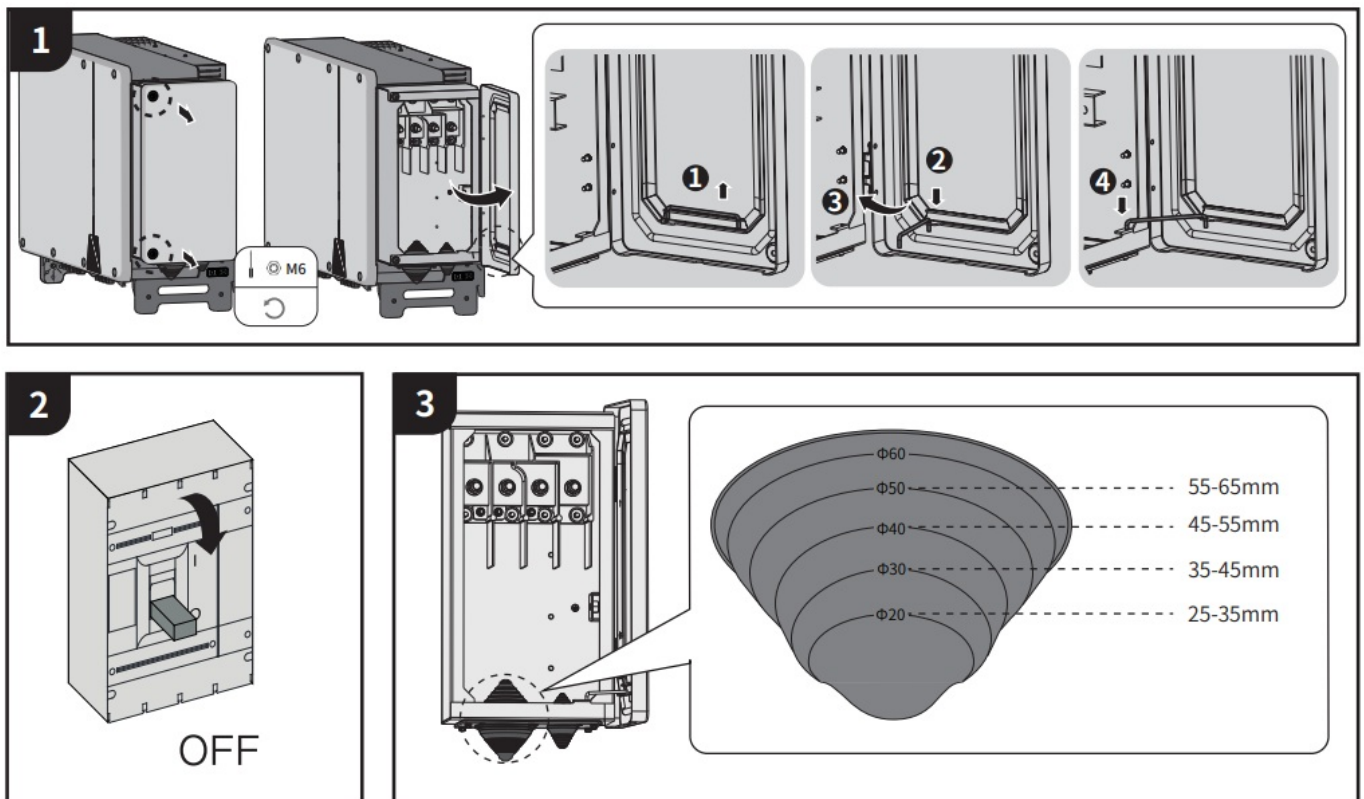

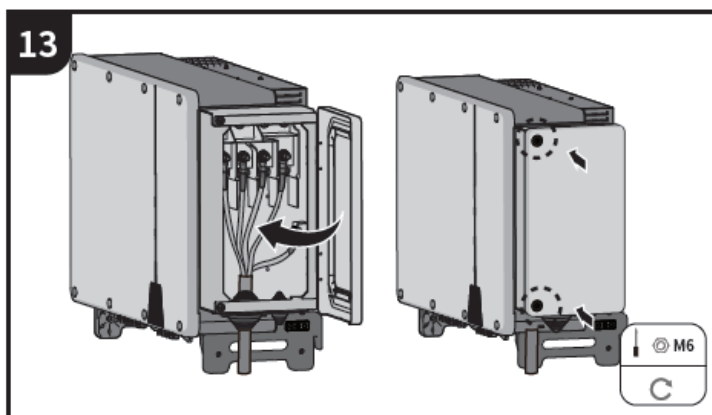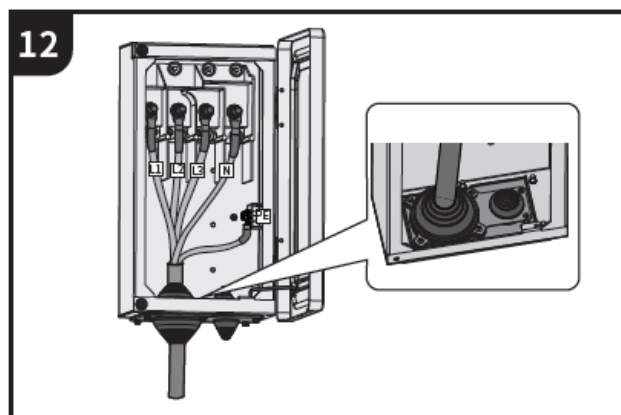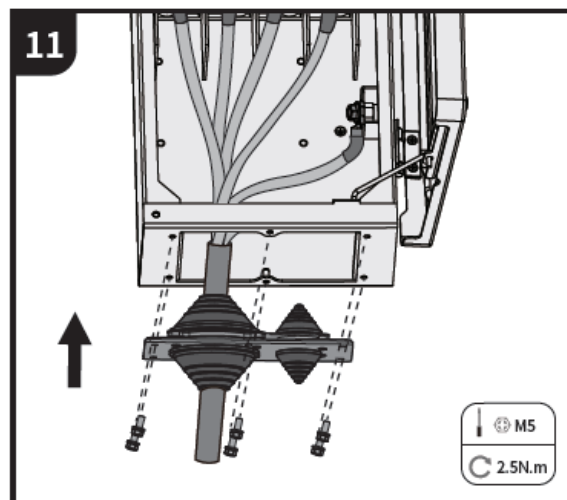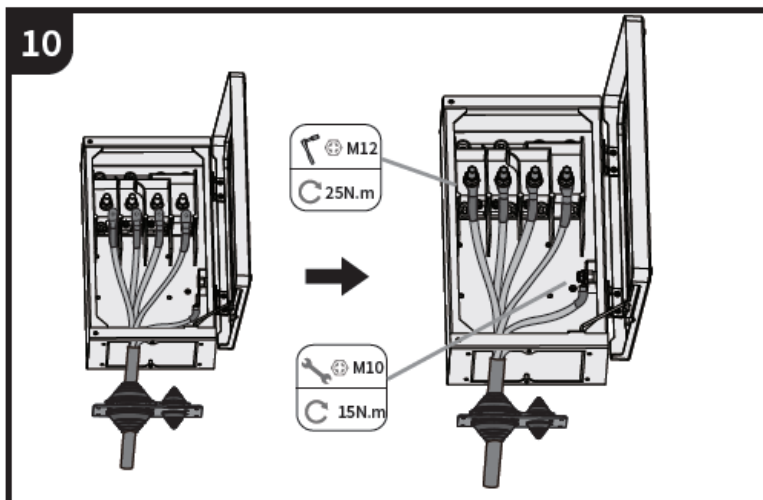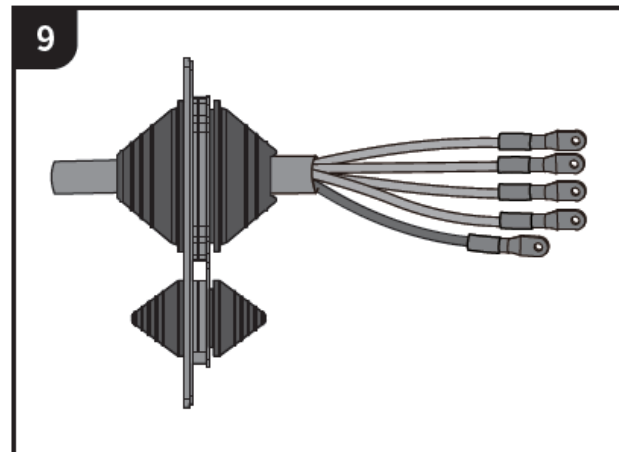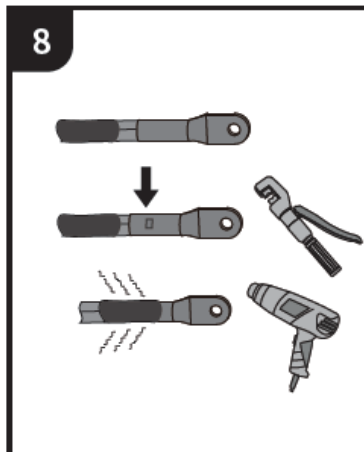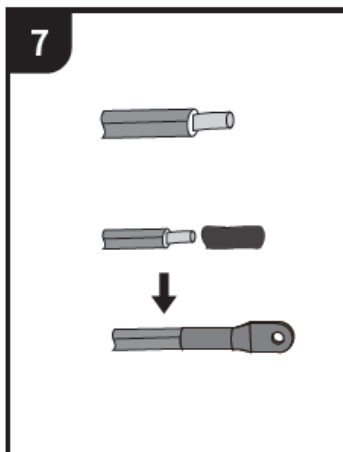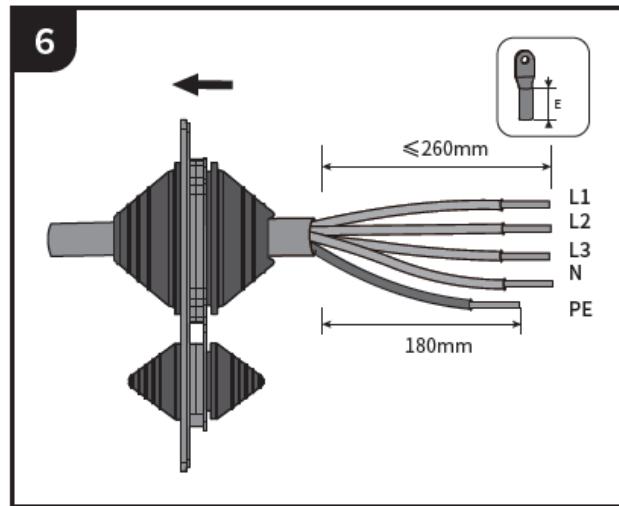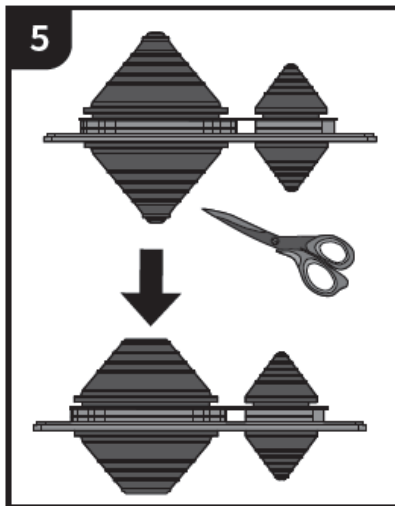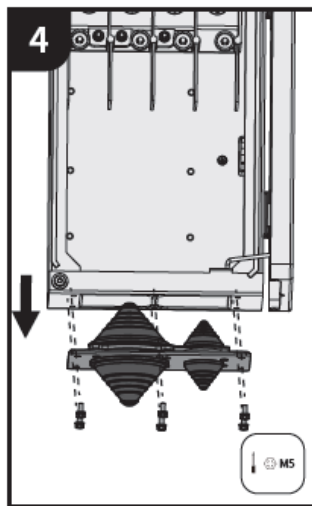








DC connection

- TYPE 1 – Phoenix Contact

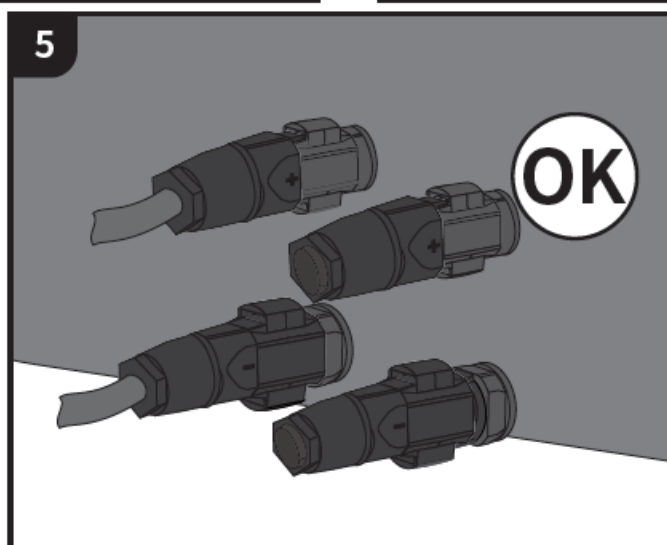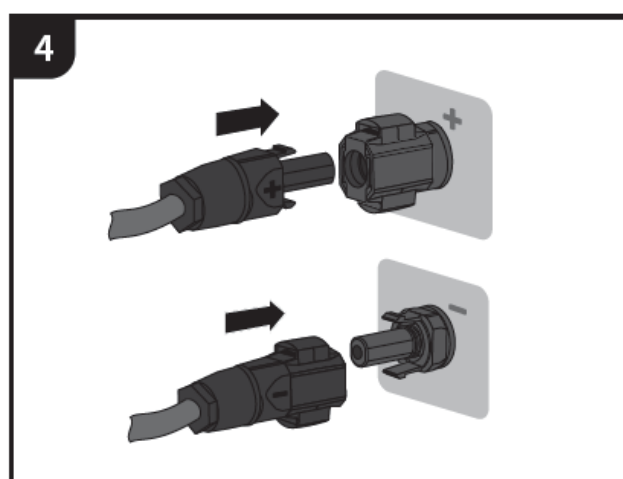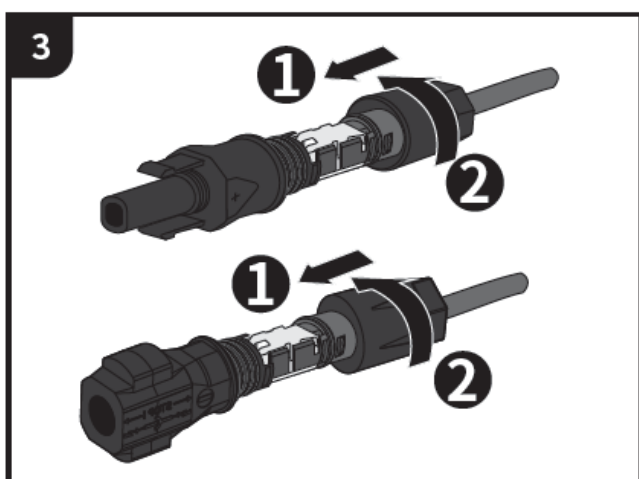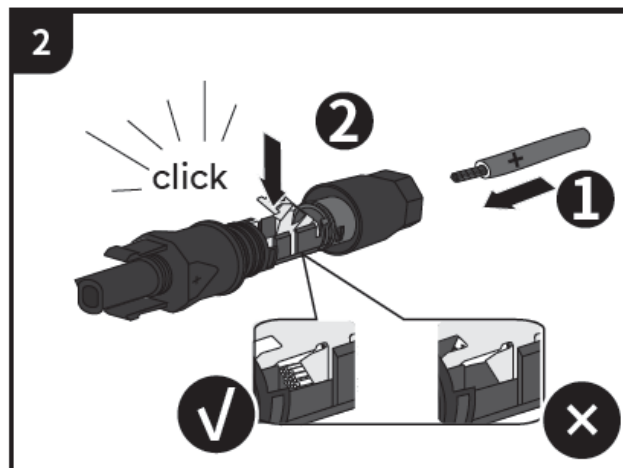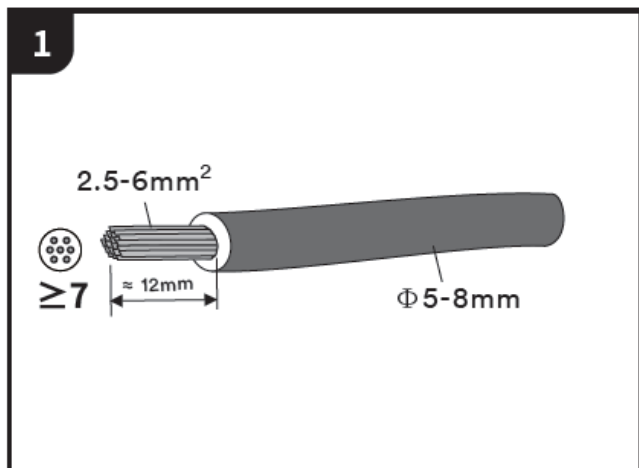






## TYPE 2



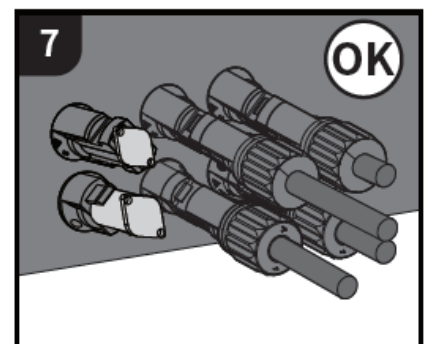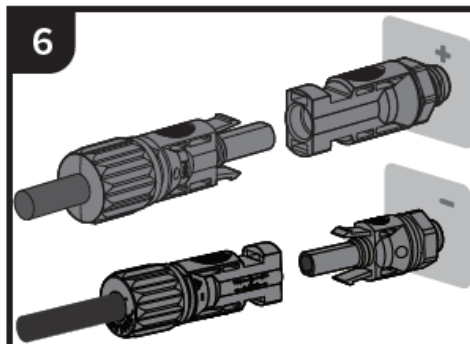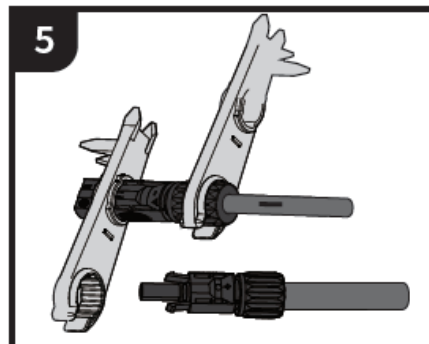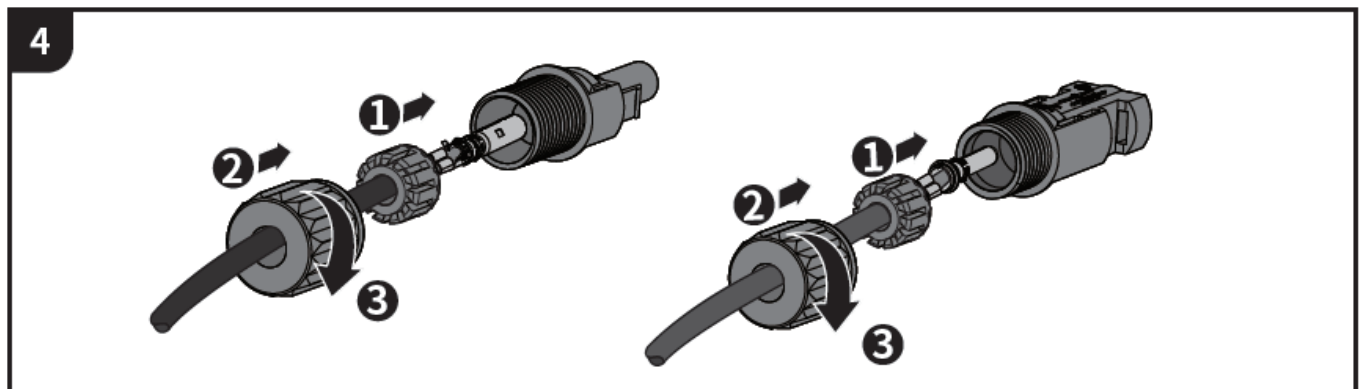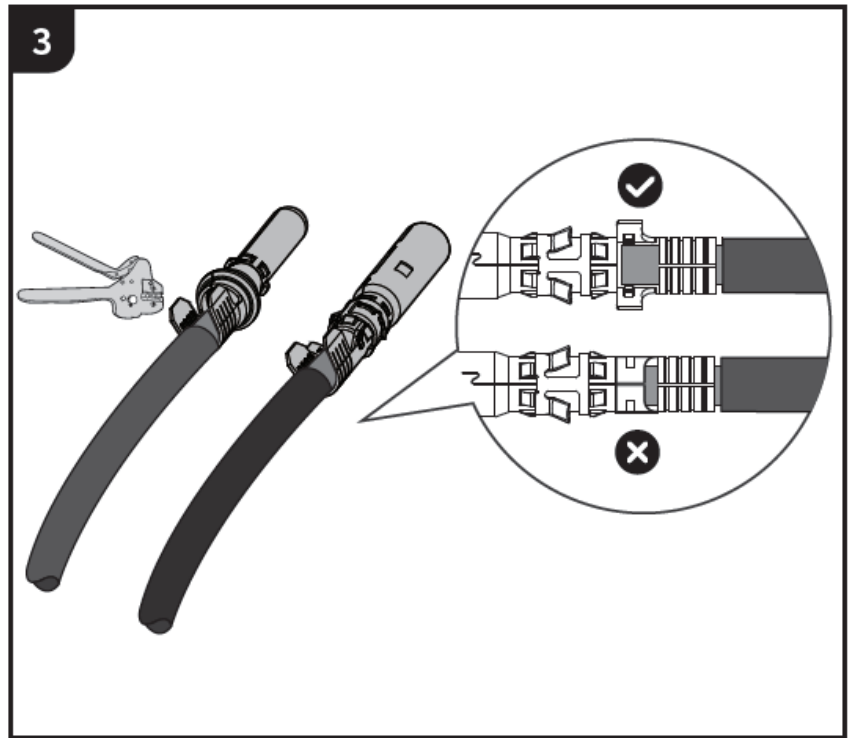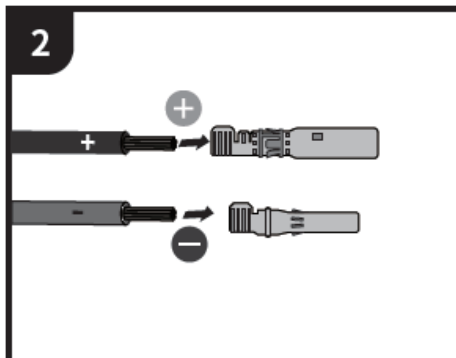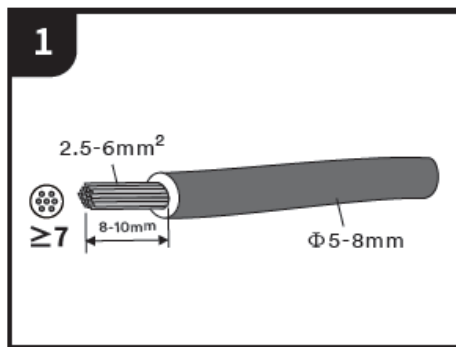



RS485 cable connection

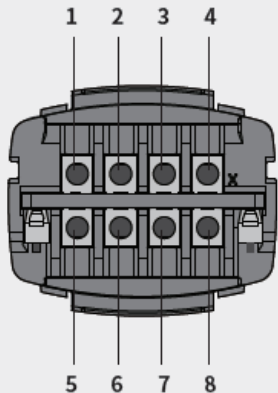	PORT	PIN	DEFINE	DESCRIPTION
	COM2	1/5	+8VA_SELV	Communication device for connection to State Grid c Dispatch (SGD)
		2/6	GND_SELV	
		3/7	RS485A	
		4/8	RS485B	
	COM3	1/5	+8VA_SELV	Used for cascading inverters or connecting to devices such as the Data Logger, smart meter
		2/6	GND_SELV	
		3/7	RS485A	
		4/8	RS485B	

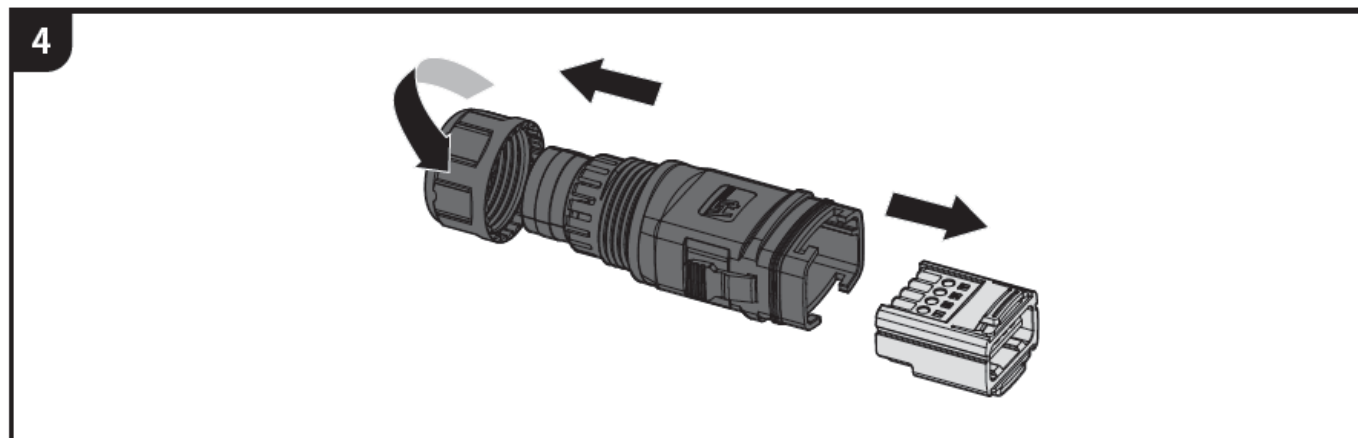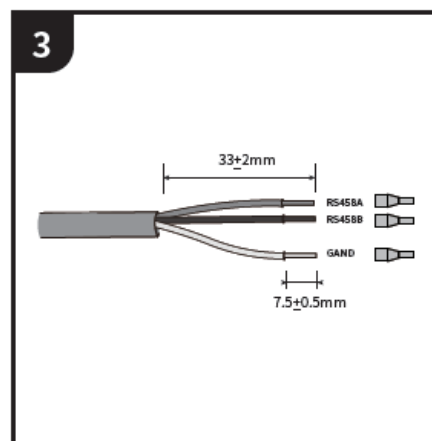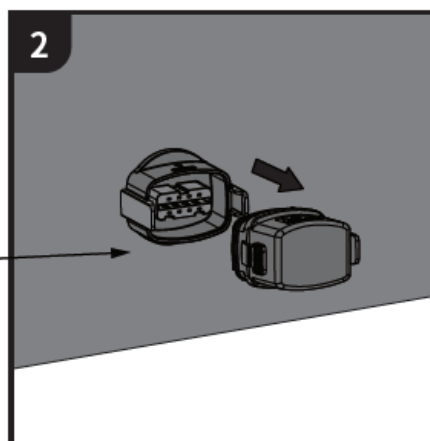
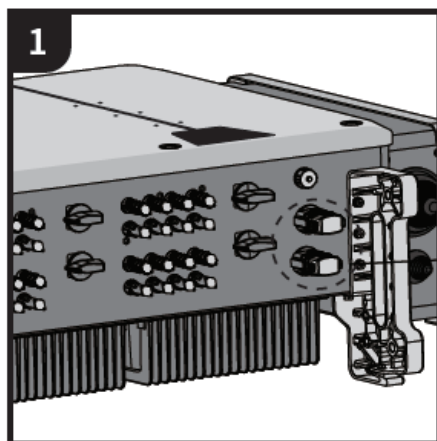





6/1

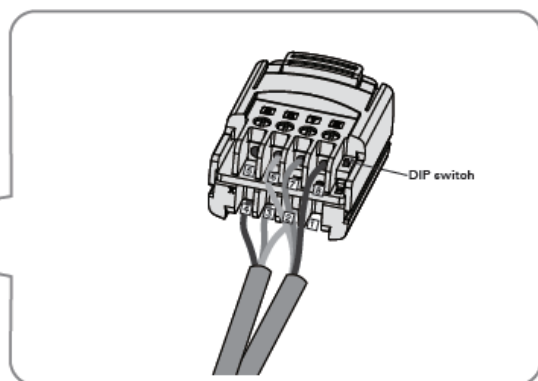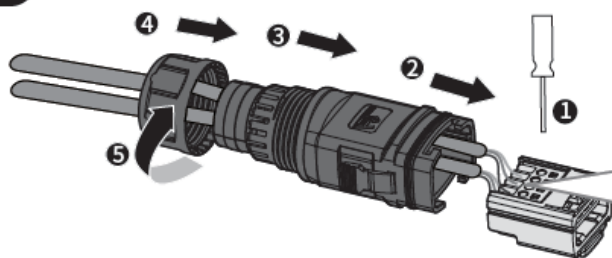


6/2

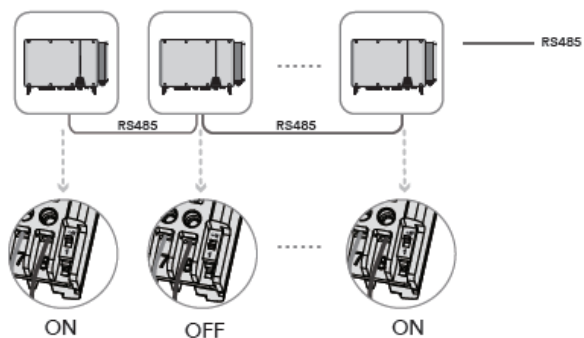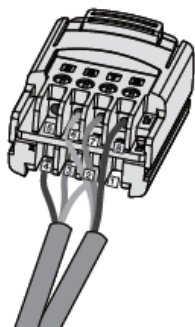










7

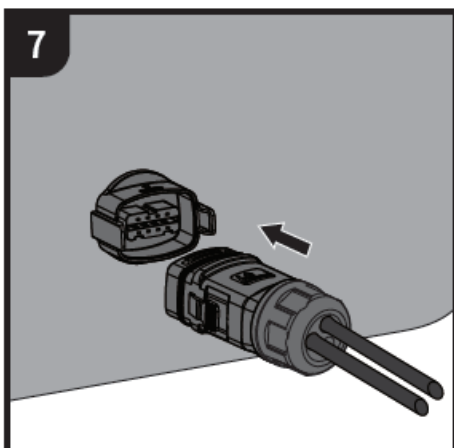

8

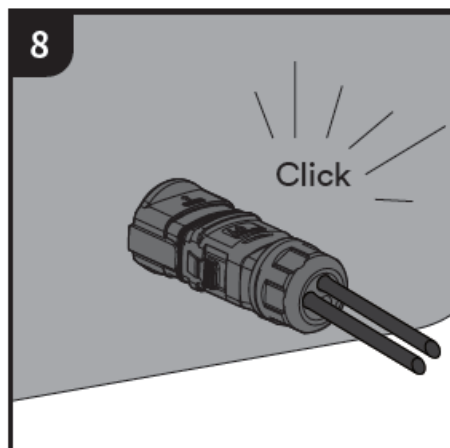

Ai-Dongle connection

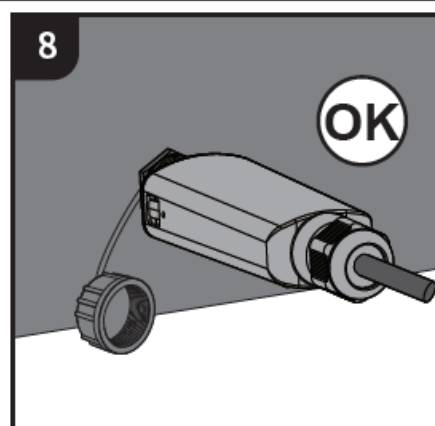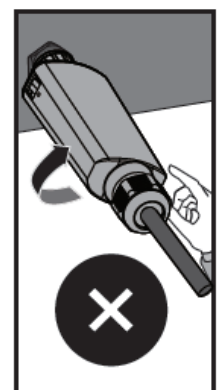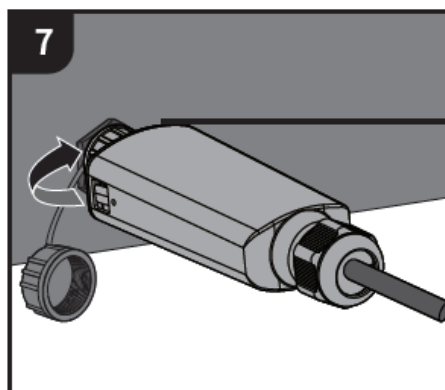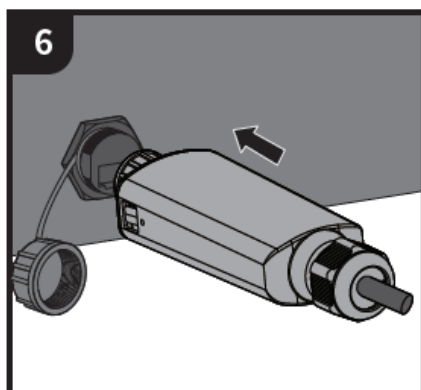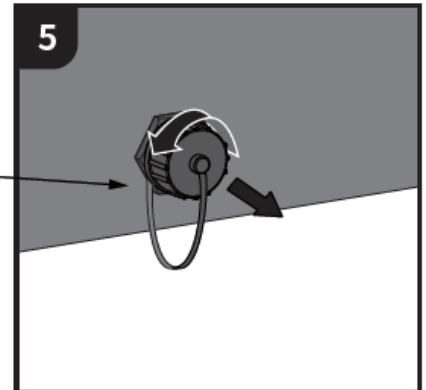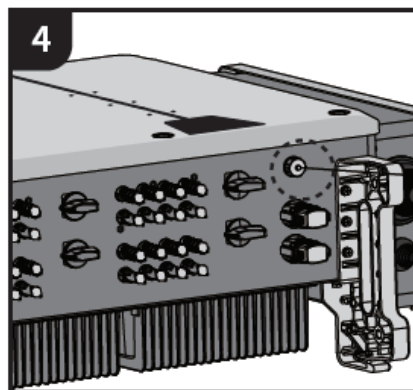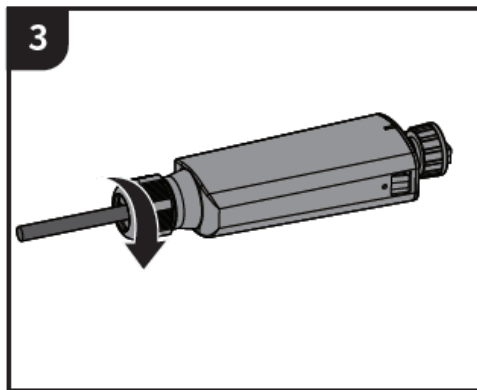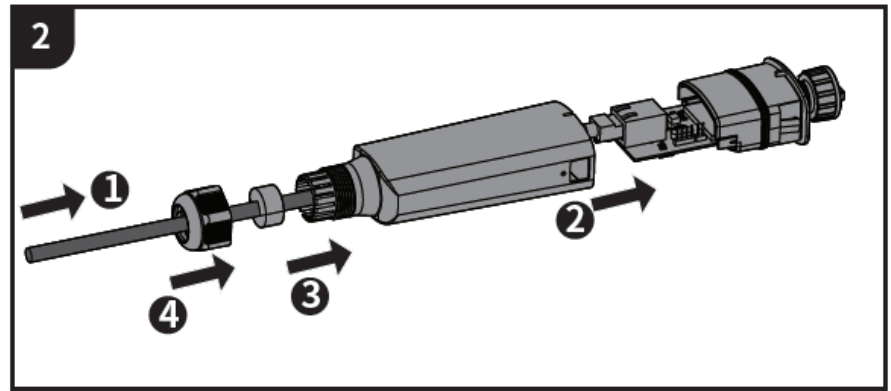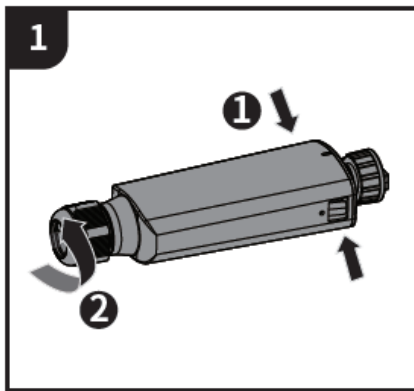

AISWEI Technology Co., Ltd.

**Documents / Resources**



[Solplanet ASW75K-LT Three Phase Inverters](#) [pdf] Installation Guide  
ASW75K-LT Three Phase Inverters, ASW75K-LT, Three Phase Inverters, Phase Inverters, Inverters

## References

- [🌐 Marbella & Costa del Sol real Estate | Lovely Planet Properties](#)
- [📞 Contact Solplanet | Get in Touch | Solplanet](#)
- [📖 User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.