



Fires SLE42s
Electric Stove



Solution Fires SLE42s Electric Stove Instruction Manual

[Home](#) » [Solution](#) » Solution Fires SLE42s Electric Stove Instruction Manual 

Contents

- [1 Solution Fires SLE42s Electric Stove](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Installation and Operating Instructions](#)
- [5 Product Dimensions](#)
- [6 Technical Data](#)
- [7 Technical Parameters](#)
- [8 Operational Instructions](#)
- [9 Cleaning, Servicing and Maintenance](#)
- [10 Troubleshooting](#)
- [11 Frequently Asked Questions \(FAQ\)](#)
- [12 Documents / Resources](#)
 - [12.1 References](#)
- [13 Related Posts](#)



Solution Fires SLE42s Electric Stove



Product Information

Specifications:

- **Model:** SLE42s
- **Technology:** etronic 3D flame
- **Suitable for:** Well-insulated spaces or occasional use
- **Compliance:** European Safety Standards EN60335-2-30, EMC EN55014, EN60555-2, and EN60555-3
- **Directives:** EEC Directives 2006/95/EC and 2004/108/EC Feb 2024 V3

Product Usage Instructions

This product is only suitable for well insulated spaces or occasional use.

To be left with the customer after demonstrating the features of the Solution SLE42s electric fire.

The complete installation must be carried out in accordance with current Standards and Local Codes. The instructions in this manual must be followed to ensure safe operation of the appliance. It should be noted that the requirements and this publication may be superseded during the life of the Stove.



The product complies with the European Safety Standards EN60335-2-30 and the European Standard Electromagnetic Compatibility (EMC) EN55014, EN60555-2 and EN60555-3. These cover the essential requirements of EEC Directives 2006/95/EC and 2004/108/EC

Important Safety Advice:

When using electrical appliances, basic precautions should be followed to reduce the risk of fire, electric shock, and injury to persons.

Warnings:

1. **Damage:** If the appliance is damaged, check with your retailer before installation and operation. Do not use if any part is damaged.
2. **Overheating:** Do not cover the heater or place it below, above, or in front of a fixed socket outlet or electrical

connection box.

3. **Occupied Rooms:** Do not use the heater in small rooms occupied by persons not capable of leaving on their own without constant supervision.
4. **Obstruction:** Do not cover or obstruct the heat outlet grille or obstruct air circulation around the appliance.
5. **Placement:** Do not place material or garments on the appliance or obstruct air circulation with curtains or furniture.
6. **Outdoors:** Do not use the appliance outdoors.
7. **Resetting Hazard:** Do not connect the appliance to a circuit regularly switched on and off by a timer or external switching device.
8. **Burns:** Some parts of the appliance can become very hot, causing burns, especially with children and vulnerable people present.

Cautions:

1. **Water Contact:** Do not position the heater where it may come into contact with water.
2. **Control:** Only control the appliance using manual operations or the supplied remote control. Do not use with automatic switching devices.
3. **Faults:** In the event of a fault, unplug the heater.
4. **Unplugging:** Unplug the appliance when not required for long periods.

WARNING:

If the appliance is damaged, check immediately with your retailer before installation and operation. The heater must not be used if any part of it is damaged.

WARNING:

In order to avoid overheating, do not cover the heater. The heater must not be located immediately below, above or in front of a fixed socket outlet or electrical connection box.

WARNING:

Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.

WARNING:

The appliance carries the Warning Symbol indicating that it must not be covered or has a 'Do not cover label'. Do not cover or obstruct in any way the heat outlet grille. Overheating will result if the appliance is accidentally covered.

WARNING:

Do not place material or garments on the appliance, or obstruct the air circulation around the appliance, for instance by curtains or furniture, as this could cause overheating and a fire risk.

CAUTION:

Do not use outdoors.

CAUTION:

In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.

CAUTION:

Some parts of this appliance around the heater grill can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.

CAUTION:

The heater must not be positioned or used where it may come into contact with water, for example, but not exclusively, in wet rooms, bathrooms, swimming pools, laundries or used to dry clothes.

CAUTION:

Some parts of this appliance can become very hot and cause burns.

CAUTION:

Only control the appliance using the manual operations or the supplied remote control described in this manual. Do not use this heater with a programmer, timer, separate remote control system or any other device that switches the heater on automatically.

- In the event of a fault unplug the heater.
- Unplug the appliance when not required for long periods.
- This appliance is supplied with a power lead complete with a molded 13 Amp UK three-pin plug to connect to a standard UK socket outlet. This appliance must be earthed. The plug must be easily accessible after siting the appliance. Should a new fuse be required, consult a competent person to establish the reason for the fuse failing. Only once the fault is rectified should a new 13A fuse be inserted into the plug.
- Use only a dry duster or vacuum cleaner with a brush attachment to clean the appliance. Never use abrasive cleaners, water, steam cleaners or aerosols on or near the appliance.
- This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given instruction concerning use of the appliance in a safe way or are supervised and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be carried out by children without supervision.
- Children of less than 3 years should be kept away from the appliance unless continuously supervised.
- Children aged from 3 years to 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given instruction concerning use of the appliance in a safe way or are supervised and understand the hazards involved.
- Children aged over 3 and less than 8 years shall not plug in, regulate, clean nor maintain the appliance.
- Children of any age should not be permitted to play with the appliance or its controls.
- If the supply cord is damaged, switch off the mains power at the wall socket immediately. It must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard.
- Do not use the appliance in rooms with explosive gas (e.g. petrol) or while using inflammable glue or solvent (e.g. when gluing or varnishing parquet floors, PVC etc.)
- Do not insert any objects into the appliance.
- This appliance must be connected to a 220/240V AC 50Hz supply.

Remote Control Battery Warning:

Only adults should handle the batteries. Do not allow a child to use the remote control unless the battery cover is securely attached to the battery compartment. All batteries must be disposed of at your local recycling point.

Box Contents:

Please check that the following components are included within the box. If anything is missing or damaged, please contact the retailer and do not use the appliance until you have everything.


- Appliance with trailing lead.
- Remote control hand set.
- Optional flue collar.
- Instruction manual.
- SLE42s with Premium Log Set also includes a bag of wood chippings.

Installation and Operating Instructions

Locating the Unit

Before commencing installation of the unit consideration should be given to the following:

1. Position in the area to be heated, central locations are usually best.
2. Allowances for proper clearances to combustibles (see Fig 1) .
3. Allowances for proper clearances for maintenance work (see Fig 1).
4. Consider a location where the glass screen will not be exposed to direct sunlight from windows and doors to avoid unwanted reflection.
5. Select a location that is not prone to moisture.
6. A 13 amp, 240 Volt socket capable of accommodating a maximum load of 2050 watts must be available close to the appliance. The socket must be accessible at all times and must not be placed directly behind the unit.
7. This appliance is approved to be portable or fixed. To fix the stove ensure it is sited on a flat, level and firm surface. Use a two part epoxy glue across the whole base.

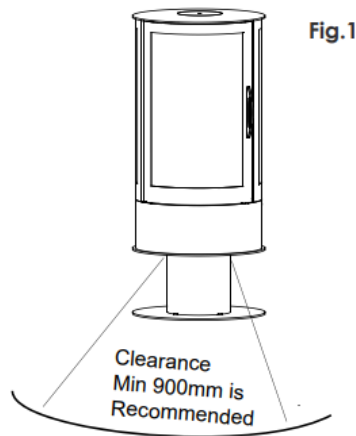

ENSURE THAT THE STOVE IS SITED ON A FIRM FLAT SURFACE MAKING SURE IT IS STABLE.

Unpacking and Testing

Carefully remove the unit from the packaging and prior to installing the unit, test the unit by plugging the power supply into a conveniently located 13 amp grounded socket.

Your Appliance is supplied with the following items:

- Remote Control (2xAAA Batteries included)



Fig.2



Fig.3

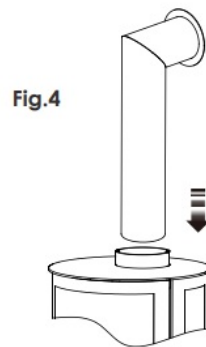



Fig.4

Installation – Flue Pipe (Optional)

If you have chosen to purchase an optional decorative flue pipe; Remove the top Flue Cover by unscrewing one countersunk head screw on the top plate. (Fig.2). Insert the provided Collar into top recess and secure with removed screw. (Fig.3) Insert and fit the Flue Pipe into the Collar. (Fig.4) Securely fit to the wall.

Product Dimensions

Fig.5

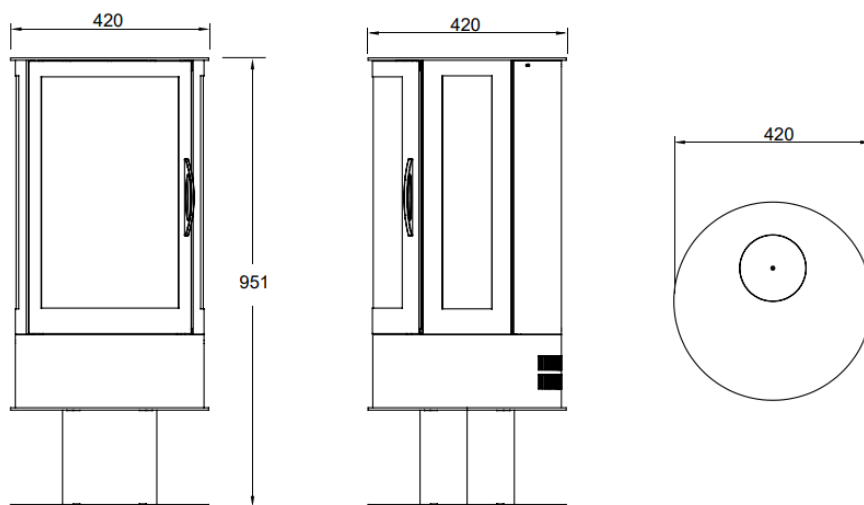

Note: Dimensions stated are in millimetres unless otherwise stated and may be subject to a small tolerance.

Technical Data

Voltage	220-240V AC ~50-60 Hz
Max Power	1700-2000W
No Heater	10W
Motor Heater	12W
Gross Weight (kgs)	45kg
Efficiency Rating	A

Commissioning and Handover

On completion of the installation:

- Ensure that the operating instructions for the unit are left with the customer.
- Ensure to advise the customer on the correct use of the appliance and how to isolate the unit when required.
- Advise the user what to do should smoke or fumes be emitted from the unit.


Technical Parameters

Information requirements for electric local space heaters

Model identifier(s): SLE42S/HS93383LR					
Item	Symbol	Value	Unit	Item	Unit
Heat output				Type of heat input, for electric storage local space heaters only (select one)	
Nominal heat output	P_{nom}	2.0	kW	manual heat charge control, with integrated thermostat	[no]
Minimum heat output (indicative)	P_{min}	1.0	kW	manual heat charge control with room and/or outdoor temperature feedback	[no]
Maximum continuous heat output	$P_{max,c}$	2.0	kW	electronic heat charge control with room and/or outdoor temperature feedback	[no]
Auxiliary electricity consumption				fan assisted heat output	[no]
At nominal heat output	el_{max}	N/A	kW	Type of heat output/room temperature control (select one)	
At minimum heat output	el_{min}	N/A	kW	single stage heat output and no room temperature control	[no]
In standby mode	el_{sb}	0.33	W	Two or more manual stages, no room temperature control	[no]
				with mechanic thermostat room temperature control	[no]
				with electronic room temperature control	[no]
				electronic room temperature control plus day timer	[no]
				electronic room temperature control plus week timer	[yes]
				Other control options (multiple selections possible)	
				room temperature control, with presence detection	[no]
				room temperature control, with open window detection	[yes]
				with distance control option	[no]
				with adaptive start control	[no]
				with working time limitation	[no]
				with black bulb sensor	[no]
Contact details	Capital Fireplaces Ltd, Units 12-17 Henlow Trading Est, Henlow, Bedfordshire SG16 6DS				

Operational Instructions

Fig.6

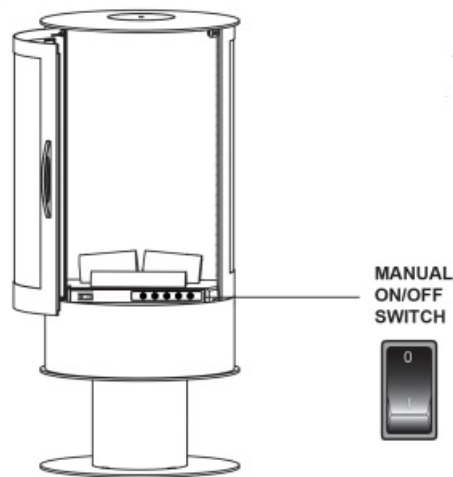


NOTE:

The unit can be operated by supplied remote control only. For the unit to operate, the manual ON/OFF switch, located on the leftside of the switch panel must be switched to the “I” position.

Behind the screen a red light will illuminate when the fire is plugged in, the wall socket switch is on and the manual on/off switch is on. The red light will remain illuminated for 10 seconds to show there is power to your fire.

Remote Control Buttons and Display

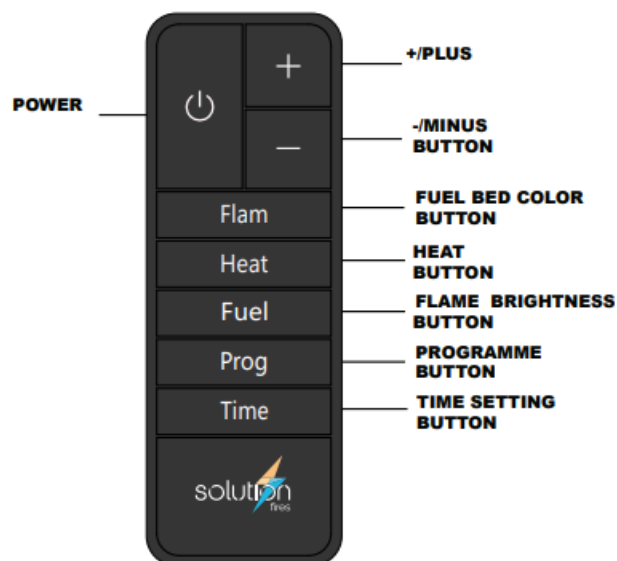

NOTE:

Before attempting any operation with the remote, press and slide the battery door (on the back of remote) open and insert two AAA batteries, checking that the + and – ends of the battery match inside the battery compartment, close the battery door.

NOTE:

The unit may emit a slight, harmless odour and smoke when first used. This odour & smoke is normal and it is caused by the internal heating of the internal heater parts and will not occur again.

NOTE:

The functions below can be controlled either by the keyboard or remote control. Before using either control method, please ensure that the manual ON/OFF switch is to the “I” position.

Powering ON/OFF the Fireplace

Press the Power button to supply power to all functions of the fireplace and put the fireplace in a standby mode and the current room temperature in the vicinity of the fireplace will be shown on the display. Press the Power button again to turn off all functions.

NOTE:

All previous settings are held in memory, so the next time you power up the fireplace, the unit will turn on with the same settings.

Target Temperature Settings OR handset

Adjust the target temperature to the desired setting (15° to 30°C Range) using the +/PLUS & -/MINUS- See Fig. 20

NOTE:

The target temperature must be above the room temperature for the heating function to operate.

HEAT or Heat on handset

Press the Heater button to select Full Heat (2000W) – H2 with the red flame symbol will be displayed -see Fig. 21
Press the Heater button again to select Half Heat (1000W) – H1 with the orange flame symbol will be displayed - see Fig. 22

NOTE:

On either heat setting, the heat function will turn off when the room temperature reaches the target temperature. The heat function will automatically restart when the room temperature drops 3°C below the target temperature. Press the Heater button again to turn off the Heater function.

NOTE:

The fan will run for approximately 15seconds after the Heating function is turned off to remove any residual heat for the unit to protect the control components from any potential overheating.

Fig.20



Fig.21



Fig.22



Fig.23



Open Window Device function: (additional hidden functions)

This appliance has an open window detection function, When the heater is on operation (H1 or H2), if the ambient temperature drops 5°C within 10 minutes, the digital display will show . It means there is window or door open or or there may be another reason the temperature has dropped suddenly. When this happens, the heater will turn off. To restart the heaters, ensure the reason for the sudden temperature drop is resolved and then turn the heater

back on.

Fuel Bed Colour

The brightness setting of the fuel bed colour can be adjusted by pressing the fuel bed button to select from the following levels-see Fig. 24

- C High Setting
- H Intermediate/Central Setting
- L Low Setting

Fig. 24



FLAME BRIGHTNESS BUTTON

The brightness setting of the Flame Picture can also be adjusted by pressing the Brightness button to select from the following levels Fig. 25

- H – High Setting
- C – Intermediate/Central Setting
- L – Low Setting

Fig. 25



Operation- OPERATION CONTINUED-BY REMOTE CONTROL ONLY

1. Setting the Time & Day (24 Hour Clock)
2. Press the Power button to turn the unit on.
3. Press & hold the Time Setting button for two seconds to display the time & day Fig 26 (no numbers shown as time not set).
4. Press the Time Setting button & the day you are setting will flash – see Fig 27.
5. Adjust the day setting using the + / PLUS & - / MINUS
6. Press the Time Setting button & the hour you are setting will flash. Adjust the hour setting using the + /PLUS & - /MINUS buttons.
7. Press the Time Setting button & the minute you are setting will flash. Adjust the minute setting using the +/PLUS & -/MINUS buttons.

8. Press the Time Setting button to set the time & exit the time/date set-up.

Fig. 26



Fig. 27



Setting the Weekly Timer

The Timer allows for two ON/OFF periods (M1/M2) for each day of the week and the timer can be set using the following procedure:

1. Press the Power button to turn the unit on.
2. Press & hold the Prog for two seconds to enter the timer settings. The settings for the 1st ON/OFF period (M1) for Monday will be shown with the 1st ON time & hour setting flashing – see e Fig 28.
3. The green “on” light bulb signifies that you are setting the on time.
4. Adjust the hour setting using the Temp + & Temp – buttons and press the Time Setting button to select the minute setting. With the minute setting flashing, adjust the minute setting using the + / PLUS & – / MINUS buttons.
5. Press the Time Setting button & the display will move to the 1st OFF time setting – see Fig 30. The red “off” light bulb signifies that you are setting the off time.
6. Repeat steps 2 & 3 to set the 1st OFF time.
7. Press the Time Setting button & the display will move to the 2nd ON/OFF period (M2) with the 2nd ON time setting displayed.
8. Repeat steps 2 to 5 to set the 2nd ON/OFF period Fig 30.
9. Press the Time Setting button & the display will move to the 1st ON/OFF period (M1) for Tuesday with the 1st ON time setting displayed.
10. Repeat steps 2 to 8 for Tuesday’s settings and repeat this process for Wednesday to Sunday’s settings.
11. Having confirmed Sunday’s settings, exit the timer settings by not using the remote for 10 seconds and the unit will default into normal operating mode.

To activate the timer settings, press the Timer Mode button until the timer symbol is displayed on the screen -see Fig 31.

Fig. 28



Fig. 29



Fig. 30



Fig. 31



NOTE:

The time & day must be set before the Timer Mode can be activated. The unit can still be operated normally when in the timer mode using the Heater function.

Thermal Safety Cut-Out

A thermal safety cut-out is incorporated in the heater to prevent damage due to overheating. This can happen if the heat outlet is restricted in any way. The heater will switch on once the obstruction has been removed and the heater has cooled. If the cut-out continues to operate intermittently, the heater should be switched off and a service agent contacted.

Light Emitting Diode

This fire is fitted with LED (Light Emitting Diode) bulbs in place of traditional incandescent bulbs. These generate the same light levels as traditional bulbs, but use a fraction of the energy consumed.

Cleaning, Servicing and Maintenance

NOTE:

There are no user-serviceable components to this appliance. If there are issues that cannot be resolved with your appliance, then please contact your retailer. Allow the product to completely cool before handling or cleaning it.

1. Switch off and unplug from the power supply before cleaning.
2. Do not allow water or other liquids to run into the interior of the product, as this could create a fire and/or electrical hazard.

CAUTION: Do not use harsh detergents, chemical cleaners or solvents as they may damage the surface finish or the plastic components.

3. Hard floor coverings in particular, but all floor coverings cause fluff that can be drawn into the air intake. From time to time and no less than every two months, isolate the fire from the mains and attach the brush accessory to your vacuum cleaner and gently vacuum the air intakes and outlets.

Battery Replacement Remote Control

1. Slide open the battery cover on the back of the remote control
2. Install AAA batteries into the remote control
3. Replace the battery cover



Fig.35

Discard leaky batteries

Dispose of batteries in the proper manner according to local regulations. Any battery may leak electrolyte if mixed with a different battery type if inserted incorrectly if all the batteries are not replaced at the same time, if disposed of in a fire, or if an attempt is made to charge a battery not intended to be recharged.

Troubleshooting

(IF IN DOUBT isolate the appliance and seek professional advice)

The unit does not switch on:

- To make sure it is safe to do so, check the mains supply.
- Making sure it is safe to do so, check the fuse in the mains supply.
- Check main power on/off switch is on and red light behind screen illuminates.
- Change the battery in the remote control handset.
- If none of the above work, then please refer to your retailer.

The heater smells of burning:

- On first uses there may be a smell as the heating elements burn off residual deposits from manufacture.
- After periods of no use, dust can settle on the elements and will burn off. Excessive dust and fluff is a fire risk and should be eliminated by following the service and maintenance steps above.

When the heater is switched on it cuts itself off.

- This could be the normal operation of the thermostat having been set to a target temperature, and is fine.
- This could be the safety thermal cut-out device operating. If this operates, then firstly isolate the appliance from the mains and then check for obstructions to the air flow and remove them. This could be fluff under the fire, for example. Once the obstruction(s) have been removed, let the appliance cool down for 15 minutes and then reconnect the appliance to the mains and try the appliance again. If the issue persists, then seek the advice of a

competent person or your retailer.

The appliance seems to work, but no lights are illuminated.

- Check the flame effect and fuel bed lights have not been turned off from the remote.
- Please refer to your retailer if your fire is not operating correctly after re-reading these instructions.

The fuel bed flickers

- This is normal and is a feature of the appliance giving a realistic flickering ember effect.

My fire makes some sounds

Your fire will make some sounds during normal operation. There are three sources of sound:

1. Switch/thermostat

- During operation these will make quiet clicking sounds and will occur when your heater fan and heating elements are switched on or off.

2. Flame Effect

- To ensure you experience a slow and relaxed flame effect speed, the electric motor provides its drive via an internal gearbox that will emit a faint gear noise.

3. Fan Heater

- just like any fan heater there will be the sound of air being blown into the room. The thermostat reading on the screen does not match the room temperature.
- The thermostat reading is of the ambient temperature in the immediate vicinity of the fire. It may be necessary to set a higher target temperature in some instances.

Remote control functions not working.

- Check batteries.
- Remove and replace batteries to “reboot” the handset.
- Double check you did not turn the fire off having set the fire to “dark” by pressing the flame picture button with the handset in its “on” mode.
- Ensure your handset is pointing towards the fire.

My 7-day program has not worked.

- Please ensure you have pointed the controller at the flame picture during all steps of the programming and that the fire is on during all steps too.
- Double-check that you have followed step 13 on page 11.

Correct Disposal Of This Product

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please contact the retailer where the product was purchased. They can take this product for environmental safe recycling.



Solution Fires Warranty

For Warranty information, terms and conditions and to register for an extended Warranty please scan the QR code below. Alternatively please visit www.solutionfires.co.uk/warranty/



www.solutionfires.co.uk

info@solutionfires.co.uk

Capital Fireplaces,

Units 12-17 Henlow Trading Est,

Henlow, Bedfordshire SG16 6DS

Frequently Asked Questions (FAQ)

Q: Can this electric fire be used in wet rooms or bathrooms?

A: No, this electric fire must not be used in wet rooms, bathrooms, swimming pools, laundries, or where it may come into contact with water.

Q: Is it safe to cover the heater?

A: No, do not cover the heater to avoid overheating. Ensure it is not located immediately below, above, or in front of a fixed socket outlet or electrical connection box.

Q: Can children operate this appliance?

A: Children should not operate this appliance unsupervised, especially in small rooms. Constant supervision is required for rooms occupied by persons not capable of leaving on their own.

Documents / Resources

	Solution SLE42saSLE42s Stoves By Solution Fires [pdf] Instruction Manual SLE42s Stoves By Solution Fires, SLE42s, Stoves By Solution Fires, Solution Fires, Fires
-------------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

References

- [Electric Fires, Stoves & Inset Fires from Solution Fires | Warranty](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.

