somfy 1 And 5 Channel Ysia Zigbee Controls





somfy 1 And 5 Channel Ysia Zigbee Controls User Manual

Home » somfy » somfy 1 And 5 Channel Ysia Zigbee Controls User Manual

Contents

- 1 somfy 1 And 5 Channel Ysia Zigbee Controls
- **2 PRODUCTS MAIN FUNCTIONALITIES**
- **3 COMPATIBLE END PRODUCTS**
- **4 BENEFITS FOR PROFESSIONALS**
- **5 TECHNICAL SPECIFICATIONS**
- 6 BUTTONS & INDICIATOR GUIDE FOR END
- **7 BUTTONS & INDICIATORS FOR INSTALLERS**
- **8 BATTERY INSTALLATION & REPLACEMENT**
- 9 YSIA FACTORY RESET INSTRUCTIONS
- 10 Documents / Resources
 - 10.1 References
- 11 Related Posts



somfy 1 And 5 Channel Ysia Zigbee Controls



The simple, elegant, versatile control for Zigbee equipment. Works as a direct control or as part of a connected TaHoma switch solution.

PRODUCTS MAIN FUNCTIONALITIES









Zigbee 3.0 technology



Open, Close, Stop & My Position



LED Information feedback. Emits a visual LED signal to confirm the order has been sent.



Compatible with TaHoma switch



Simple, quick and error pairing through TaHoma Pro



Available in 1 & 5 channels. Control individual or a group of Zigbee equipment



Battery level feedback of a Ysia control can be seen in TaHoma by Somfy or TaHoma pro applications only.



Compatible with Philips Hue Lighting & Smart plug (on/off)



Compatible with Somfy Izymo Zigbee receivers

COMPATIBLE END PRODUCTS



Roller Roman Blinds Blinds



Pleated & Cellular



Zebra



Sheer



Venetian Blinds



Curtain



Izymo on/off Lighting Receiver



Izymo motor Receiver



Philips Hue smart plug (on/off)



Philips Hue lighting (on/off)

BENEFITS FOR PROFESSIONALS

Convenience

- Compatible with a wide range of Somfy Zigbee 3.0 equipment and Zigbee 3.0 partnering products.
- Control one individual or one group of motorised Zigbee products per channel.

Easy Installation

- Sleek, modern look; adding a touch of elegance to every décor.
- LED feedback for easy troubleshooting and installation.

Easy programming and adjustment with TaHoma® pro

• Simple, error free programming and pairing through TaHoma Pro application.

BENEFITS FOR END USERS

Convenient and smart


- Effortlessly controls your motorized Zigbee 3.0 products
- MY Button saves a favorite position for quick and easy access.
- Comes with a discreet wall mount (White)
- · Available in 1 and 5-channel options
- · Compatible with TaHoma switch
- Seamlessly works in either a standalone or TaHoma solution set up.
- LED Information feedback. Emits a visual LED signal to confirm the order has been sent.
- Battery level feedback of Zigbee Ysia controls can be viewed within the TaHoma by Somfy application only.

DIMENSIONS OF CONTROL

- L1 135mm
- L2 42mm
- L3 13mm

DIMENSIONS OF WALL MOUNT

- L1 58mm
- L2 24mm
- L3 5.5mm

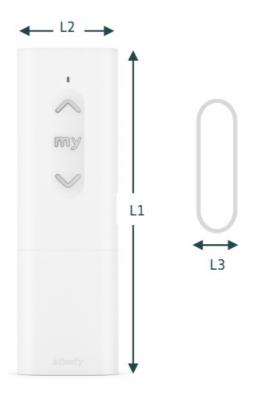

BOX INCLUSIONS

- 1 x Ysia Zigbee remote
- 1 x User guide
- 1 x Wall mount
- 2 x Screws and anchors
- 2 x AAA Batteries


TECHNICAL SPECIFICATIONS

- Radio Protocol
 - Zigbee 3.0
- Frequency
 - 。2.4GHz
- IP Rating
 - IP20 Indoor use only
- Radio Range
 - 7m [in room: extendable with Zigbee repeaters]
- Battery Type
 - 2 x AAA batteries
- Battery Lifetime
 - 4 Years (based on 10 commands per day)
- Working Temperature
 - 0°C to 48 48°C

ITEM NUMBERS

- Ysia 1 Channel Pure
 - 1871153
- Ysia 5 Channel Pure
 - 1871154
- 5 pack Wall Supports (Spare part)
 - 9028373


BUTTONS & INDICIATOR GUIDE FOR END USERS

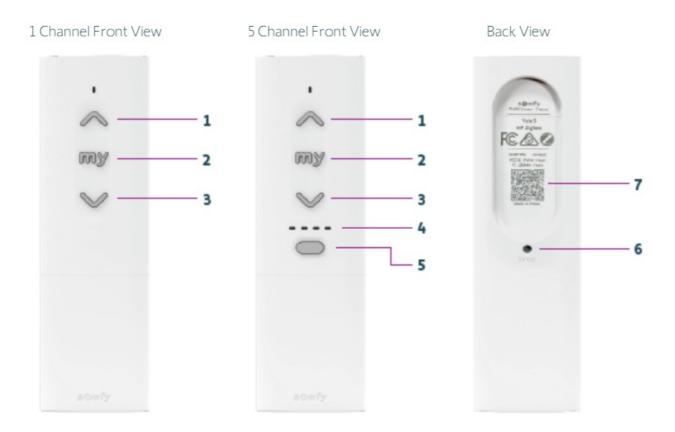

ELEMENT FUNCTION

1	UP Button	Up directional button
2	MY Button	 "my" favourite position: Press button twice STOP command: Press button once.
3	DOWN Button	Down Directional button
4	LED Indicator	Indicates Channel Selection
5	Channel Selector Button	Select channel to operate
6	Programming Button	Initiates Zigbee programming
7	QR Code	To pair transmitter with the Zigbee network

BUTTONS & INDICIATORS FOR INSTALLERS

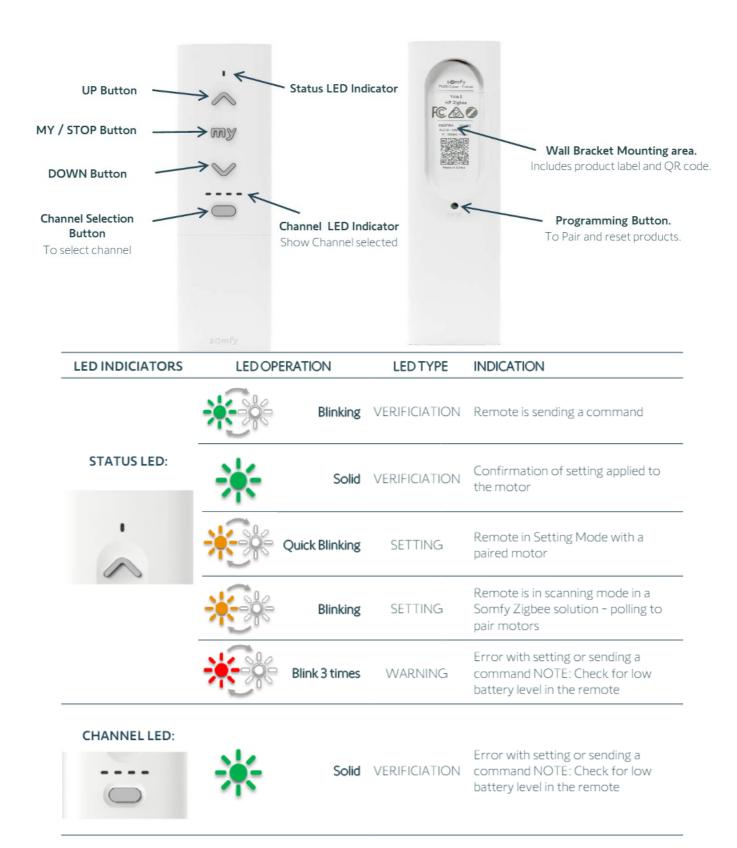

BATTERY INSTALLATION & REPLACEMENT

- 1. PRESS down on the top middle of the battery cover below the channel selector button.
- 2. SLIDE the battery cover down to remove
- 3. FOLLOW product markings for battery orientation
- 4. INSERT batteries into the correct positions
- 5. SLIDE the battery cover back into position



YSIA FACTORY RESET INSTRUCTIONS

Once the Ysia control is factory reset is complete; the remote settings cannot be recovered.

- 1. PRESS & HOLD The programming button on the remote until the LED blinks RED 3 times. NOTE the process takes approximately 15 seconds.
 - RELEASE the programming button and confirm the long blinking AMBER LED.
- 2. The remote is now in programming mode for 3 minutes.



Version 1: May 2024 SOMFY Pty Limited ABN 77 003 917 244 20/38 46 South St, Rydalmere NSW 2116 T +61 (0)2 8845 7200 somfy.au@somfy.com

Documents / Resources



somfy 1 And 5 Channel Ysia Zigbee Controls [pdf] User Manual

1 And 5 Channel Ysia Zigbee Controls, 1 And 5 Channel, Ysia Zigbee Controls, Zigbee Controls, Controls

References

• User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.