

9

# somfy 1871120 4DC IB Plus WM AC Motor Controller Instructions

Home » somfy » somfy 1871120 4DC IB Plus WM AC Motor Controller Instructions



## **Contents**

- 1 somfy 1871120 4DC IB Plus WM AC Motor Controller **Instructions**
- 2 Specifications
- **3 Product Usage Instructions**
- 4 Frequently Asked Questions (FAQ)
- **5 Documents / Resources** 
  - **5.1 References**



somfy 1871120 4DC IB Plus WM AC Motor Controller Instructions



# **Specifications**

• Supply voltage: 24 V DC

· Max rated current: Not specified

Stand-by current (IEC 62301): Not specified
 Stand-by power (IEC 62301): Not specified

• Supply voltage group control input: Not specified

• Supply voltage local push buttons: Not specified

• Max. motor current consumption: Not specified

• External overcurrent protection: Included

• Outputs: Without contact gap

• Terminals: Spring connectors

Running time per output: Configurable
Operating temperature: Not specified

• Relative humidity: Not specified

• Material of housing: Not specified

• Housing dimensions (w x h x d): Not specified

• Weight: Not specified

· Protection class: Not specified

Degree of protection: Not specifiedOvervoltage category: Not specified

• Pollution degree: Not specified

• Conformity: Ref. 1871120

## **Product Usage Instructions**

#### **OVERVIEW**

Motor Controller for interior roller blinds and interior Venetian blinds. To individually control up to four 24 V DC motors via local push buttons or in groups with any IB/IB+ controlling technology. Available in wall-mounted version (WM).



#### **Installation Features**

- Integrated 24 V DC power supply for up to four motors.
- Commissioning with animeo IB/IB+ Building Controller.
- Spring connectors and tension relief for easy installation.
- Status feedback through LEDs for monitoring.
- · Indication in case of overload for safety.


#### **Functional Features**

- Switching between manual and automatic operation for user-friendliness and energy savings.
- Local setting of intermediate position and user ergonomics.
- Configurable turning speed of slats for optimum user ergonomics with Somfy LV and LW25 motors.
- Precise slats orientation and load bars alignment.
- Upgradable for local controlling through radio Somfy RTS or EnOcean technology.

## What's in the Box

- Motor Controller 4DC IB+ WM AC
- · Safety guide
- · Optional Accessories

## **Wiring Diagram**

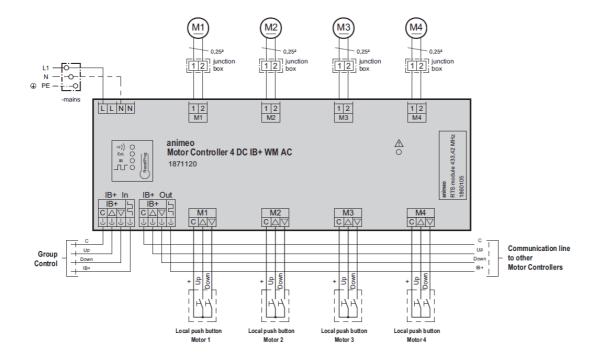

# Frequently Asked Questions (FAQ)

#### Q: Can the Motor Controller be used with external blinds?

A: The Motor Controller is designed for interior roller blinds and interior Venetian blinds. It is not recommended for use with external blinds.

# Q: How many motors can be controlled by the Motor Controller?

A: The Motor Controller can individually control up to four 24 V DC motors.

## **Documents / Resources**



somfy 1871120 4DC IB Plus WM AC Motor Controller [pdf] Instructions

1871120, 1871120 4DC IB Plus WM AC Motor Controller, 4DC IB Plus WM AC Motor Controller, AC Motor Controller, Motor Controller, Controller

### References

- Declarations of conformity
- User Manual

#### Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.