
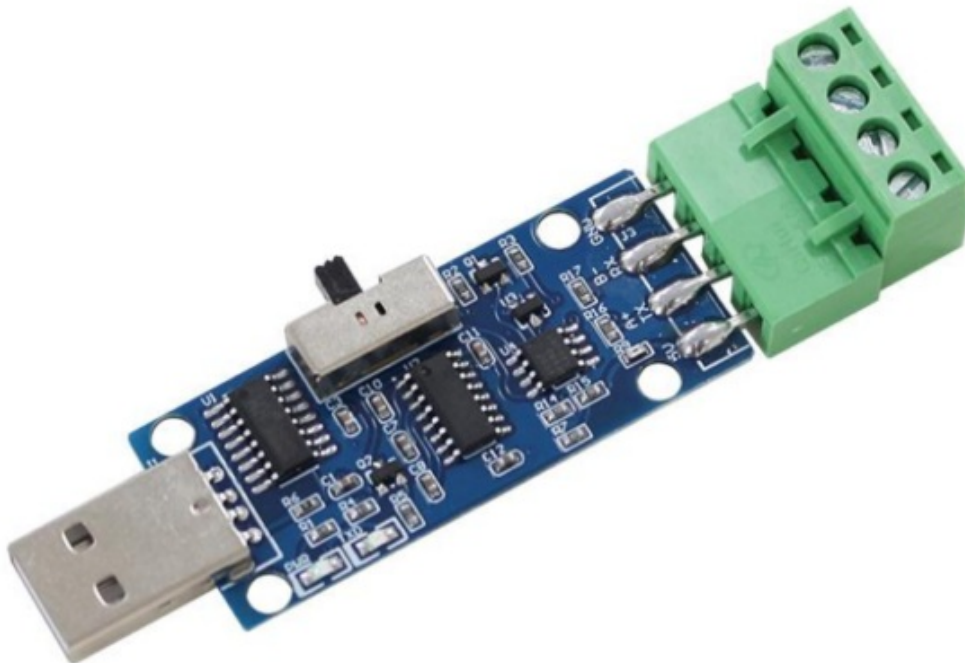


SONBUS HD813 TTL Controller User Manual

[Home](#) » [SONBUS](#) » SONBUS HD813 TTL Controller User Manual 

SONBUS

HD813
User Manual
File Version: V21.7.13



HD813 using the standard USB, easy access to PLC, DCS, and other instruments or systems for monitoring RS485, TTL state quantities. The internal use of high-precision sensing core and related devices to ensure high reliability and excellent long-term stability can be customized RS232, RS485, CAN, 40mA, DC0~5V\10V, ZIGBEE, Lora, WIFI, GPRS, and other output methods.

Contents

1 Technical Parameters

1.1 Product Size

1.2 How to wiring?

2 Disclaimer

3 Documents / Resources


3.1 References

4 Related Posts


Technical Parameters

Technical parameter	Parameter value
RS485	A+ B-
Communication Interface	USB
Default baud rate	9600 8 n 1
Power	DC5V 1A
Running temperature	-40~80°C
Working humidity	5%RH~90%RH


Product Size

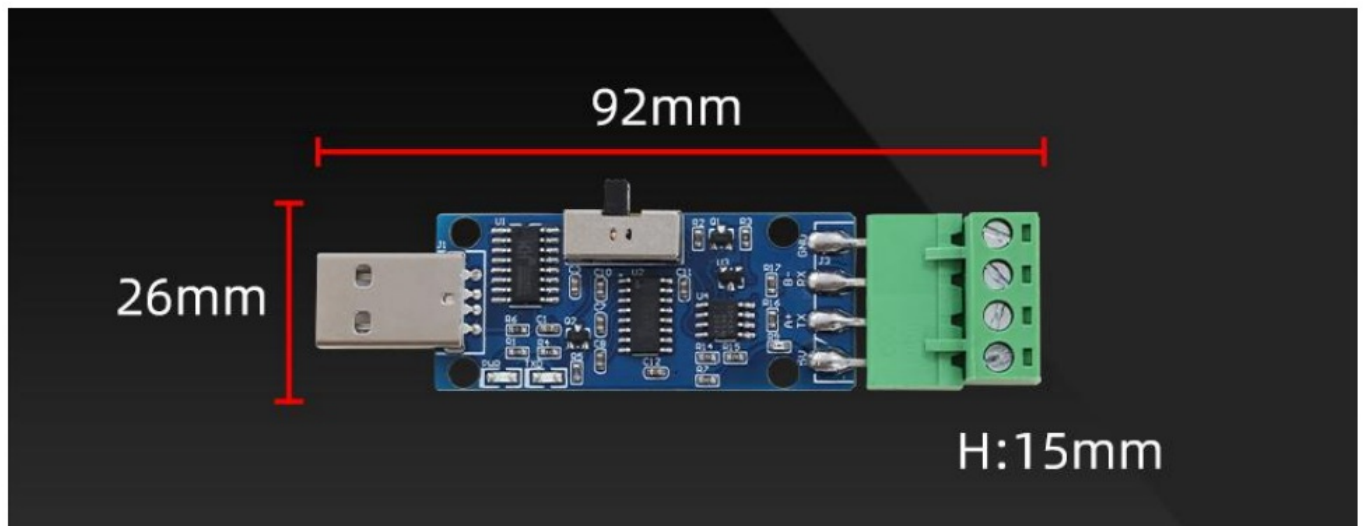

How to wiring?

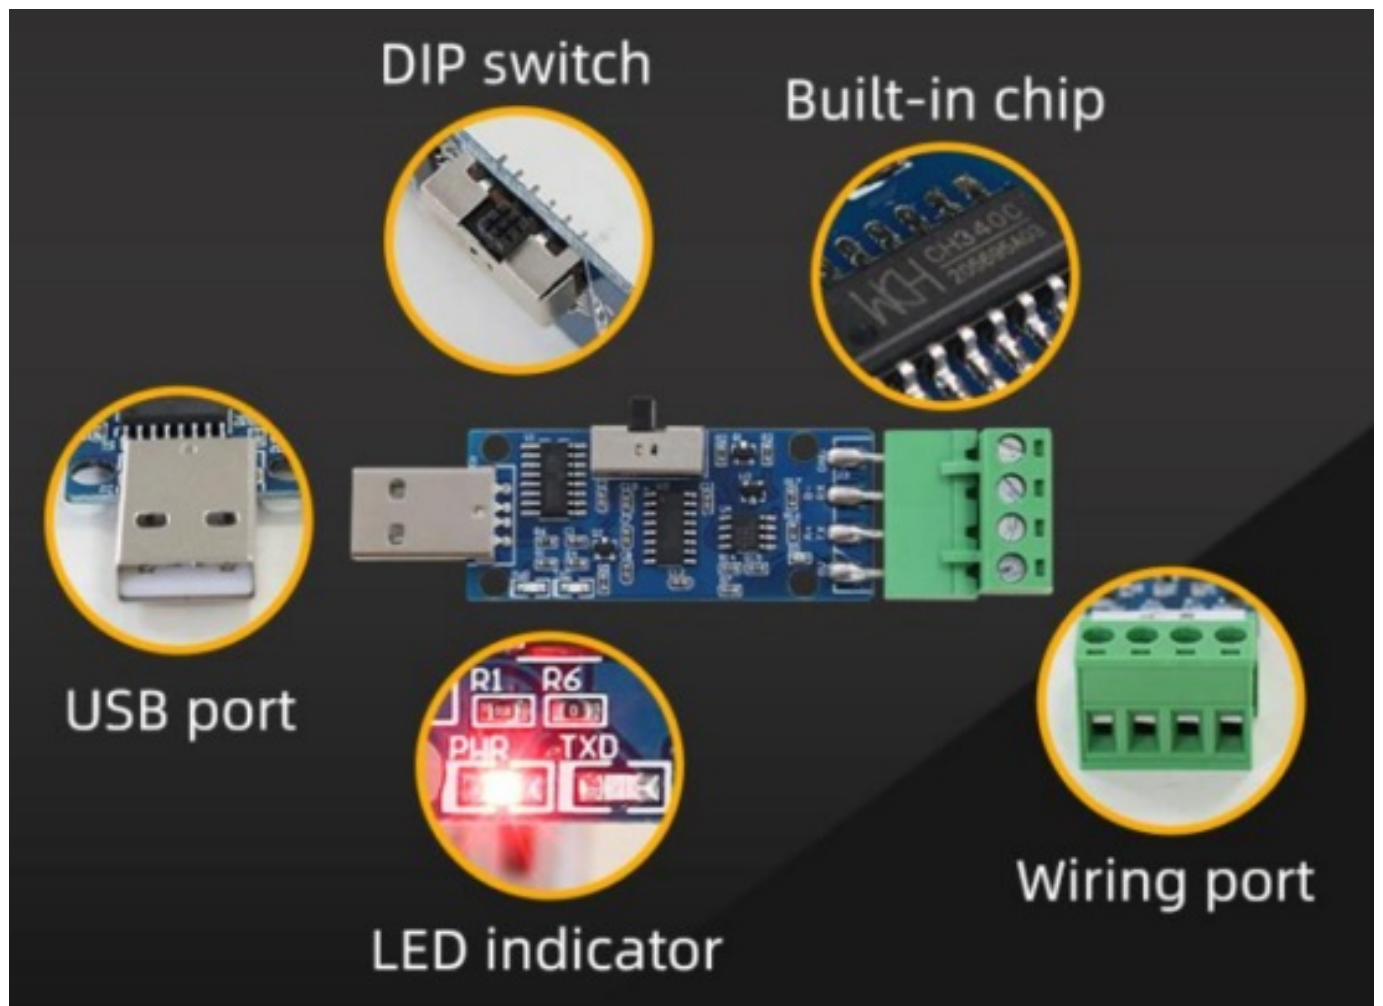


RS485 WIRING

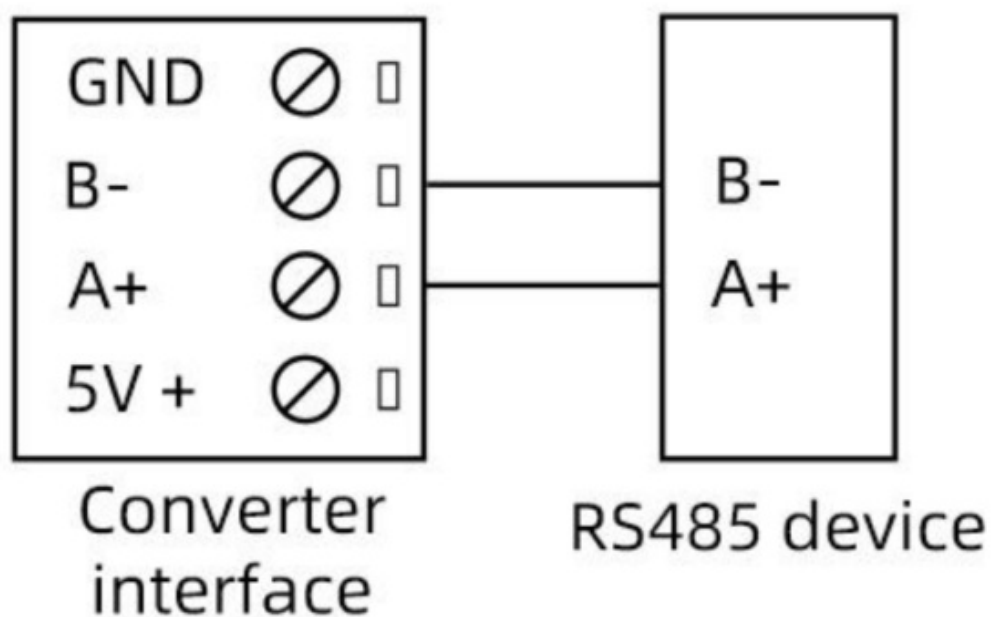


Note: When the power supply of the user equipment is DC5V, the converter can directly supply power to the user equipment, GND is the negative pole of the power supply, and 5V is the positive pole of the power supply. It can only supply power to devices with a power supply of 5V

RS232 CONNECTION MODE

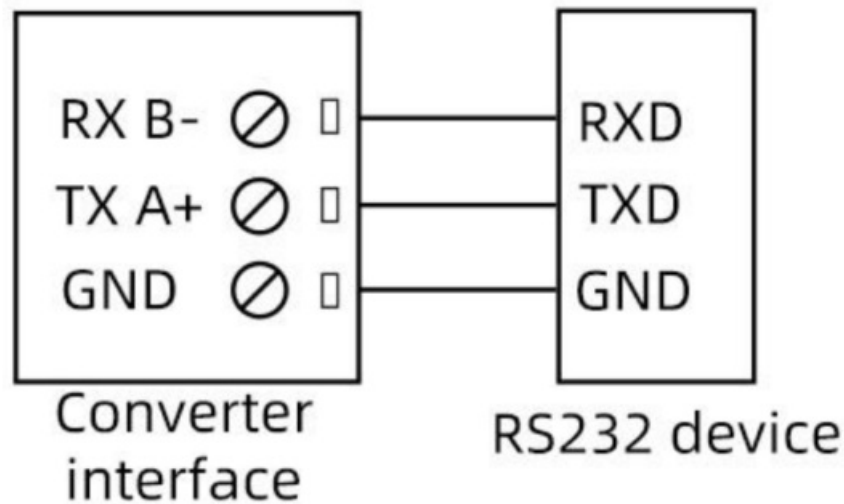

Note: When the power supply of the user equipment is DC5V, the converter can directly supply power to the user equipment

Application solution

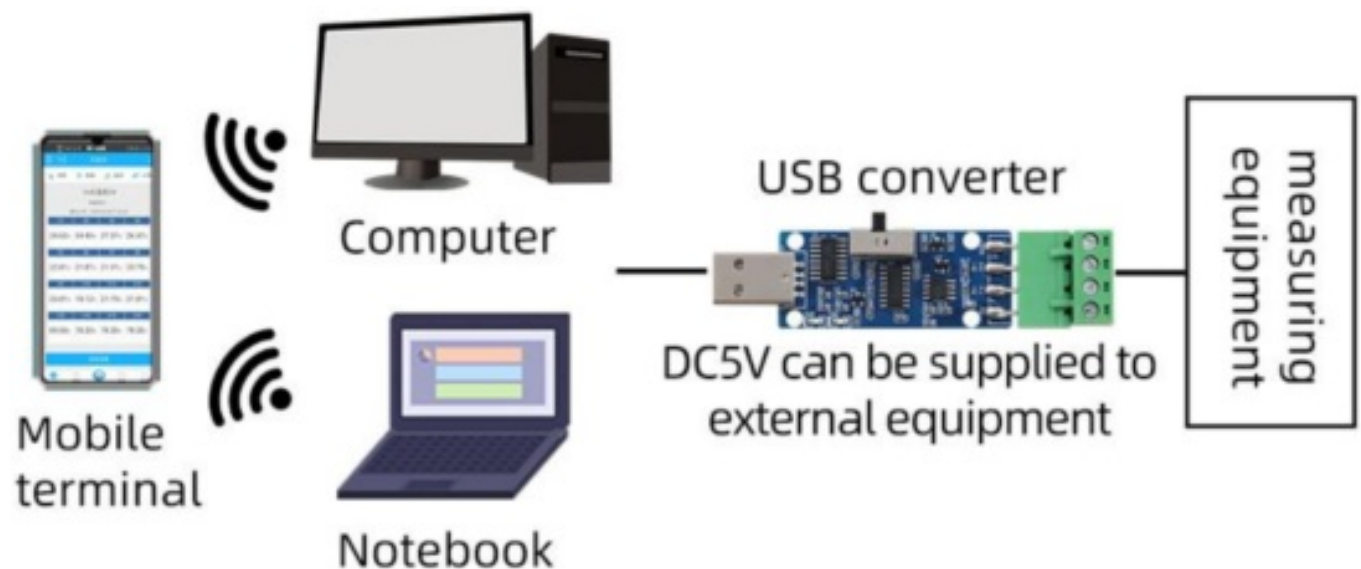

Disclaimer

This document provides all information about the product, does not grant any license to intellectual property, does not express or imply, and prohibits any other means of granting any intellectual property rights, such as the statement of sales terms and conditions of this product, other issues. No liability is assumed. Furthermore, our company makes no warranties, express or implied, regarding the sale and use of this product, including the suitability for the specific use of the product, the marketability, or the infringement liability for any patent, copyright, or other intellectual property rights, etc. Product specifications and product descriptions may be modified at any time without notice.

Contact Us

Company: Shanghai Sonbest Industrial Co., Ltd TRANBALL Brand Division

Address: Building 8, No. 215 North east road, Baoshan District, Shanghai, China


Web: <http://www.hitdo.com>

Web: <http://www.hitdo.com>

SKYPE: soobuu

Email: sale@sonbest.com

Tel: 86-021-51083595 / 66862055 / 66862075 / 66861077

	<p>SONBUS HD813 TTL Controller [pdf] User Manual HD813 TTL Controller, HD813, TTL Controller</p>
---	--

References

- [Home-ä'ëf'1/2æ™ºèf'1/2ç%©è"ç'1/2'](#)
- [Home-ä'ëf'1/2æ™ºèf'1/2ç%©è"ç'1/2'](#)