



## sonbus SC7202B interface communication function temperature User Manual

[Home](#) » [SONBUS](#) » sonbus SC7202B interface communication function temperature User Manual 



### SC7202B interface communication function temperature User Manual



SC7202B uses the standard RS485 bus MODBUS-RTU protocol, and easy access to PLC, DCS, and other instruments or systems for monitoring temperature state quantities. The internal use of high-precision sensing core and related devices to ensure high reliability and excellent long-term stability can be customized RS232, RS485, CAN, 4-20mA, DC0~5V/10V, ZIGBEE, Lora, WIFI, GPRS and other output methods.

## Contents

- [1 Technical Parameters](#)
- [2 Wiring instructions](#)
- [3 Communication Protocol](#)
- [4 Read and Modify Baud Rate](#)
- [5 Read Correction Value](#)
- [6 Contact Us](#)
- [7 Documents / Resources](#)
  - [7.1 References](#)
- [8 Related Posts](#)

## Technical Parameters

Technical parameter	Parameter value
Brand	SONBEST
Temperature measurement range	-50°C to +100°C (optional with other ranges)
Detecting Core Devices	PT1000
Temperature Measurement Accuracy	± 0.3°C (optional ± 0.3°C
Thermal Response Coefficient	10mΩ/K
The resistance of the sensor at 0 °C	1000Ω± 0.12Ω/K
The resistance of the sensor at 0-100 °C	3.85Ω/K
Reference Execution Standards	Using EN 60751 Class B Standards
Channels	1
Wire	2-wire or 3-wire
Communication Interface	RS485
Default baud rate	9600 8 n 1
Power	AC185~265V 1A
Running temperature	-40~80°C
Working humidity	5%RH~90%RH

## Wiring instructions

Any incorrect wiring can cause irreversible damage to the product. Please carefully wire the cable as follows in the case of power failure, and then connect the cable to confirm the correctness and then use it again.

ID	Core color	Identification	Note
1	Red	V+	Power +
2	Green	V-	Power –
3	Yellow	A+	RS485 A+
4	Blue	B-	RS485 B-

In the case of broken wires, wire the wires as shown in the figure. If the product itself has no leads, the core color is for reference.

## Communication Protocol

The product uses RS485 MODBUS-RTU standard protocol format, all operation or reply commands are hexadecimal data. The default device address is 1 when the device is shipped, the default baud rate is 9600, 8, n, 1

### Read Data (Function id 0x03)

Inquiry frame (hexadecimal), sending example: Query 1# device 1 data, the host computer sends the command:01 03 00 00 00 01 84 0A .

Device ID	Function id	Start Address	Data Length	CRC16
01	03	00 00	00 01	84 0A

For the correct query frame, the device will respond with data:01 03 02 00 79 79 A6, the response the format is parsed as follows:

Device ID	Function id	Data Length	Data 1	Check Code
1	3	2	00 79	79 A6

Data Description: The data in the command is hexadecimal. Take data 1 as an example. 00 79 is converted to a decimal value of 121. If the data magnification is 100, the actual value is 121/100=1.21. Others and so on.

## Data Address Table

Address	Start Address	Description	Data type	Value range
40001	00 00	temperature	Read Only	0~65535
40101	00 64	model code	read/write	0~65535
40102	00 65	total points	read/write	1~20
40103	00 66	Device ID	read/write	1~249
40104	00 67	baud rate	read/write	0~6
40105	00 68	mode	read/write	1~4
40106	00 69	protocol	read/write	1~10

3 read and modify device address

(1) Read or query device address

If you don't know the current device address and there is only one device on the bus, you can use the command FA 03 00 64 00 02 90 5F Query device address.

Device ID	Function id	Start Address	Data Length	CRC16
FA	03	00 64	00 02	90 5F

FA is 250 for the general address. When you don't know the address, you can use 250 to get the real device address, 00 64 is the device model register.

For the correct query command, the device will respond, for example, the response data is: 01 03 02 07 12 3A 79, the format of which is as shown in the following table:

Device ID	Function id	Start Address	Model Code	CRC16
01	03	02	55 3C 00 01	3A 79

The response should be in the data, the first byte 01 indicates that the real address of the current device is, 55 3C converted to decimal 20182 indicates that the current device main model is 21820, the last two bytes 00 01 Indicates that the device has a status quantity.

## (2)Change device address

For example, if the current device address is 1, we want to change it to 02, the command is:01 06 00 66 00 02 E8 14.

Device ID	Function id	Start Address	Destination	CRC16
01	06	00 66	00 02	E8 14

After the change is successful, the device will return information: 02 06 00 66 00 02 E8 27, its format is parsed as shown in the following table:

Device ID	Function id	Start Address	Destination	CRC16
01	06	00 66	00 02	E8 27

A response should be in the data, after the modification is successful, the first byte is the new device address.

After the general device address is changed, it will take effect immediately. At this time, the user needs to change the query command of the software at the same time.

## Read and Modify Baud Rate

### (1) Read baud rate

The device's default factory baud rate is 9600. If you need to change it, you can change it according to the following table and the corresponding communication protocol. For example, read the current device's baud rate ID, the command is: 01 03 00 67 00 01 35 D5, its format is parsed as follows.

Device ID	Function id	Start Address	Data Length	CRC16
1	3	00 67	00 01	35 D5

Read the baud rate encoding of the current device. Baud rate encoding: 1 is 2400; 2 is 4800; 3 is 9600; 4 is 19200; 5 is 38400; 6 is 115200.

For the correct query command, the device will respond, for example, the response data is: 01 03 02 00 03 F8 45, the format of which is as shown in the following table:

Device ID	Function id	Start Address	Rate ID	CRC16
1	3	00 67	00 03	F8 45

Change the baud rate from 9600 to 38400, changing the code from 3 to 5. The new baud rate will take effect immediately, at which point the device will lose its response and the baud rate of the device should be queried accordingly. Modified.

## Read Correction Value

### (1) Read Correction Value

When there is an error between the data and the reference standard, we can reduce the display error by adjusting the correction value. The correction difference can be modified to be plus or minus 1000, that is, the value range is 0-1000 or 64535 -65535. For example, when the display value is too small, we can correct it by adding 100. The command is: 01 03 00 6B 00 01 F5 D6 . In the command 100 is hex 0x64 If you need to reduce, you can set a negative value, such as -100, corresponding to the hexadecimal value of FF 9C, which is calculated as 100-65535=65435, and then converted to hexadecimal to 0x FF 9C. The correction value starts from 00 6B. We take the first parameter as an example. The correction value is read and modified in the same way for multiple parameters.

Device ID	Function id	Start Address	Data Length	CRC16
1	3	00 6B	00 01	F5 D6

For the correct query command, the device will respond, for example, the response data is 01 03 02 00 64 B9 AF, the format of which is as shown in the following table:

Device ID	Function id	Data Length	Data value	CRC16
1	3	2	00 64	B9 AF

In the response data, the first byte 01 indicates the real address of the current device, and 00 6B is the first state

quantity correction value register. If the device has multiple parameters, other parameters operate in this way. The same, the general temperature, and humidity have this parameter, the light generally does not have this item.

## (2)Change correction value

For example, the current state quantity is too small, we want to add 1 to its true value, and the current value plus 100 correction operation command is:01 06 00 6B 00 64 F9 FD

Device ID	Function id	Start Address	Destination	CRC16
1	6	00 6B	00 64	F9 FD

After the operation is successful, the device will return information: 01 06 00 6B 00 64 F9 FD, the parameters take effect immediately after a successful change.


Disclaimer.

This document provides all information about the product, does not grant any license to intellectual property, does not express or imply, and prohibits any other means of granting any intellectual property rights, such as the statement of sales terms and conditions of this product, other issues. No liability is assumed. Furthermore, our company makes no warranties, express or implied, regarding the sale and use of this product, including the suitability for the specific use of the product, the marketability, or the infringement liability for any patent, copyright, or other intellectual property rights, etc. Product specifications and product descriptions may be modified at any time without notice.

## Contact Us

Company: Shanghai Sonbest Industrial Co., Ltd  
Address:Building 8,No.215 North east road,Baoshan District,Shanghai,China  
Web: <http://www.sonbest.com>  
Web: <http://www.sonbus.com>  
SKYPE: soobuu  
Email: [sale@sonbest.com](mailto:sale@sonbest.com)  
Tel: 86-021-51083595 / 66862055 / 66862075 / 66861077

## Documents / Resources

	<a href="#">sonbus SC7202B interface communication function temperature [pdf] User Manual</a> SC7202B interface communication function temperature, interface communication function temperature, communication function temperature, function temperature, RS485
---	--

## References

- [Home-ä Šæµ.æœåšâ@žă šæœ%œé™å...-å](#)
- [Home-SONBEST -SONBUS.COM| THE SENSOR COMPANY](#)
- [Home-SONBEST -SONBUS.COM| THE SENSOR COMPANY](#)