

SONIC ALERT SBP100 DIGITAL ALARM CLOCK



Sonic Alert SBP100 Digital Alarm Clock User Manual

[Home](#) » [Sonic Alert](#) » Sonic Alert SBP100 Digital Alarm Clock User Manual 

Contents

- [1 Sonic Alert SBP100 Digital Alarm Clock](#)
- [2 SONIC ALERT'S 1 YEAR LIMITED WARRANTY](#)
- [3 INSTALLATION](#)
- [4 MAINTENANCE](#)
- [5 SETTING CLOCK TIME AND ALARM TIME](#)
- [6 ALARM OPERATION](#)
- [7 DIAGRAMS & OPERATING INSTRUCTIONS](#)
- [8 FREQUENTLY ASKED QUESTIONS](#)
- [9 VIDEO – PRODUCT OVERVIEW](#)
- [10 References](#)
- [11 Related Posts](#)



Sonic Alert SBP100 Digital Alarm Clock



SONIC ALERT'S 1 YEAR LIMITED WARRANTY

The Sonic Boom Alarm Clock Model SBP100 is warranted against manufacturing defects in materials and workmanship for one (1) year from the date of purchase. Within this period Sonic Alert will repair or replace at our option the SBP 100 without charge for parts and labor. Simply send the SBP100 (postpaid) and a copy of your sales slip as proof of purchase to: Sonic Alert Inc., 1050 E. Maple Road, Troy MI 48083 Sonic Shaker Portable Vibrating Alarm Clock Model SBP100

GENERAL DATA

- **Power:** DC 3V(1.5Vx2 pieces AA SIZE) & DC1.5V (1.5Vx1 pieces AA A SIZE)

Made in China

Sonic Alert 1050 East Maple Rd. Troy, MI 48083 www.SonicAlert.com 1-800-566-3210 V/TTY

INSTALLATION

(See back side for additional directions for settings)

HOW TO INSTALL BATTERIES

- Remove the BATTERY COMPARTMENT (10), insert 1 AAA battery for the clock, and insert 2 AA batteries for the vibrator/alarm.
- To insert the batteries, please observe the correct position of the polarity, as marked inside the battery

compartment.

WHEN TO REPLACE BATTERIES

- When the LCD screen becomes dim, it is time to change the AAA battery.
- When alarm sound quality becomes poor or volume is low or the vibrator is vibrating very slow, it is usually an indication of weak batteries.
- Replace the weak batteries to avoid any possible leakage.

MAINTENANCE

- If the unit is not used for long period of time, remove all batteries to avoid any possible leakage.
- When traveling with this unit it is advised to remove the batteries for the vibrator/alarm (2 AA size) to avoid draining the batteries in the event light button is accidentally pressed during travel.

SETTING CLOCK TIME AND ALARM TIME

(see back for diagrams)

SETTING CLOCK TIME

- Press and hold the TIME SET button (2), then press the Hour button (4) until the correct hour is displayed.
- Remember to set the correct AM or PM.
- When PM time is registered, a “P”(9) will appear on the display.
- Press and hold the TIME SET button (2), then press the Minute button (5) until the correct time is displayed.

SETTING ALARM TIME

- Press and hold the ALARM SET button (3), then press the Hour button (4) until the correct hour is displayed.
- Remember to set the correct AM or PM. When PM time is registered, a “P”(9) will appear on the display.
- Press and hold the ALARM SET button (3), then press the Minute button (5) until the correct time is displayed.

ALARM OPERATION

(see back for diagrams)


- Set the alarm time as indicated in Setting Alarm Time.
 - Set the Alarm ON/OFF Switch (1) to ON. An alarm indicator will appear in the top center of the display (8) indicating the alarm function is on. The alarm is now set to turn on automatically at the selected time.
 - You can select the alarm mode for waking, i.e. buzzer, vibrator, or buzzer and vibrator by setting the Alarm Mode Switch (6) to your desired position.
 - With the alarm sounding, press the ALARM OFF (3) to turn off the alarm. The alarm comes on again the next day at the same time.
 - With the alarm sounding, press the Snooze Button (7) after the alarm sounds, the alarm will go off and will come on again in approximately 4 minutes. You may repeat this cycle as many times as desired.

- To stop the alarm permanently set the Alarm ON/OFF Switch (1) to OFF. Night Light (see back for diagram)
- To read the clock time in the dark, press and hold the Light / Snooze Button (7)

PORTABLE VIBRATING ALARM CLOCK SBP100

DIAGRAMS & OPERATING INSTRUCTIONS

IMPORTANT – Please read these instructions carefully before use and retain for future reference.

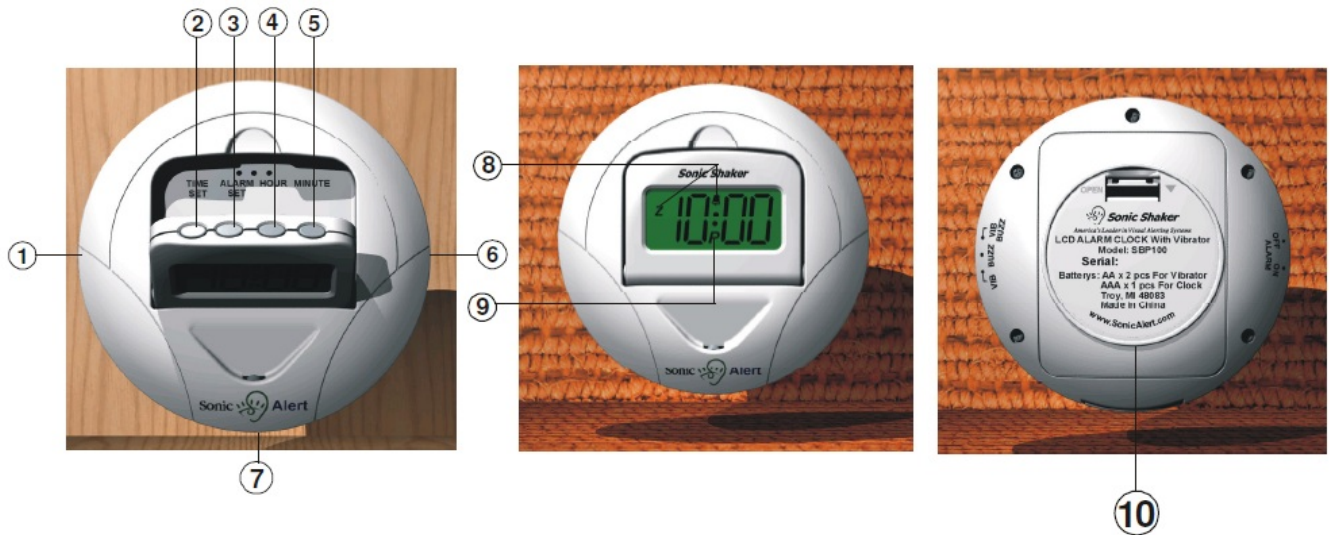

1. ALARM ON/OFF
2. TIME SET
3. ALARM SET
4. HOUR
5. MINUTE
6. ALARM MODE SWITCH
7. SNOOZE & LIGHT BUTTON
8. ALARM INDICATOR
9. PM INDICATOR
10. BATTERY COMPARTMENT

Made in China

Sonic Alert 1050 East Maple Rd. Troy, MI 48083 www.SonicAlert.com 1-800-566-3210 V/TTY

FREQUENTLY ASKED QUESTIONS

What brand manufactures the Sonic Alert SBP100 Digital Alarm Clock?

The Sonic Alert SBP100 Digital Alarm Clock is manufactured by Sonic Alert.

What are the dimensions of the Sonic Alert SBP100 Digital Alarm Clock?

The Sonic Alert SBP100 Digital Alarm Clock measures approximately 4.71 x 9.42 x 7.07 inches.

What is the weight of the Sonic Alert SBP100 Digital Alarm Clock?

The Sonic Alert SBP100 Digital Alarm Clock weighs approximately 7.1 ounces.

What is the model number of the Sonic Alert SBP100 Digital Alarm Clock?

The model number of the Sonic Alert SBP100 Digital Alarm Clock is SBP100.

What type of batteries does the Sonic Alert SBP100 Digital Alarm Clock require?

The Sonic Alert SBP100 Digital Alarm Clock requires 3 AAA batteries for operation.

Does the Sonic Alert SBP100 Digital Alarm Clock feature any special functions or features?

Sonic Alert SBP100 Digital Alarm Clock is equipped with special features such as a vibrating alarm and a pulsating alert light, making it suitable for individuals with hearing impairments.

Can you tell me the price of the Sonic Alert SBP100 Digital Alarm Clock?

The price of the Sonic Alert SBP100 Digital Alarm Clock is \$29.11.

What should I do if the Sonic Alert SBP100 Digital Alarm Clock is not turning on?

Firstly, ensure that the batteries are inserted correctly according to the polarity indicated. If using AC power, check that the adapter is securely connected to both the clock and the power outlet. If the issue persists, try replacing the batteries or testing with an alternate power source.

How can I troubleshoot if the display on my Sonic Alert SBP100 Digital Alarm Clock is not functioning properly?

Start by checking if the display brightness is adjusted to an appropriate level. If the display remains dim or does not illuminate at all, attempt to reset the clock by removing and reinserting the batteries or unplugging and replugging the power source.

What steps should I take if the alarm feature of the Sonic Alert SBP100 Digital Alarm Clock is not working?

Firstly, ensure that the alarm is correctly set and that the volume is adjusted to an audible level. Verify if the alarm function is activated and that there are no conflicting settings that might prevent the alarm from sounding. If the issue persists, try resetting the alarm settings or replacing the batteries.

How can I troubleshoot if the vibrating function of the Sonic Alert SBP100 Digital Alarm Clock is not working?

Check if the vibration pad is properly connected to the clock. Ensure that the pad is placed under the pillow or mattress securely and that there are no obstructions preventing it from vibrating. If the problem persists, inspect the vibration pad for any damage or defects and consider replacing it if necessary.


What should I do if the buttons on my Sonic Alert SBP100 Digital Alarm Clock are unresponsive?

Clean the surface of the buttons and the surrounding area to remove any dirt or debris that may be obstructing them. If the buttons remain unresponsive, try pressing them with slightly more force. If the issue persists, consider replacing the batteries or contacting Sonic Alert for further assistance.

How can I troubleshoot if the alarm sound on my Sonic Alert SBP100 Digital Alarm Clock is distorted or unclear?

Check the volume level and adjust it to a suitable setting. If the sound quality is still poor, inspect the speaker for any obstructions or damage that may be affecting its performance. Consider resetting the clock to its factory settings or replacing the batteries to see if it resolves the issue.

VIDEO – PRODUCT OVERVIEW

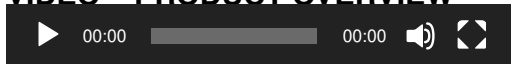

DOWNLOAD THE PDF LINK: [Sonic Alert SBP100 Digital Alarm Clock User Manual](https://www.sonic-alert.com/content/uploads/2024/06/Sonic-Alert-SBP100-Digital-Alarm-Clock-User-Manual.pdf)
[content/uploads/2024/06/Sonic-Alert-SBP100-Digital-Alarm-Clock-User-Manual.pdf](https://www.sonic-alert.com/content/uploads/2024/06/Sonic-Alert-SBP100-Digital-Alarm-Clock-User-Manual.pdf)

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.