



Home » SONICAKE » SONICAKE QAM20 Digital Modeling Speaker User Guide 🔁


SONICAKE QAM20 Digital Modeling Speaker User Guide



Contents [hide]

- 1 Product Overview
- 2 Specifications
- 3 Malfunction
- 4 Using SONICLINK
- 5 FCC Statement
- 6 Documents / Resources
 - 6.1 References

Product Overview

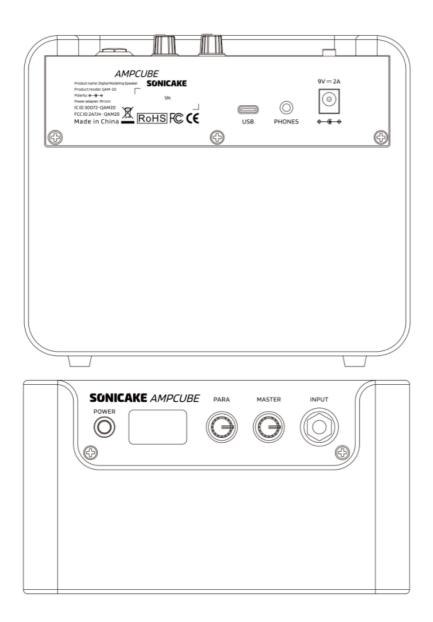

Specifications

Frequency Range: 20Hz-20kHz

Speakers: One 3" custom full range speaker and one 1.7" custom tweeter

Power Amp: 10W output

Digital Audio Signal Processing: 24-bit depth, 44.1kHz sample rate

No. of Effect Modules: 8

No. of Effects: 80

Presets: 50 user (editable) + 50 factory (fixed)

Drum Machine: 100 rhythm patterns incl. metronome

Inputs: One 1 /4^ prime prime (6.35mm) instrument jack

Outputs: One 1 /8^ prime prime 3.5mm) stereo headphones output jack

Screen: 0.96" Color LCD

USB: USB 2.0 Type-C port, supports USB Audio 2.0

Power Requirements: 9V DC Center negative

Current Consumption: 2A

Dimensions: 181mm (W) X 100mm (D) X 151mm (H)

Weight: 1.4kg

POWER: Press to turn the unit on/off.

Screen: Displays unit current status.

PARA: Adjusts parameters, turn on/off functions, etc.

MASTER: Adjusts the master volume.

INPUT: 1/4" (6.35mm) mono input for guitar or other instruments.

USB: USB 2.0 Type-C jack for connecting to computers/phones.

We recommend to use with an OTG cable when connecting phones/pads.

Phones Jack: 1/8" (3.5mm) stereo output for connecting headphones.

When plugged in, the speaker output will be MUTED.

Power Jack: For plugging in attached power adapter.

(DC 9V 2A center negative).

Note: Always use the attached power adapter.

Malfunction

If any of the following problems occur, immediately turn off the device and disconnect the electric plug from the outlet.

- The device is dropped or damaged.
- The power cord or plug becomes frayed or damaged.
- The power adaptor malfunction.
- Unusual smells or smoke are emitted.
- Some object has been dropped into the device.
- There is a sudden loss of sound during use of the device.
- Cracks or other visible damage appear on the device.
- The device has other obvious signs of malfunction.

(e.g. cannot turn on, knobs cannot work, volume is too low, etc.) Then please contact our service team.

Using SONICLINK

Turn on the Bluetooth switch on your phones/pads, then turn on your AMPCUBE and launch the SONICLINK app. On first use, SONICLINK will ask for BT access permission (for some Android devices, location permission will also be requested). When such permission requests pop up, please tap "Allow". When your AMPCUBE appears listed on the startup page (the app will automatically scan all nearby devices), select it and tap the "Connect To The Selected Device" button on the screen. The BT indicator will stay solid to indicate a successful connection.

Note:

SONICLINK cannot be used when the device is not connected.

www.sonicake.com

FCC Statement

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These Imits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause hormful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver

- Connect the equipment into an outlet on a circult different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction

FCC ID: 2A7-4-QAM20

IC Caution

Radio Standards Specification RSS-Genau 5

This device contains icence empt transmitter/cer) that comply with Innovation, Science and Economic Developnient Canada's licence-exempt RSS

Operation is subject to the following two conditions

This device may not couse interference

This device must accept any interference, including interference that may cause undesired operation of the device exposure statement



Documents / Resources



SONICAKE QAM20 Digital Modeling Speaker [pdf] User Guide 2A7J4-QAM20, 2A7J4QAM20, AMPCUBE, QAM20 Digital Modeling Speaker, QAM20, Digital Modeling Speaker, Modeling Speaker, Speaker

References

- User Manual
- SONICAKE
- 2A7J4-QAM20, 2A7J4QAM20, AMPCUBE, Digital Modeling Speaker, Modeling Speaker, QAM20, QAM20 Digital Modeling Speaker, SONICAKE, speaker

Leave a comment

Your email address will not be published. Required fields are marked *

Comment * Name Email Website Save my name, email, and website in this browser for the next time I comment. **Post Comment** Search: e.g. whirlpool wrf535swhz Search

Manuals+ | Upload | Deep Search | Privacy Policy | @manuals.plus | YouTube

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.