



# SONICWALL TZ400 Firewall with Total Secure Advanced Edition User Guide

[Home](#) » [SONICWALL](#) » SONICWALL TZ400 Firewall with Total Secure Advanced Edition User Guide

## Contents [ [hide](#) ]

- [1 SONICWALL TZ400 Firewall with Total Secure Advanced Edition](#)
- [2 SonicWall TZ400 Wireless \(TZ400W\) out of box](#)
- [3 Quick Start Guide](#)
- [4 Power On SonicWall TZ400W](#)
- [5 Documents / Resources](#)
  - [5.1 References](#)
- [6 Related Posts](#)



## SONICWALL TZ400 Firewall with Total Secure Advanced Edition



view Page online: <https://www.sonicwall.com/support/knowledge-base/sonicwall-tz400-wireless-tz400w-out-of-box/170503795770582/>

## SonicWall TZ400 Wireless (TZ400W) out of box

### Description

**NOTE:** Video Link: SonicWall TZ400 Wireless (TZ400W) Out of Box Video. The SonicWall TZ400 Wireless package includes the following

- SonicWall TZ400 Wireless appliance 3 Antennas
- One Ethernet Cable
- One Power Adapter
- One Power Cord



## Quick Start Guide

 
**NOTE:** The included power cord is approved for use only in specific countries and regions. Before using a power cord, verify that it is rated and approved for use in your location.

## Front and Back Views




## Front and Back Views of the SonicWall TZ400W

### Front Panel

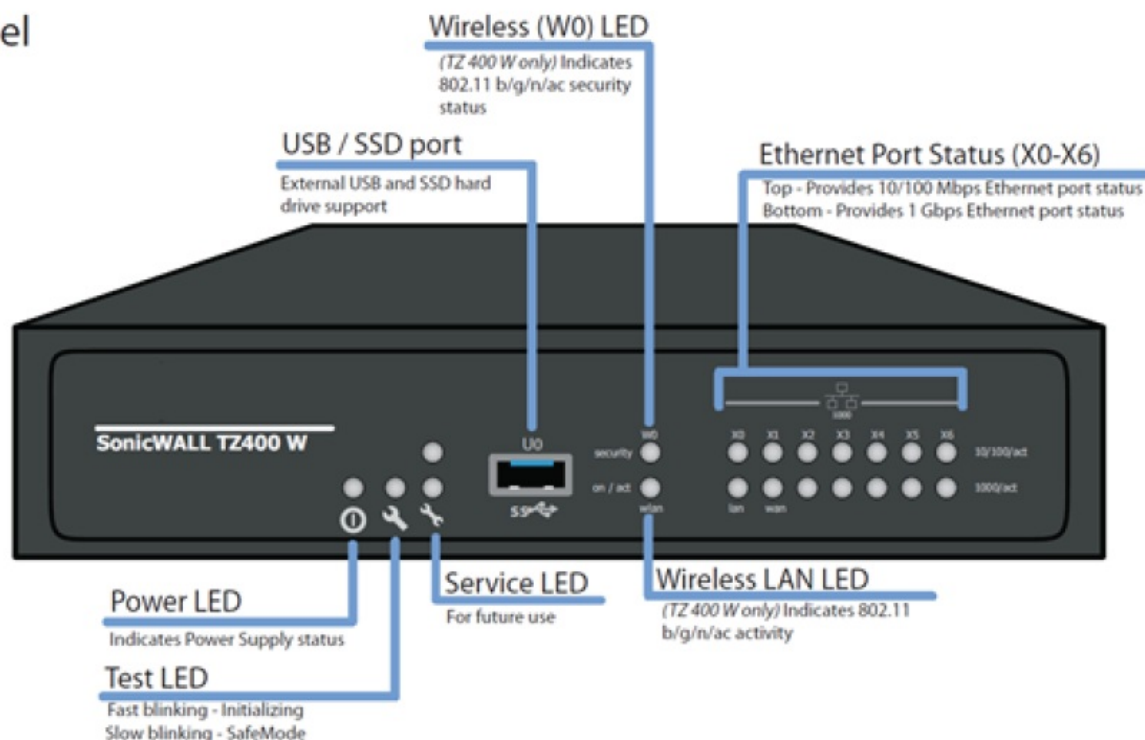

### SonicWall TZ400W Port Descriptions
 
#### Rear Panel

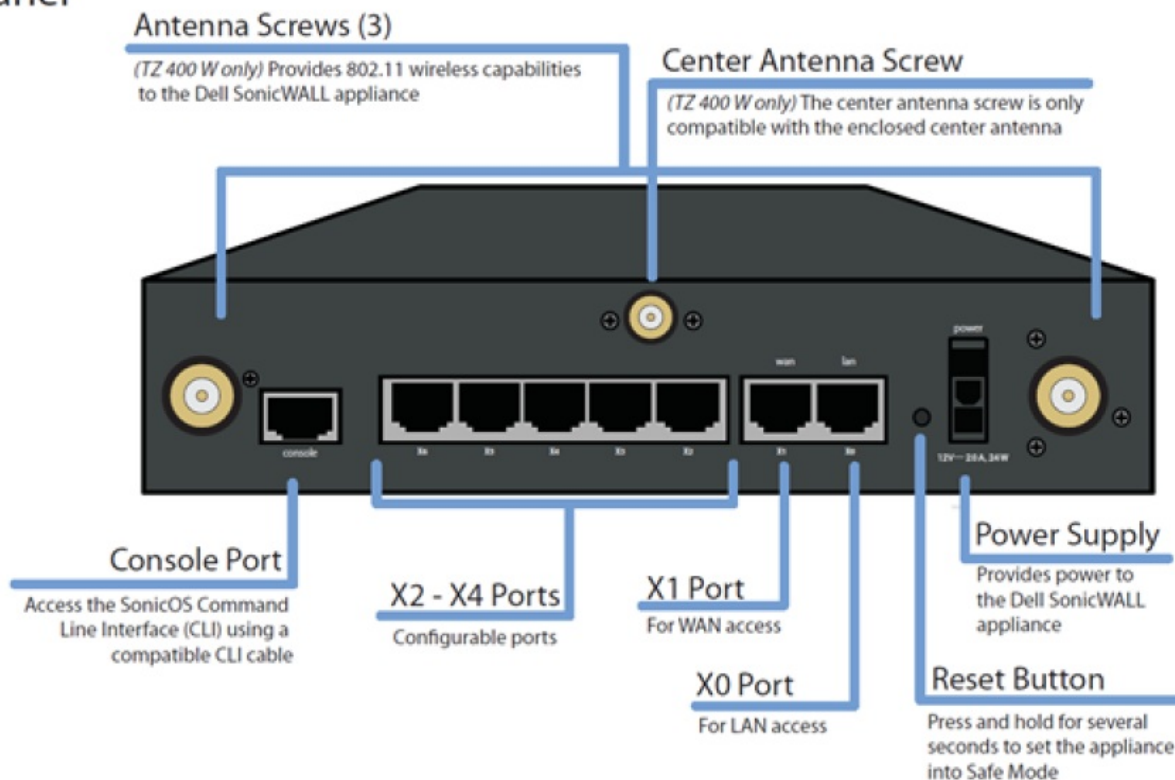




### Cabling the SonicWall TZ400W as a Network Gateway

- Locate the SonicWall ports X0 and X1, port X0 is also labeled as LAN and port X1 is also labeled as WAN.
- Connect your Internet access device such as a cable or DSL modem to SonicWall WAN (X1 port).
- Connect SonicWall LAN (X0 port) to your laptop or PC or to a Network Switch that to which your network devices such as PCs, game consoles, Smart TVs, etc are connected.
- Other ports such as X2, X3 & c a n b e a s s i g n t o o t h e r n e t w o r k s .


### Cabling Topologies

 Cabling a PC directly to the SonicWALL LAN port and WAN port to a DSL or Cable modem for Internet access

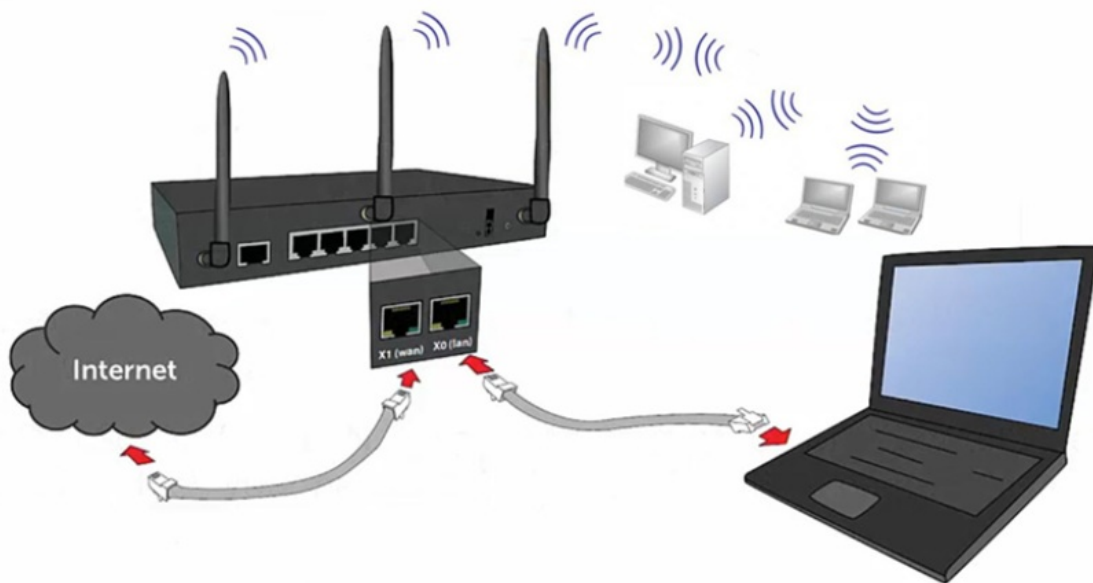



### Option 1

 Cabling a Network Switch to the SonicWALL LAN port and connecting PCs, Printers and other network devices to the Network Switch.

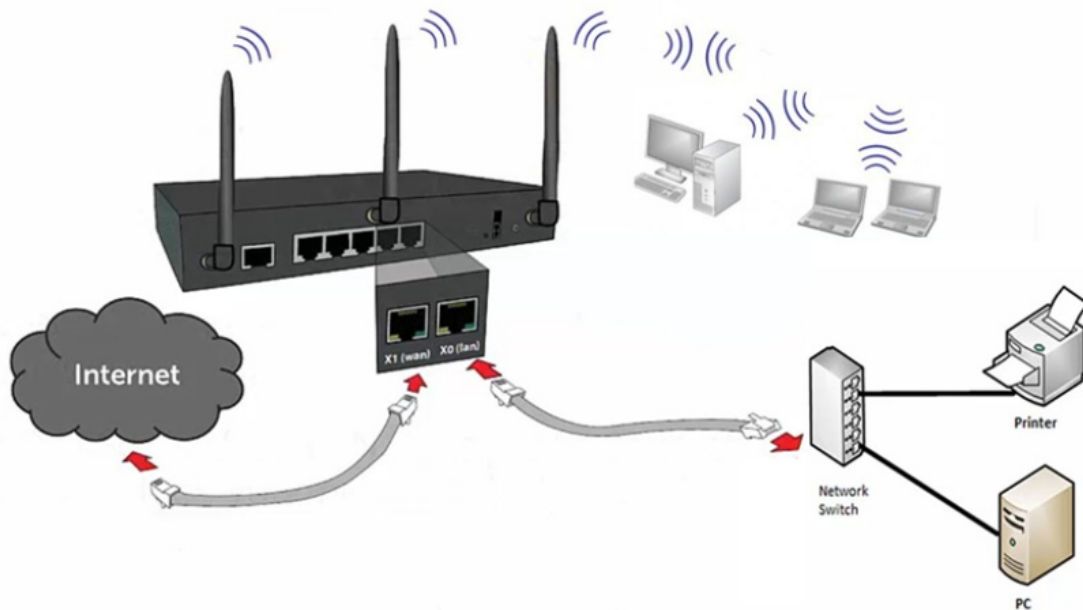

#### Power On SonicWall TZ400W

  - Plug the power cable into an appropriate power outlet (110 – 240 volts).

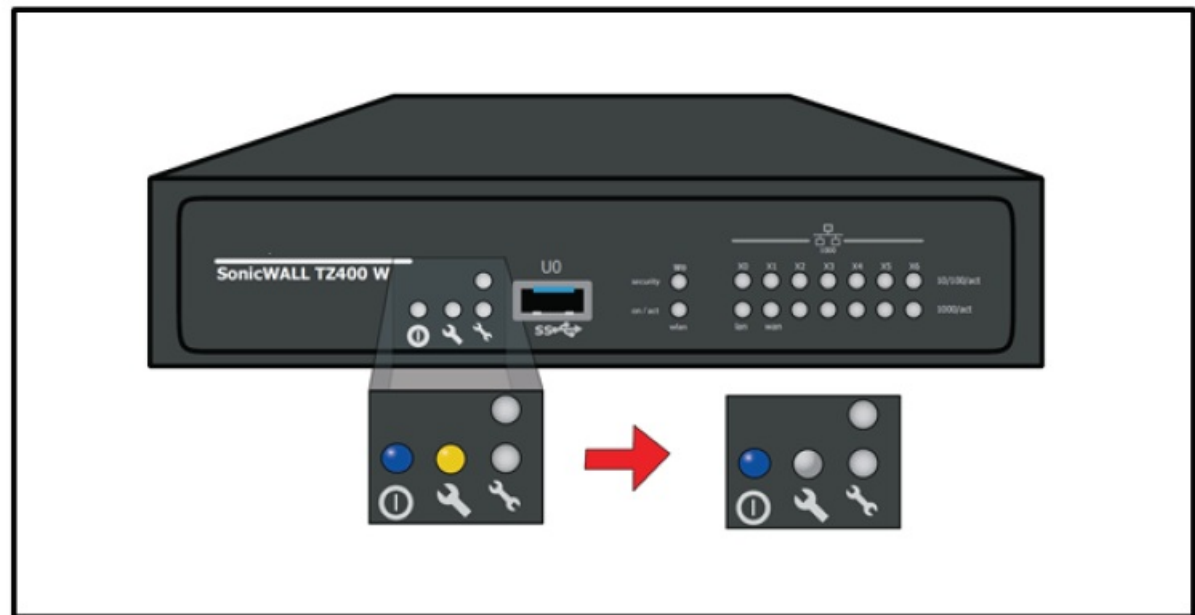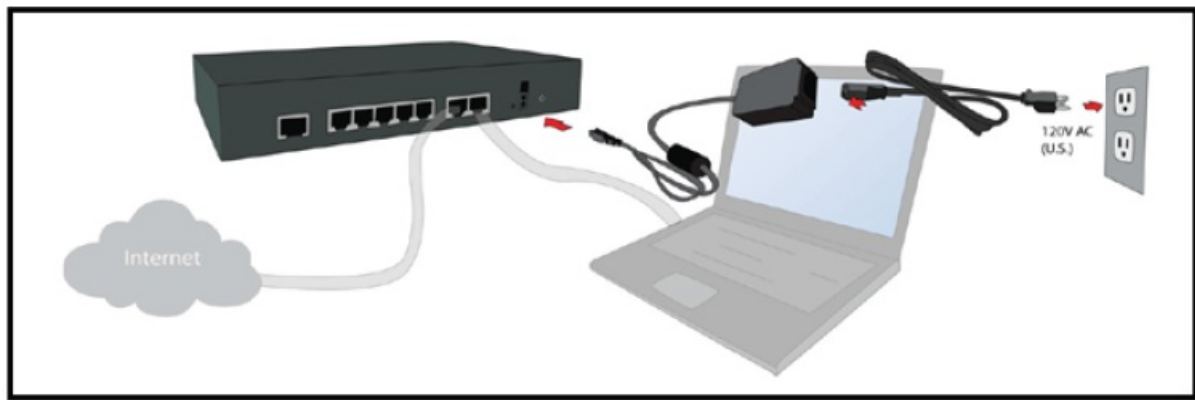

- Appliance powers on and the orange LED blinks during the boot sequence. This process may take up to 2 minutes.


Access the SonicWall Admin User Interface  
Connect a PC to the SonicWall LAN (X0) interface or a network switch connected to the LAN interface.

- You will automatically receive an IP address from the SonicWall appliance.
- Open a browser to <https://192.168.168.168> for access to the SonicWall.


### SonicWall TZ400W First time setup Setup Wizard walk through

 - For the first time access as the admin user, you will be offered a choice to use a Setup Wizard or go directly to the SonicWall management Interface.



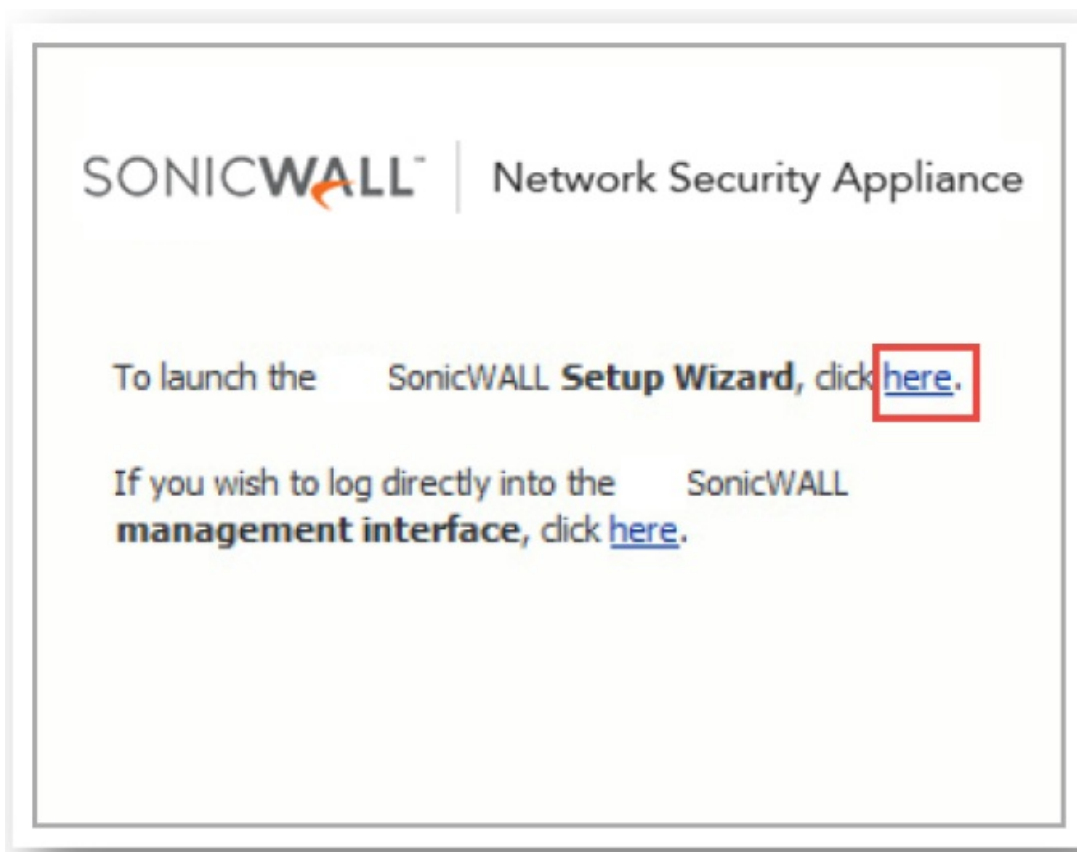

 - At the Setup Wizard Launch Page, click the Setup Wizard link here. At the Setup Wizard Welcome Page

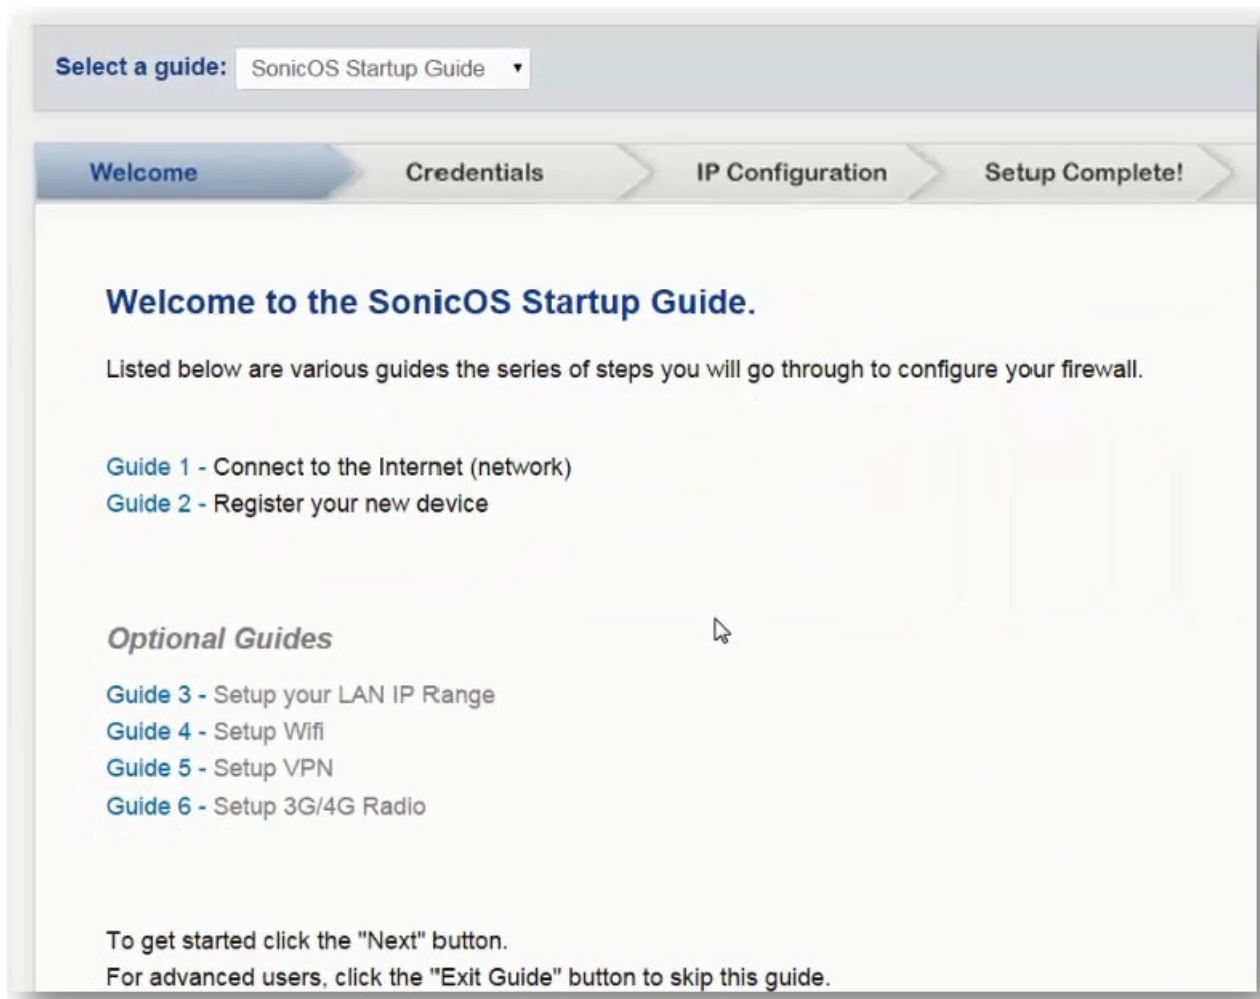

- **Click Next.**

At the Admin Credentials page The Admin default login credentials are

- Username: admin
- Password: password

**NOTE:** Update the password for the admin user. This is recommended to keep the admin user secure.

## Credentials

Your default login credentials are:

**Username:** admin  
**Password:** password

If you wish to change these credentials, please input your new credentials below:

**Username:**

**Old Password:**

**New Password:**

**Confirm Password:**

Click the "Next" button to proceed.

- Click Next  
IP Configuration page
- The WAN Interface will detect for a DHCP server to retrieve its IP configurations.
- If no DHCP server is detected or if you wish to enter static IP parameters then click on the link Manual Config.

## IP Configuration

Successfully detected the DHCP server and retrieved the information below:

**WAN IP Address:** 10.204.114.209  
**WAN Subnet Mask:** 255.255.255.0  
**Gateway (Router) Address:** 10.204.114.1  
**DNS Server Address:** 10.50.129.148  
**DNS Server Address 2:** 10.50.129.149

From DHCP Server

To obtain or customize the WAN settings differently, do [Manual Config](#)

Click the "Next" button to proceed.



## IP Configuration

You have successfully gain access to the internet with the following settings:

WAN IP Address: 10.204.114.209

WAN Subnet Mask: 255.255.255.0


Gateway (Router) Address: 10.204.114.1

DNS Server Address: 10.50.129.148

DNS Server Address 2: 10.50.129.149

Additional and advanced configuration options can be set up using the SonicWall Web Interface.

## Documents / Resources

	<a href="#">SONICWALL TZ400 Firewall with Total Secure Advanced Edition</a> [pdf] User Guide TZ400, Firewall with Total Secure Advanced Edition
---	--

## References

- [SonicWall TZ400 Wireless \(TZ400W\) out of box | SonicWall](#)