



SONICWARE SmplTrek Firmware Update User Guide

[Home](#) » [SONICWARE](#) » SONICWARE SmplTrek Firmware Update User Guide 




SmplTrek Firmware Update Guide

Contents

- [1 SmplTrek Firmware Update](#)
- [2 Documents / Resources](#)
 - [2.1 References](#)
- [3 Related Posts](#)

SmplTrek Firmware Update

1. Download the firmware (.zip) from the following URL.
<https://sonicware.jp/pages/downloads>
2. Connect the SD card to the PC/Mac by inserting it into the **PC/Mac's card slot** or using the **SmplTrek's card reader mode**.
3. Unzip the downloaded firmware (.zip) and copy the binary file (SmplTrek.bin) to the root folder on the SD card.

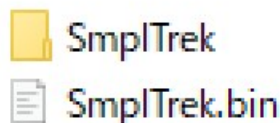

*Windows



*Mac

4. Remove the card from the PC/Mac and insert it into SmplTrek or deactivate the SmplTrek's card reader mode
5. While pressing , press and hold the power button.


*** Please use AC adapter or new batteries.**

6. When the update Screen opens , select SYSTEM UPDATE, and press OK.



7. Press OK to start the update.

***Never turn off the power while updating.**

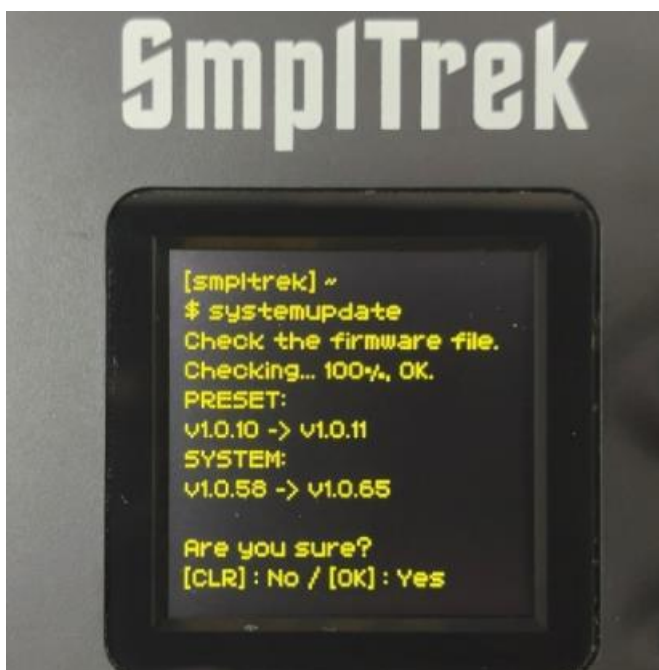

The screen display varies by the version.

8. After it completes, press the power button to shut the unit down. Then, restart it.



Documents / Resources

	SONICWARE SmplTrek Firmware Update [pdf] User Guide SmplTrek, Firmware Update, SmplTrek Firmware Update, SmplTrek Firmware
--	---

References

- [Downloads – SONICWARE](#)