




SONNET R-1415BT Bluetooth Power Station Clock Radio Owner's Manual

[Home](#) » [SONNET](#) » SONNET R-1415BT Bluetooth Power Station Clock Radio Owner's Manual 

SONNET

AM/FM 0.9 LED CLOCK RADIO WITH AUX-IN
AMPLIFICATION AND 2
USB AND 2 110V OUTPUT

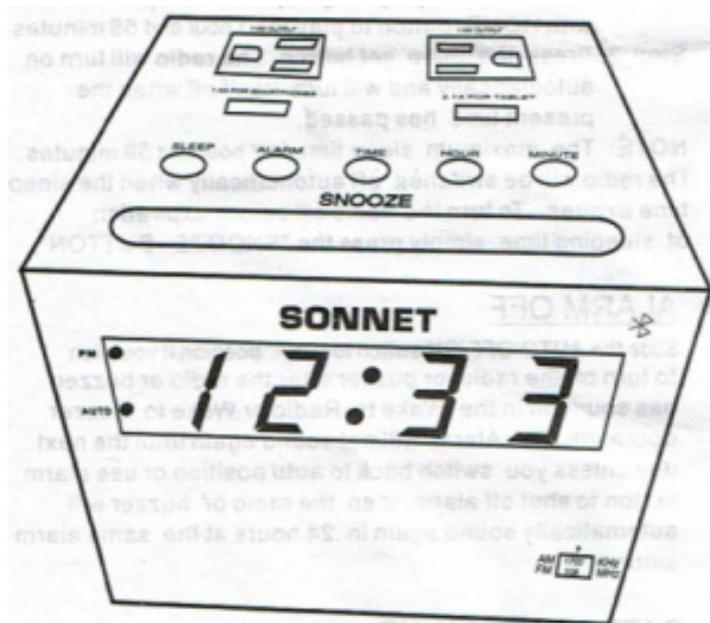

Model No.:R-1415BT
OWNER'S MANUAL



RISK OF ELECTRIC SHOCK. DO NOT OPEN



CAUTION:

TO REDUCE THE RISK OF ELECTRIC SHOCK.
DO NOT REMOVE SCREWS.
NO USER-SERVICEABLE PARTS INSIDE. REFER
SERVICING TO QUALIFIED SERVICE PERSONNEL



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated 'dangerous voltage' which may be produced by the appliance and which may constitute a risk of electric shock.



The exclamation mark in an equilateral triangle is intended to alert the user to the presence of important instructions. Read the instructions, operating and maintenance [servicing] in the [literature accompanying the appliance]

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BAND OF PLUG TO WIDE SLOT, FULLY INSERT;
WARNING: TO PREVENT ELECTRIC SHOCK HAZARD. DO NOT EXPOSE THIS APPLIANCE TO RAIN OR
MOISTURE. DO NOT REMOVE THE COVER. NO USER-SERVICEABLE PARTS INSIDE REFER SERVICING TO
QUALIFIED SERVICE PERSONNEL

IMPORTANT SAFEGUARDS FOR AUDIO PRODUCTS PLEASE READ CAREFULLY ALL THE FOLLOWING
IMPORTANT SAFEGUARDS THAT ARE APPLICABLE TO YOUR APPLIANCE

1. All the safety and operating instructions should be read before the appliance is operated.
2. The safety and operating instructions should be retained for future reference.
3. All warnings and cautions on the appliance and in the operating instructions should be adhered to
4. All operating and use instructions should be followed.
5. The appliance should not be used near water. For example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool, etc.
6. The appliance should be used only with a cart or stand that is recommended by the manufacturer.
7. The appliance should be mounted to a wall or ceiling only as recommended by the manufacturer.
8. An outdoor antenna should be located away from power lines.
9. The appliance should be situated so that its location or position does not interfere with its proper ventilation. For example, the appliance should not be situated on a bed, sofa, rug, or similar surface that may block the ventilation openings, or, placed in a built-in installation, such as a bookcase or cabinet that may impede the flow of air through the ventilation openings.
10. The appliance should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat.
11. The appliance should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
12. Precautions should be taken so that grounding or polarization means of the appliance are not defeated.
13. Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, pay particular attention to cords at plugs, convenience receptacles, and the point where they exit from the appliance.
14. The appliance should be cleaned only as recommended by the manufacturer.
15. The power cord of the appliance should be unplugged from the outlet when left unused for a long period of time.
16. Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.
17. The appliance should be serviced by qualified service personnel when:
 - a. The power supply cord or the plug has been damaged; or
 - b. Objects have fallen, or liquid has been spilled into the appliance.
 - c. The appliance has been exposed to rain; or
 - d. The appliance does not appear to operate normally or exhibits a marked change in performance or
 - e. The appliance has been dropped, or the enclosure damaged.
18. Servicing – The user should not attempt to service the appliance beyond that described in the operating instructions. All other servicing should be referred to qualified service personnel.


19. **WARNING** • To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
20. Where the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.

Contents

- [1 SPECIFICATIONS](#)
- [2 OPERATING INSTRUCTIONS](#)
- [3 Documents / Resources](#)
- [4 Related Posts](#)

SPECIFICATIONS

Power Source	: AC 110V/60Hz
Output Power	: 500mW music
Power Consumption	1.5W
Frequency Range	AM 530-1700 KHz
Clock Display	FM 88- 108 MHz
AC Output	0.9 Red Display
USB Output	: 110V-5A

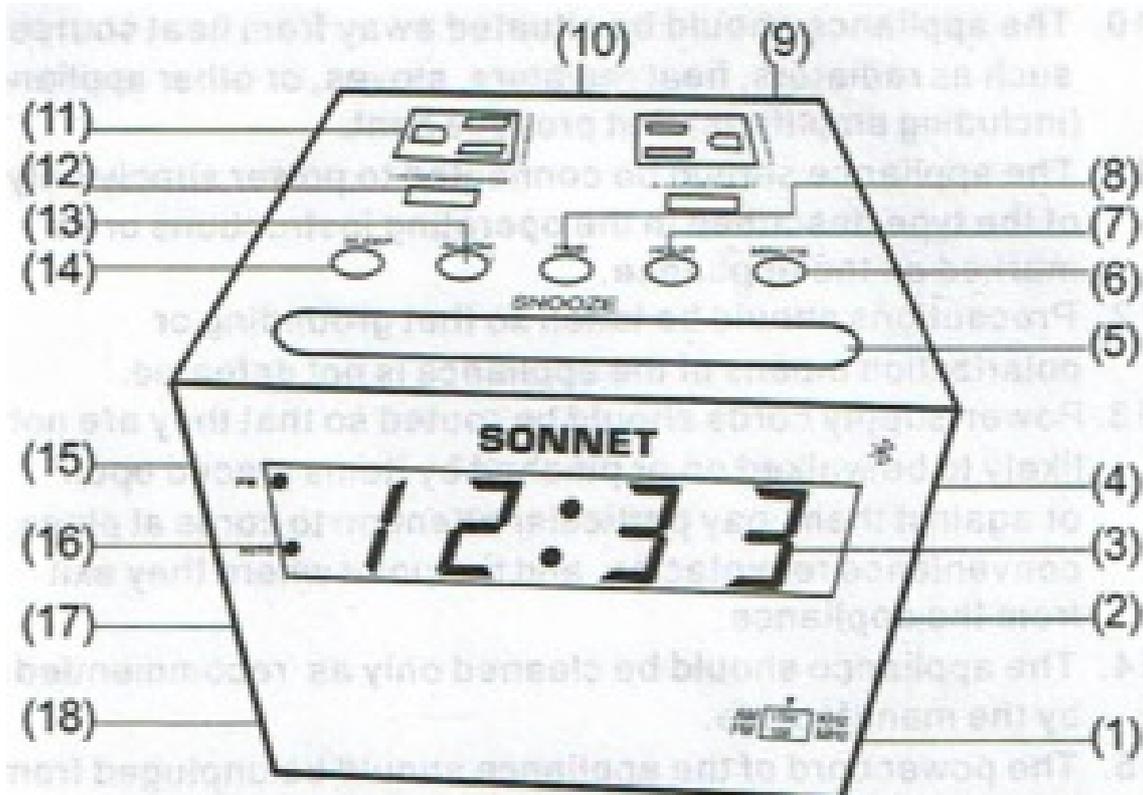

1. TUNING KNOB	10. BATTERY COMPARTMENT
2. AUX/AM/FM SELECTOR	11. 110V OUTPUT SOCKET
3. RED LED DISPLAY	12. USB CHARGING
4. VOLUME/BUZZER CONTROLLER	13. ALARM SET/OFF BUTTON
5. SNOOZE BUTTON	14. SLEEP BUTTON
6. MINUTE SET BUTTON	15. ON/OFF/AUTO BUTTON
7. HOUR SET BUTTON	16. ALARM ON INDICATOR
8. TIME SET BUTTON	17. SPEAKER
9. AUX CABLE	18. BT/AUX/RADIO BUTTON

OPERATING INSTRUCTIONS

1. ON/OFF/AUTO ... slide the switch to turn radio ON", of" or AUTO position. When the switch is in the ON" or OFF position, it means the radio will turn on or turn off; when in the AUTO position, it will permit the alarm automatically.
2. TIME SET BUTTON...Press this button simultaneously with the HOUR or MINUTE, button to set the desired time.
3. ALARM SET BUTTON...Press this button simultaneously with the HOUR or MINUTE button to set the desired wakeup time.
4. SLEEP SET BUTTON...Press this button to display the number of minutes(59 or less) which the radio will sound for and will automatically turn off after then.
5. HOUR AND MINUTE buttons ...Use these buttons to set the time while pressing.
6. AM/FM selector. .. Slide the selector to select the AM/FM desired radio band.
7. VOLUME/BUZZER CONTROLLER..... .. The alarm preset will be wake to buzzer; when you play the radio, please adjust the volume to the desired level.
8. TUNINGKNOB... Turn this knob to the desired radio station.
9. SNOOZE BUTTON...When you are awakened by music or buzzer but wish to sleep a few minutes more simply touch the "snooze button and it will shut off the music or buzzer for 9 minutes before the music or buzzer sounds again This can be repeated several times.
10. BT/AUXIRADIO BUTTON... When you push the button to the BT position, the Bluetooth will be on and ready to connect; AUX means you can use the unit for amplification; adio means the radio is on.

POWER SOURCE

Plug the AC line cord into the 120V/60Hz power outlet.

The unit is now working and the display figures will blink to show you to set the correct time.

TO SET THE CLOCK

Press the TIME SET BUTTON together with the HOUR BUTTON or MINUTE BUTTON to set the correct time.

TO SET THE ALARM TIME

Step 1 Press the Alarm set button to check the alarm time.

Step 2 Press the Alarm set button together with the HOUR or MINUTE button to adjust the alarm time.

NOTE: Slide the ON/OFF/AUTO switch to the AUTO position, a glowing dot appears on the lower-left corner of the display, indicating that the alarm has been set to operate **TO PLAY THE RADIO**

Step 1 Slide the ON/OFF/AUTO switch to the ON position.

Step 2 Slide AUX/AMIFM switch to desired AM or FM band.

Step 3 Select the desired radio station by turning the Tuning knob.

Step 4 Adjust the Volume to the desired listening level.

TO WAKE TO THE RADIO

Step 1 Set the alarm time as previously instructed.

Step 2 Turn the radio on select the desired radio station and volume setting as previously instructed.

Step 3 Slide the ON/OFF/AUTO switch to the AUTO position.

Your unit is now set to turn on automatically at the pre-selected alarm time.

TO WAKE TO BUZZER

Step 1 Set the alarm time as previously instructed.

Step 2 Slide the ON/OFF/AUTO switch to the AUTO position.

You will be awakened at the pre-selected alarm time by the buzzer To turn the Buzzer off, slide the ON/OFF/AUTO switch to OFF position or press the ALARM SET/OFF Button.

AUX-IN AMPLIFICATION

Your clock radio has a special feature, you can amplify the sound from your MP3. it, tape player or any audio device through your clock radio, Just follow the steps below:

1. Plug the AUX cable into the earphone jack of your portable devices like MP3 or iPod.
2. Turn the power of your portable device on.
3. Slide AUX/AMIFM SELECTOR to AUX position and adjust the volume.

SLEEP CONTROL

Step 1 Slide the AUTO/OFF/ON switch to AUTO position.

Step 2 Press the Sleep set button to display the sleep time. The display will indicate 59 minutes. If you wish the radio to play for a shorter period simply press the Sleep set button together with the MINUTE button to set the desired time period, Or if you wish to play longer, press the sleep button along with the HOUR button to play for 1 hour and 59 minutes

Step 3 Press the sleep set button. The radio will turn on automatically and will turn itself off when the present time has passed.

NOTE: The maximum sleep time is 1hour and 59 minutes.

The radio will be switched off automatically when the sleep time expires. To turn the radio off before the expiration of sleeping time, simply press the SNOOZE BUTTON **ALARM OFF**

Slide the AUTO/OFF/ON switch to the "OFF" position if you wish to turn off the radio or buzzer after the radio or buzzer has sounded in the Wake to Radio or Wake to Buzzer operation. The Alarm will not sound again until the next day unless you switch back to the auto position or see the alarm button to shut off the alarm, then the radio or buzzer will automatically sound again in 24 hours at the same alarm setting.

BATTERY BACK-UP

Your clock has a battery backup feature in case of power failure. A 9-volt battery (not included) is required. You must put in a battery to ensure the battery backup feature is ready in case of power failure. If power fails, the backup battery will automatically continue operation of the clock and maintain actual time. However, the display will not be lighted. When electrical power is restored, the display will light up again. The battery will maintain timekeeping for approximately 8 hours during power failure or interruption. **NOTE:** Remove the battery of the clock is to be unplugged for an lona time to avoid unnecessary battery drain.

Documents / Resources

	<p>SONNET R-1415BT Bluetooth Power Station Clock Radio [pdf] Owner's Manual R-1415BT, Bluetooth Power Station Clock Radio, R-1415BT Bluetooth Power Station Clock Ra dio, Power Station Clock Radio, Clock Radio, Radio</p>
---	---