


SONOFF B02-F WiFi Smart LED Filament Bulb User Manual

Home » SonOFF » SONOFF B02-F WiFi Smart LED Filament Bulb User Manual

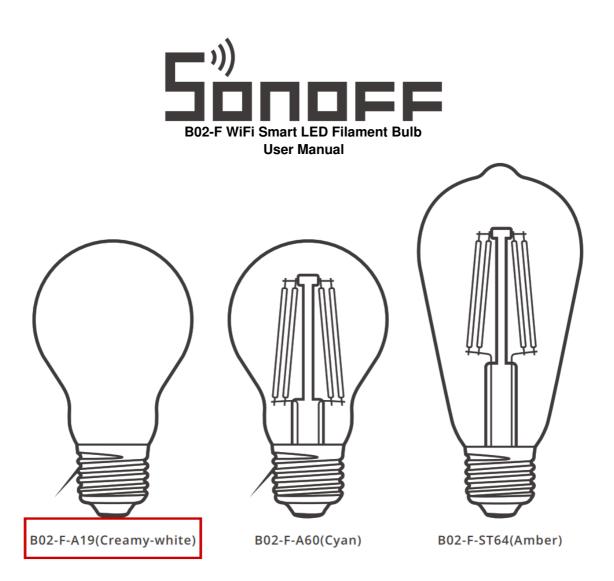


Contents

- **1 Operating Instruction**
- 2 Compatible Pairing Mode
- 3 Usage of being an ordinary bulb
- **4 Specifications**
- **5 Product Introduction**
- **6 Common Problems**
- 7 Documents / Resources
- **8 Related Posts**

Operating Instruction

1. Install the device

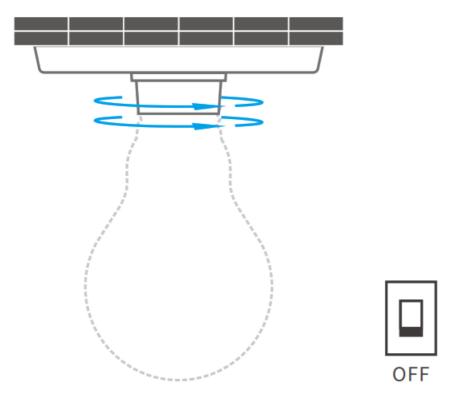


To avoid electric shock, please turn off the power before installing the device.

2. Download APP




Android™ & iOS

http://app.coolkit.cc/dl.html

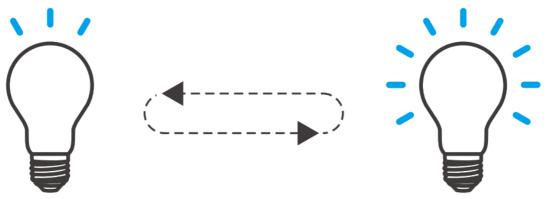

After powering on, the device will enter the quick pairing mode (Touch) during the first use. The device enters the "breathing mode".

The device will exit the quick pairing mode (Touch) if not paired within 3mins. If you want to enter this mode, please press the manual switch three times repeatedly at an interval of every 1s (Off-ON-Off-ON). The "breathing mode" indicates the light enters quick pairing mode.

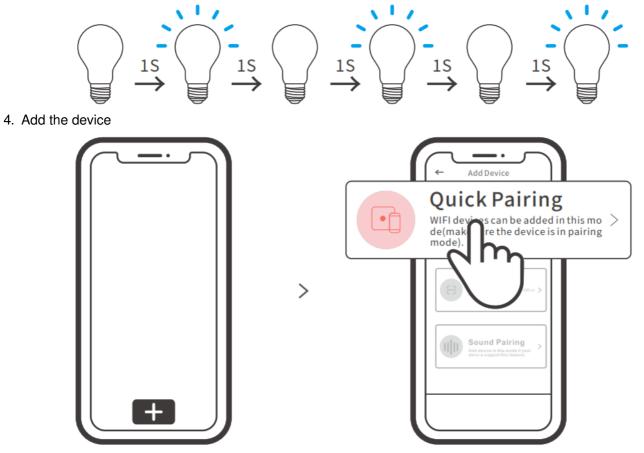

Tap "+" and select "Quick Pairing", then operate following the prompt on the app.

Compatible Pairing Mode

If you fail to enter Quick Pairing Mode (Touch), please try "Compatible Pairing Mode" to pair.

- 1. Press the light switch 5 times repeatedly at an interval of every 1s (Off-ON-Off-ON Off-ON-Off-ON) when the light is on. The "quick flash" indicates the device enters the compatible pairing mode.
- 2. Tap "+" and select "Compatible Pairing Mode" on APP.

 Select Wi-Fi SSID with ITEAD-***** and enter the password 12345678, and then go back to eWeLink APP and tap "Next". Be patient until pairing completes.


Usage of being an ordinary bulb

Power on the bulb, it will enter quick pairing mode (The bulb change from bright to dim and cycle the mode), after 10s, if power off, it will go solid and keep warm light at the highest brightness.

Specifications


Model	B02-F-A19, B02-F-A60, B02-F-ST64
Input	B02-F-A19: 120V AC 60Hz B02-F-A60, B02-F-ST64: 220-240V AC 50Hz
Luminous Flux	B02-F-A19: 720Lm B02-F-A60: 806Lm B02-F-ST64: 700Lm
Color temperature	B02-F-A19: 2700K-5000K, B02-F-A60: 2200K-6500K B02-F-ST64: 1800K-5000K
Rated power	B02-F-A19: 7.5W B02-F-A60, B02-F-ST64: 7W
Lamp base	B02-F-A19: E26 B02-F-A60, B02-F-ST64: E27
CRI	≥Ra80
Life Expectancy	15000h
Wi-Fi	IEEE 802.11 b/g/n 2.4GHz
Operating systems	Android & iOS
Dimension	B02-F-A19: 60x110mm B02-F-A60: 60x104mm B02-F-ST64: 64x138mm

Product Introduction

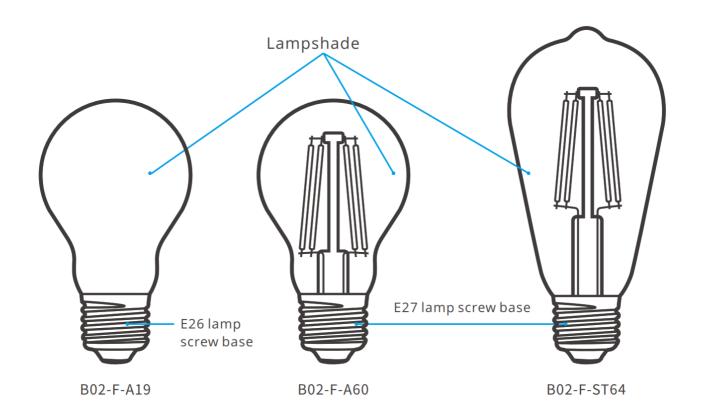


Features

SONOFF LED is a LED smart bulb that allows users to adjust the brightness and color, and remotely turn on/off the connected devices via your smartphone, schedule it on/off and share it to your family to control together.

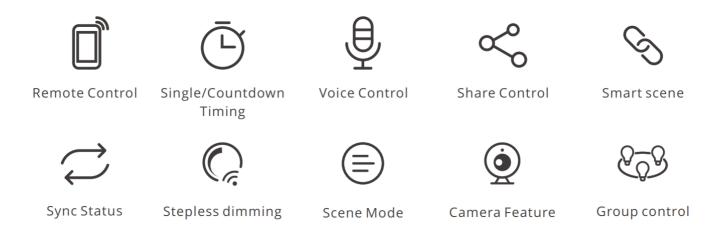

Factory Reset

Press the light switch 3 times repeatedly at an interval of every 1s (Off-ON-Off-ONOff-ON) when the light is on. The "breathing mode" indicates the device enters the quick pairing mode (Touch).

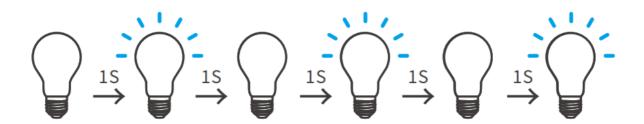

Please reset the device to factory defaults if you want to use other Wifi networks, then reconnect the network.

Common Problems

Why my device stays "Offline"?

- → ① Maybe you have entered a wrong Wifi password.
- ② Maybe there's too much distance between the switch your router or the environment causes interference, consider getting close to the router. If failed, please add it again.
- − ③ The 5G Wi-Fi network is not supported and only supports the 2.4GHz wireless network.
- 4 Maybe the MAC address filtering is open. Please turn it off.

If none of the above methods solved the problem, you can open the mobile data network on your phone to create a Wi-Fi hotspot, then add the device again.



Documents / Resources



SONOFF B02-F WiFi Smart LED Filament Bulb [pdf] User Manual

B02-F, WiFi Smart LED Filament Bulb, B02-F WiFi Smart LED Filament Bulb, Smart LED Filament Bulb, LED Filament Bulb, Filament Bulb, Bulb

Manuals+,