

SONOFF iFan04-L WiFi Ceiling Fan and Light Switch **Controller User Guide**

Home » SonOFF » SONOFF iFan04-L WiFi Ceiling Fan and Light Switch Controller User Guide The Cont

Contents


- 1 SONOFF iFan04-L WiFi Ceiling Fan and Light Switch **Controller**
- 2 Power off
- 3 Wiring instruction
- 4 Download the eWeLink APP
- 5 Add the device
- **6 FCC Warning**
- 7 Documents / Resources
- **8 Related Posts**



SONOFF iFan04-L WiFi Ceiling Fan and Light Switch Controller




Power off

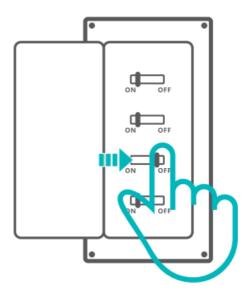

To avoid electric shocks, please consult the dealer or a qualified professional for help when installing and repairing.

Wiring instruction

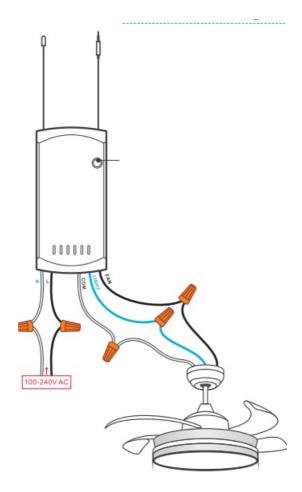


Please Install protection devices before connecting the llve wlre. (e.g. fuses or air switches).

Make sure the neutral wire and Ilve wire connection Is correct.

Download the eWeLink APP



Power on

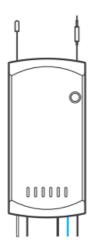

After powering on, the device will enter the quick pairing mode (Touch) during the first use, then the fan makes two short beeps and one long beep.

If not paired within 3mins, the device will exit the quick pairing mode (Touch). If you need en tar again, long press the "configuration button" on the controller or "Wi-Fi pairing button" on the RM433R2 remote controller and hold 5a until the fan makes two short and one long "bl" sound and release.

Add the device



Tap"+" and select "Quick Pairing", then operate following the prompt on the APP.

Pairing method for the device and SONOFF RM433R2 remote controller:



Please press any button within 5s after powering on again until the calling fan makes a sound "dl", and pairing Is

Scan the QR code or visit the website to learn about the detailed user manual and help.



FCC Warning

Changes or modifications not expressly approved by the party responsible for compliance could avoid the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Radiation Expoaura Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be

installed and operated with minimum distance 20cm between the radiator& your body. This transmitter must not be co-located or

operating in conjunction with any other antenna or transmitter.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the

FCC Rules. These limits are designed to provide reasonable protection against hannful interference in a residential installation.

This equipment generates, uses end can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful Interference to radio ortelevision reception, which can be determined by turning the equipment off and on, the user is encouraged to try to co1TBct the Intarferenca by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into en outlet on a circuit different from that to which the receiver Is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Hereby, Shenzhen Sonoff Technologies Co., Ltd. declares that the radio equipment type IFan04-L/ IFan04-H Is In compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:

Documents / Resources



SONOFF iFan04-L WiFi Ceiling Fan and Light Switch Controller [pdf] User Guide iFan04-L, WiFi Ceiling Fan and Light Switch Controller

Manuals+,