

SONORA  
**KL-01 Key Safe  
With 4 Digit Lock**



## SONORA KL-01 Key Safe With 4 Digit Lock User Manual

[Home](#) » [SONORA](#) » SONORA KL-01 Key Safe With 4 Digit Lock User Manual 

### Contents

- [1 SONORA KL-01 Key Safe With 4 Digit Lock](#)
- [2 USER MANUAL SYMBOLS](#)
- [3 SAFETY INSTRUCTIONS](#)
- [4 WALL MOUNTING](#)
- [5 USE OF THE KEY SAFE](#)
- [6 CLEANING](#)
- [7 Documents / Resources](#)
  - [7.1 References](#)
- [8 Related Posts](#)

SONORA

**SONORA KL-01 Key Safe With 4 Digit Lock**






## PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS.

Read the operating instructions carefully before putting the product into operation and keep the instructions, the receipt, and, if possible, the box with the internal packing. If you give this product to other people, please also pass on the operating instructions.

## USER MANUAL SYMBOLS

Important information for your safety is specially marked. It is essential to comply with these instructions in order to avoid accidents and prevent damage to the machine:

-  **WARNING:** This sign warns you of dangers to your health and indicates possible injury risks.
-  **CAUTION:** This sign refers to possible hazards to the machine or other objects.
-  **NOTE:** This sign highlights tips and information.

## SAFETY INSTRUCTIONS

1. Keep the device away from heat sources, direct sunlight, and moisture (never immerse it in liquids).
2. Do not immerse the device in water or any other liquid.
3. To ensure the safety of your children, keep all packaging materials (plastic bags, boxes, polystyrene, etc.) away.

**WARNING:** Do not allow small children to play with the packaging materials, as there is a risk of suffocation!

## DEVICE OVERVIEW

1. Combination digits
2. Key safe opening switch
3. Sliding cover of buttons



## WALL MOUNTING


Install the key safe on the wall, or other stable surface for greater security.

1. Choose a secluded, dry and secure location for your key safe. Make holes for the screw plugs in the wall according to where the holes are located inside the key safe (there are holes on the back of the key safe).
2. Place the screw plugs in the holes.
3. Install the key safe by aligning the holes in the key safe with the holes you made and screw in the screws to secure the key safe to the wall.

## USE OF THE KEY SAFE

### UNLOCK LOCK

1. Open the sliding cover.

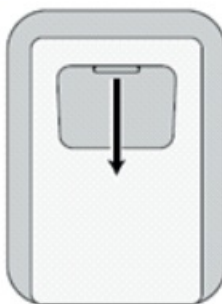


2. Rotate the digits to form the code 0-0-0-0 (factory setting).



3. Press down the key safe opening switch to open it.

### USER CODE DEFINITION

1. Unlock the key safe and open the door.
2. Slide the RESET switch located on the back of the door to the right and then up.

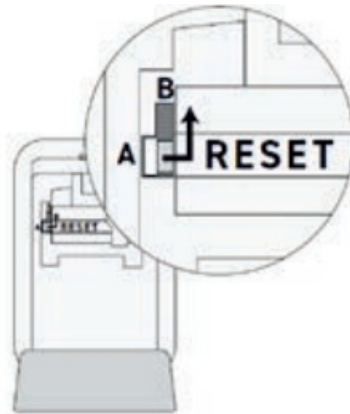


3. Enter the desired 4-digit code by rotating the digits to the desired combination.



### NOTES

- Make sure the digits are correctly aligned when setting your combination.
  - Do not enter easy codes e.g. 0-0-0-0
4. Slide the RESET switch down and then to the left.

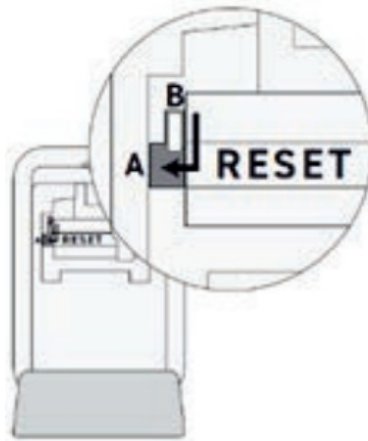

5. Close the door of the key case and rotate the digits to their original position. Saving the new user code will be complete.

## OPENING THE KEY SAFE WITH THE USER CODE AND USING THE DEVICE

1. Rotate the digits on the key safe to form the combination you have set.
2. Push the key safe opening switch down to open the key safe door.
3. Place the items you want to keep inside the key safe.
4. Close the door of the key safe rotate the digits to hide your code and lock the safe.
5. Slide up the sliding cover.

## CLEANING


1. Never immerse the device in water or other liquids.
2. Wipe the housing and buttons of the device with a soft cloth.

## STORAGE

Store the key safe in its original packaging in a dry and cool place.

- e-mail: [info@sun.gr](mailto:info@sun.gr)
- [www.sonora.com.gr](http://www.sonora.com.gr)

## Documents / Resources

	<p><a href="#">SONORA KL-01 Key Safe With 4 Digit Lock</a> [pdf] User Manual</p> <p>KL-01, KL-01 Key Safe With 4 Digit Lock, Key Safe With 4 Digit Lock, Safe With 4 Digit Lock, 4 D igit Lock, Lock</p>
---	--

## References

- [User Manual](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.