



## SONOS Mini Sub Compact Subwoofer Instructions

[Home](#) » [Sonos](#) » SONOS Mini Sub Compact Subwoofer Instructions 

### SONOS Mini Sub Compact Subwoofer Instructions



## Contents

- [1 Overview](#)
- [2 Controls and buttons](#)
- [3 Select a location](#)
- [4 Connect the cables](#)
- [5 True play™](#)
- [6 Change speaker pairing](#)
- [7 Specifications](#)
- [8 Important safety information](#)
- [9 Documents / Resources](#)
  - [9.1 References](#)
- [10 Related Posts](#)


## Overview

The compact wireless sub woofer for bold bass—



- Instantly adds a dimension of deep bass impact to your audio listening experience.
- Dual force-cancelling woofers neutralise buzz and distortion.
- A compact interpretation of our premium wireless sub woofer that's ideal for a small or medium-sized room, and low to moderate volume levels.
- Mix and match Son's products to create your wireless sound system, and add on any time.
- See **Setup** when you're ready to add Sub Mini to your Son's system (make sure the Son's product you plan to use with Sub Mini is already set up).

## Controls and buttons

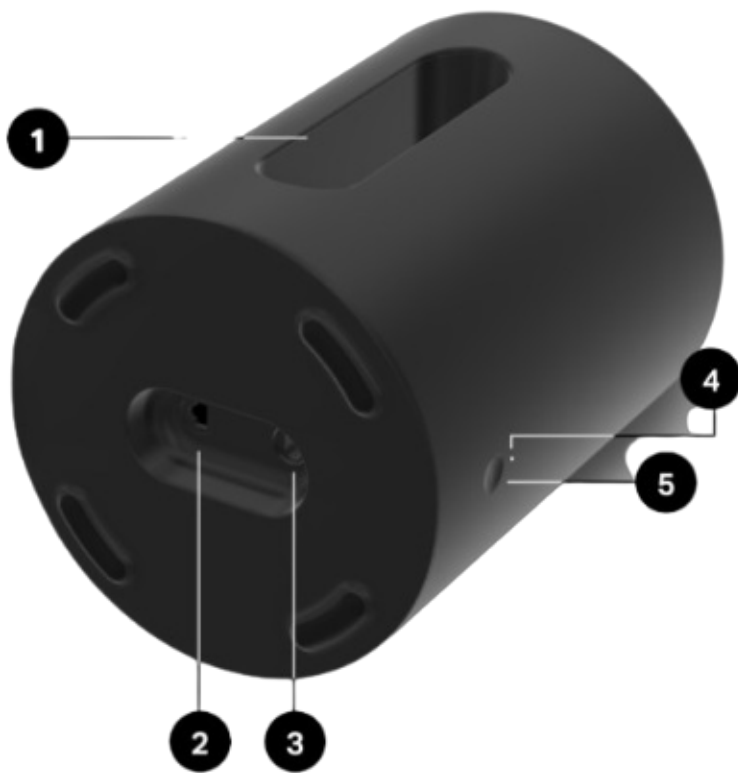

**1. Enter tunnel**

Efficiently moves air to maximise bass.

**2. Ethernet port**

Use an Ethernet cable if you want to connect to a router (optional)

**3. AC power (mains) input**

Use only the supplied power cord to connect to a power outlet. (Using a third party power cord will void your warranty.) Be sure to use the proper power adaptor for your country

**4. Status light**

Displays the product's connection to WiFi, indicates when the volume is muted, and signals errors. **Learn more**

If the light is distracting, you can turn it off in your room's settings.

**5. Join button**

Press to connect during setup.

## Select a location

For the best sound experience, place Sub Mini upright near the speaker you're going to use it with. The center tunnel can face in any direction.

If you place Sub Mini against a wall or your furniture, leave enough clearance for air to move freely through the center tunnel.

**Note:** Make sure the speaker you're pairing Sub Mini with is already set up in your system before you add Sub Mini.


**Learn more** about compatible products.

## Connect the cables

1. Attach the power cord and plug in Sub Mini.
2. Download the Son's app from the app store if you don't already have it.  
You'll use it to set up and control your Son's system. See Setup for more information.

## True play™

True play puts professional-grade tuning in the palm of your hands. Using the microphone on your iOS device (running iOS 8 or later), True play measures the unique acoustics of your space, then optimises the EQ so the bass never sounds muddy, harsh, or flat.


1. Select  > **System**, and pick the room you want to tune.
2. Choose **True play Tuning**. During tuning you'll move around the room holding your mobile device.

**Note:** True play tuning isn't available if Voice Over is enabled on your iOS device. Turn Voice Over off in your device settings before tuning your speakers.

## Change speaker pairing

You can easily change the Son's product Sub Mini was paired with during setup.

Sub Mini is compatible with most amplified Son's products running S2 software. It's recommended for use with Beam, Ray, One, One SL, and Symphonic products. **Learn more**

1. If you move Sub Mini to a new room, plug it back in and wait for the status light to stop flashing.
2. Go to  > **System** and choose the Son's product Sub Mini is paired with.
3. Tap **Remove Sub**, then pair Sub Mini with a different Son's product.

**Note:** When Sub Mini is paired with a Son's speaker, you won't see it displayed separately in your system. Any changes you make to that speaker, like volume, mute, or music selection, will also affect Sub Mini.

## Specifications

Feature	Description
<b>AUDIO</b>	
<b>Amplifier</b>	Two Class-D digital amplifiers.
<b>Woofers</b>	Two 6" force-cancelling woofers positioned face-to-face to minimise buzz, rattle, and distortion.
<b>Architecture</b>	Sealed cabinet neutralises distortion and enhances the bass response.
<b>Frequency response</b>	Plays down to 25 Hz.
<b>Digital processing</b>	A blend of equalisation and advanced limiting algorithms allows Sub Mini to produce the deep rich bass normally associated with much larger sub-woofers.
<b>Adjustable EQ</b>	Audio setting automatically equalise to balance Sub Mini and the paired Son's product(s). Use the Son's app to manually adjust bass and volume.
<b>Power and Connectivity</b>	
<b>Wireless connectivity</b>	Connects to WiFi network with any 802.11a/b/g/n 2.4 or 5 GHz broadcast capable router.
<b>Ethernet port</b>	10/100 port for hard wiring to your router.
<b>Power supply</b>	Auto switching, 100-240 V, 50/60 Hz internal power supply
<b>Memory</b>	4 GB DRAM 4 GB NV
<b>CPU</b>	Dual core architecture ARM Cortex-A9 processor, ARM Cortex M4 processor
<b>Supported products</b>	At least one amplified, non-portable product, such as Sons Beam, Ray, One, One SL, or Symphonic. <a href="#">Learn more</a>
<b>GENERAL</b>	
<b>Dimensions (H x D)</b>	9.1 in x 12 in (305 mm x 230 mm)
<b>Weight</b>	14 lb (6.35 kg)
<b>Operating temperature</b>	32° to 104° F (0 to 40° C)
<b>Storage temperature</b>	-13 to 158° F (-25° to 70° C)
<b>Package contents</b>	Sub Mini, power cable (6 ft/2 m), and Quick start Guide.
<b>Colors</b>	Black, White
<b>Finish</b>	Matte

\* Specifications subject to change without notice.

## Important safety information


1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.

5. Do not use this apparatus near water.
6. Clean only with dry soft cloth. Household cleaners or solvents can damage the finish on your Sonos products.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus that produce heat.
9. Protect the power cable from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
10. Only use attachments/accessories specified by the manufacturer.
11. Unplug this apparatus during lightning storms or when unused for long periods of time.
12. This product does not have any user-serviceable parts. Do not open or disassemble or attempt to repair it or replace any components. Refer all servicing to Sonos qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cable or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
13. The Mains plug should be readily available to disconnect the equipment.
14. **Warning:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
15. Do not expose apparatus to dripping or splashing and do not place objects filled with liquids, such as vases, on the apparatus.

# SONOS

---

## Documents / Resources

	<p><a href="#">SONOS Mini Sub Compact Subwoofer</a> [pdf] Instructions Mini Sub Compact Subwoofer, Sub Compact Subwoofer, Compact Subwoofer, Subwoofer</p>
---	--

## References

- [Sonos products that support Sub Mini | Sonos](#)
- [Sonos LED lights | Sonos](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.