



SONOS Move 2 Bluetooth And Wi-Fi Portable Home Speaker User Manual

[Home](#) » [Sonos](#) » SONOS Move 2 Bluetooth And Wi-Fi Portable Home Speaker User Manual 

Contents

- [1 SONOS Move 2 Bluetooth And Wi-Fi Portable Home Speaker](#)
- [2 Overview](#)
- [3 Controls and lights](#)
- [4 Connector panel](#)
- [5 Charging](#)
- [6 Battery Saver](#)
- [7 Bluetooth pairing](#)
- [8 Set up stereo pair](#)
- [9 Product settings](#)
- [10 Specifications](#)
- [11 DETAILS & DIMENSIONS](#)
- [12 Important safety information](#)
- [13 FAQ](#)
- [14 Documents / Resources](#)
 - [14.1 References](#)

SONOS

SONOS Move 2 Bluetooth And Wi-Fi Portable Home Speaker



Specifications

- Premium portable speaker
- IP56 water and dust resistance
- **Battery life:** Up to 24 hours
- Sonos S2 compatible

Overview

Sonos Move 2 is a premium portable speaker that lets you bring powerful stereo sound from room to room and outdoors.

- Weatherproof design. Move 2 meets IP56 water and dust resistance levels. Ideal for barbecues, pool parties, and other outdoor events.
- Battery lasts up to 24 hours. Easily recharge by setting Move 2 on the charging base (included). For power on the go, use a compatible USB-PD charger.
- Stream music over WiFi and Bluetooth®. Or connect a mobile device using a USB-C line-in adapter (sold separately).
- Sonos S2 compatible. Save content in the Sonos app and enable features like Sonos Voice Control and Trueplay™.
- See Setup when you're ready to add Move 2 to your Sonos system.

Controls and lights



- Volume up (slide right, or tap+)
- Volume down (slide left, or tap-)

Volume control

Note: When music displaying, press and hold + or - to quickly change the volume.

Play/Pause



- Press once to play or pause audio.
- Press and hold the button with the audio that's playing in another room (or ungroup)

Next/Previous



- Press > to skip to the next song.

- Press < to go to the previous song.

Note: You can't skip forward or go back when listening to a radio station.

Press the voice services button to turn the voice control on or off. You can set up a voice service in the Sonos app.

Voice services on/off



- When the light is on, voice control is available.
- When the indicator light is off, the control is off.

Note: Make sure the universal microphone switch is on

Status light

Displays the product's connection to WiFi or Bluetooth, indicates when the volume is muted, and signals errors.

[Learn more](#)




Indicates the battery status:

- Blinking orange indicates low battery.
- Solid orange indicates that 2 has started. The light will stay on for a 10seconds and then turn off unless the battery is very low.

Note: Check the battery level in the Sonos app.

Connector panel

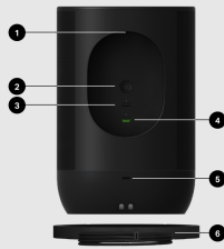

Handle

Allows for easy lifting and carrying so you can take the Move 2 wherever you go.

Power button

- Press to power on.
- The status light turns on to let you know Sonos Move2 is active.
- Press to put to sleep.
- The statuslight turns off and you'll hear a short one.
- Press and hold to power off.
- The status light turns off and you'll hear the longer tone.

Note: Move 2 goes to sleep automatically after 30 minutes when it's off the charging base.

Bluetooth button

- Press to connect to a mobile device via Bluetooth. Move 2 will connect to your most recently paired device.
- Press again to disconnect the current device.
- Press and hold to pair a new device.

Universal microphone switch

- Turn all microphones on or off. You can set up a voice service in the Sonos app.
- When the switch is off (down), microphones are disabled so microphone-related features like auto Trueplay and voice control are unavailable.
- When the switch is on (up),microphone-related features like Trueplay are available. Voice control is available if the voice services indicator light on top of the product is also on.

USB-C port

- **Power:** Use a compatible USB-C and USB-PD charger (USB-C with 45 W, 20 V/2.25 A) for charging Move 2 on the go.
- **Ethernet:** Use the Sonos ComboAdapter and an Ethernet cable to connect Move 2 directly to your router if you want to hardwire your speaker (helpful if your WiFi is unstable).
- **Line-in:** Use either the SonosLine-In Adapter or Combo adapter to connect your turntable, CD player, or

another device.

Charging dock (included)

Set Move 2 on the charging base and it stays active for at-home use while charging.


Note: Use only the included USB-PD charger (using a third-party power supply will void your warranty).

Charging

FEATURE	DESCRIPTION
Charging base	Set Sonos Move 2 on its charging base for easy recharging. The battery light will turn on for 10 seconds to let you know Move 2 is seated correctly (make sure the charging contacts are touching. Move 2 can recharge using Move's charging base).
	Use only with the included power supply (using a third-party power supply will void your warranty).
	The charging base is for indoor use only—be sure to keep it dry. Note: Check battery level in the Sonos app.
USB-C port	For charging Move 2 on the go, use a compatible USB-PD charger.

Battery Saver

You can enable Battery Saver in the Sonos app to best preserve battery life when Move 2 is inactive. When enabled, your Move 2 will power off automatically after 10 minutes in sleep mode.

Go to  > **System** > System, and select Move 2 to get started.

Note: Move 2 won't appear in the Sonos app until it's powered back on.

Bluetooth pairing

1. Turn Bluetooth on in your device settings.
2. Press and hold the Bluetooth button on the back of the speaker until you hear a tone, then release it. The status light blinks blue when the speaker is ready to pair.
3. Choose Sonos Move 2 from the list of available devices in your Bluetooth settings. Your mobile device will automatically connect the next time you press the Bluetooth button.

Select a location

You can put your Sonos Move 2 just about anywhere. For maximum performance, here are a few guidelines:

- For best performance, leave at least 1" (2.5 cm) space around the back of Move 2 when placing it next to a wall or shelf.
- It's ultra durable. With a tough outer shell and IP56 rating, Move 2 is built to withstand falls, bumps, moisture,

dust, UV rays, and extreme temperatures (the charging base is for indoor use only).

- Enable auto Trueplay™ in the Sonos app—Move 2 can tune itself for amazing sound no matter where you are and what you're listening to.
- Don't use or store your Sonos speaker upside down.

Microphone on/off

- The microphones in Sonos Move 2 are used for voice control and other features found in the Sonos app, like auto Trueplay™.
- The universal microphone switch on the back allows you to quickly turn on or off all microphones in the speaker and adds an extra level of privacy when you want it (it's turned on out of the box).
- The voice services button on top toggles voice control on and off without affecting the microphones needed for auto Trueplay and other microphone-related features.

When the voice services light is on:

- If you set up voice control, it's ready to listen.
- The universal microphone switch is on.

When the voice services light is off:

- If you set up voice control, it's not available.
- The universal microphone switch could be on or off.

Voice services

Use your voice to control your Sonos system with any voice-enabled Sonos product—play and control content, turn the volume up or down, and more.


- **Sonos Voice Control:** control your whole Sonos system with hands-free ease and unmatched privacy. Sonos Voice Control comes ready to use—it only takes a few seconds to add when you set up your speakers. More information
- **Amazon Alexa:** you'll need the Sonos app and the Alexa app with the Sonos skill enabled. You'll make some changes in both apps during setup. Learn more
- **Siri:** you'll need the Apple Home app. Add your AirPlay2-compatible Sonos speakers to the Apple Home app and then use an iPhone, iPad, or Apple TV to ask Siri to play music (currently limited to Apple Music). Learn more

Note: Voice control isn't supported in every country yet—this feature will be available as soon as Sonos and a voice service launch together in your region.

Trueplay™


- Every room is different. Trueplay tuning measures how sound reflects off walls, furnishings, and other surfaces in a room, then fine-tunes your Sonos speaker to make sure it sounds great no matter where you've placed it.
- Trueplay works on iOS mobile devices running iOS 8 or later. During tuning, you'll move around the room

holding your mobile device.

1. Select  > **System** and pick the room you want to tune.
2. Choose Trueplay Tuning to get started.

Auto Trueplay


Portable Sonos products like Sonos Roam and Move can tune themselves automatically. Auto Trueplay uses your speaker's microphone to detect the environment and make periodic tuning adjustments so you get great sound wherever your speaker is and whatever you're listening to.

Go to  > **System** and select your portable speaker to turn on auto Trueplay.

Set up stereo pair

Pair two Sonos speakers in the same room for an even wider, stereo experience. One speaker serves as the left channel and one serves as the right channel.

Note: The Sonos speakers in a stereo pair must be the same type.

1. Place the speakers 8 to 10 feet apart. Your favorite listening position should be 8 to 12 feet from the paired speakers—less distance increases bass, and more distance improves stereo imaging.
2. Go to  > **System**
3. Select one of the speakers you want to use in the stereo pair, then choose Set Up Stereo Pair to get started.

Product settings

You can customize Sonos products for your surroundings. Go  > **System** and select products.

Room Name	If you move your speaker to a new room, you can change its name in Settings.
Turn off WiFi (not available for Sonos Era 100, Era 300, or portable products)	<p>You can turn off your speaker's WiFi when it's connected to your network with an Ethernet cable. This reduces power consumption and can improve connectivity for wired speakers.</p> <p>For products like Amp and Port, turning off WiFi can reduce the internal temperature when they're placed in a rack or stacked. Learn more</p> <p>Note: WiFi is turned off for Era 100 and Era 300 when you connect a Sonos Combo Adapter using the Ethernet cable</p>
EQ	Sonos products ship with preset equalization settings. You can change the sound settings (bass, treble, or loudness) to suit your personal preferences. Learn more
Trueplay	Trueplay adapts the sound for your surroundings and content. Portable products can tune themselves automatically. Learn more
Volume Limit	You can set a maximum volume for each room. Learn more
Status Light	<p>Displays the speaker's connection to WiFi, indicates when the volume is muted, and signals errors. Learn more</p> <p>Note: If the light is distracting, you can turn it off in Settings.</p>
Touch Controls	You can disable the touch control on your speaker. You may want to do this to prevent a child or curious pet from accidentally adjusting playback or volume. Learn more
Battery Saver (portable products only)	To save battery life, you can set your portable speaker to power off automatically instead of going to sleep. It won't appear in the Sonos app until it's powered back on.

	<p>When a projector, turntable, stereo, or other audio device is connected to a Sonos product, you can adjust these line-in settings:</p> <ul style="list-style-type: none"> • Source name: Choose a name for the line-in device. • Source level: Adjust the line-in source level if you find the default volume setting is too quiet or distorted. • Audio Delay: Add a delay between the line-in source and Sonos to reduce the chance of audio issues occurring when you're playing line-in audio on grouped speakers. • Autoplay: Choose a room if you want line-in audio to start playing automatically when Sonos detects a signal on the line-in port.
Line-In (Sonos products with line-in capability)	

Specifications

FEATURE	DESCRIPTION
AUDIO	
Amplifiers	Three Class-D digital amplifiers.
Tweeters	Two angled tweeters create a crisp and accurate high frequency response and stereo separation.
Woofers	One midwoofer ensures the faithful playback of mid-range vocal frequencies and deep bass.
Microphones	<ul style="list-style-type: none"> • Far-field microphone array. • All microphones, including voice control, can be turned off using the universal microphone switch on the back of the speaker.
Voice	<ul style="list-style-type: none"> • Integrated voice control. • When the voice services light is off, voice assistants are not listening but other microphone-related features, like auto Trueplay, are still active. <p>Enable in the Sonos app.</p> <p>Note: The universal microphone switch must be turned on.</p>

FEATURE	DESCRIPTION
Auto Trueplay	<p>This software continually optimizes the speaker's sound for its environment and the audio content playing.</p> <p>Enable in the Sonos app.</p> <p>Note: The universal microphone switch must be turned on.</p>
Adjustable EQ	<p>Use the Sonos app to adjust:</p> <ul style="list-style-type: none"> • Bass • Treble • Loudness
POWER & CONNECTIVITY	
Power supply	<p>Charging base: 100-240 VAC, ~50/60 Hz, 1.2 A.</p> <p>Output: 15.0 VDC, 3.0 A, 45.0 W</p> <p>USB port: USB-C PD power with 45 W, 20 V/2.25 A.</p> <p>Note: Move 2 can recharge using Move's charging base.</p>

DETAILS & DIMENSIONS

FEATURE	DESCRIPTION
Auto Trueplay	<p>This software continually optimizes the speaker's sound for its environment and the audio content playing.</p> <p>Enable in the Sonos app.</p> <p>Note: The universal microphone switch must be turned on.</p>
Adjustable EQ	<p>Use the Sonos app to adjust:</p> <ul style="list-style-type: none"> • Bass • Treble • Loudness
POWER & CONNECTIVITY	
Power supply	<p>Charging base: 100-240 VAC, ~50/60 Hz, 1.2 A. Output: 15.0 VDC, 3.0 A, 45.0 W</p> <p>USB port: USB-C PD power with 45 W, 20 V/2.25 A.</p> <p>Note: Move 2 can recharge using Move's charging base.</p>
FEATURE	DESCRIPTION
Battery (replaceable)	<p>Capacity: 3100 mAh</p> <p>Replacement: Visit our website for more information.</p> <p>Disposal: Check with your local waste or recycling company to determine the proper disposal method in your area.</p>
WiFi	Connects to WiFi network with any 802.11 a/b/g/n/ac/ax 2.4 GHz or 5 GHz broadcast-capable router.
Bluetooth	Bluetooth 5.0 supports audio streaming from any Bluetooth enabled device.
USB-C	<p>Connect an audio source using an auxiliary cable and the Sonos Line-In Adapter.</p> <p>Connect your router with an Ethernet cable and the Sonos Combo Adapter. (Accessories sold separately.)</p>
CPU	<p>Quad Core</p> <p>4x A55 1.4 GHz</p>
Memory	<p>1 GB SDRAM</p> <p>8 GB NV</p>

Dimensions (H x W x D)	9.53 x 6.29 x 4.96 in (242 x 160 x 126 mm)
Weight	6.61 lb (3.0 kg) (includes battery)
Operating temperature	32° to 104° F (0° to 40° C)
Storage temperature	-13° to 158° F (-25° to 70° C)
Humidity resistant	Move 2 meets IP56 water and dust resistance levels. Note: The charging base is for indoor use only.
Colors	Matte black Matte white Matte olive
What's in the box?	Move 2, charging base with 6 ft (2 m) USB-C to C cable, 45 W USB-C PD power adapter, and Quickstart guide.

Important safety information

Caution: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Clean only with a dry soft cloth. Household cleaners or solvents can damage the finish of your Sonos products. Sonos products with rubber rings on the bottom, such as Move, Move 2, One, and One SL, may leave a faint ring on some surfaces treated with polyurethane. This ring can be easily removed by wiping it with a damp cloth.
6. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus that produce heat.
7. Do not expose batteries (battery pack or batteries installed) to excessive heat such as sunshine or fire.
8. Protect the power cable from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
9. Only use attachments/accessories specified by the manufacturer.
10. Unplug this apparatus during lightning storms or when unused for long periods.
11. Refer all servicing to Sonos qualified service personnel. Servicing is required when the apparatus has been damaged in any way.
12. The Mains plug should be readily available to disconnect the equipment.
13. Connections between this device and external equipment must be made using a shielded cable to maintain compliance with FCC radio frequency emission limits.

Warning: Sonos Move 2 meets IP56 water resistance levels. To reduce the risk of fire or electric shock, don't


expose this apparatus to a soaking rainstorm.

FAQ

Frequently Asked Questions

- **Q: How do I know when the battery is low?**
 - A: The battery light will blink orange when the battery is low. You can also check the battery level in the Sonos app.
 - **Q: Can I connect Move 2 to my router directly?**
 - A: Yes, you can use the Sonos Combo Adapter and an Ethernet cable to connect Move 2 directly to your router for a stable connection if your WiFi is unreliable.
-

Documents / Resources

	<p>SONOS Move 2 Bluetooth And Wi-Fi Portable Home Speaker [pdf] User Manual</p> <p>Move 2 Bluetooth And Wi-Fi Portable Home Speaker, Move 2, Bluetooth And Wi-Fi Portable Home Speaker, Wi-Fi Portable Home Speaker, Portable Home Speaker, Home Speaker, Speaker</p>
--	---

References

- [Adjust the bass, treble, balance, and loudness | Sonos](#)
- [Sonos LED lights | Sonos](#)
- [Setting a volume limit on Sonos products | Sonos](#)
- [Set up an Amazon Alexa device to control Sonos | Sonos](#)
- [Use Siri to control Sonos speakers | Sonos](#)
- [Create a stereo pair | Sonos](#)
- [Disable or enable Wi-Fi on your Sonos products | Sonos](#)
- [Using touch controls on Sonos products | Sonos](#)
- [Tune your Sonos speakers with Trueplay | Sonos](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.