



# SONOS Move Battery Powered Smart Speaker User Guide

[Home](#) » [Sonos](#) » SONOS Move Battery Powered Smart Speaker User Guide 

## Contents

- [1 SONOS Move Battery Powered Smart Speaker](#)
- [2 Move](#)
- [3 Controls and lights](#)
- [4 Back](#)
- [5 Select a location](#)
- [6 Automatic Trueplay™](#)
- [7 The microphone on/off](#)
- [8 Switch modes](#)
- [9 Bluetooth pairing](#)
- [10 Accessories](#)
- [11 Specifications](#)
- [12 Charging base](#)
- [13 Important safety information](#)
- [14 Documents / Resources](#)
- [15 Related Posts](#)

# SONOS

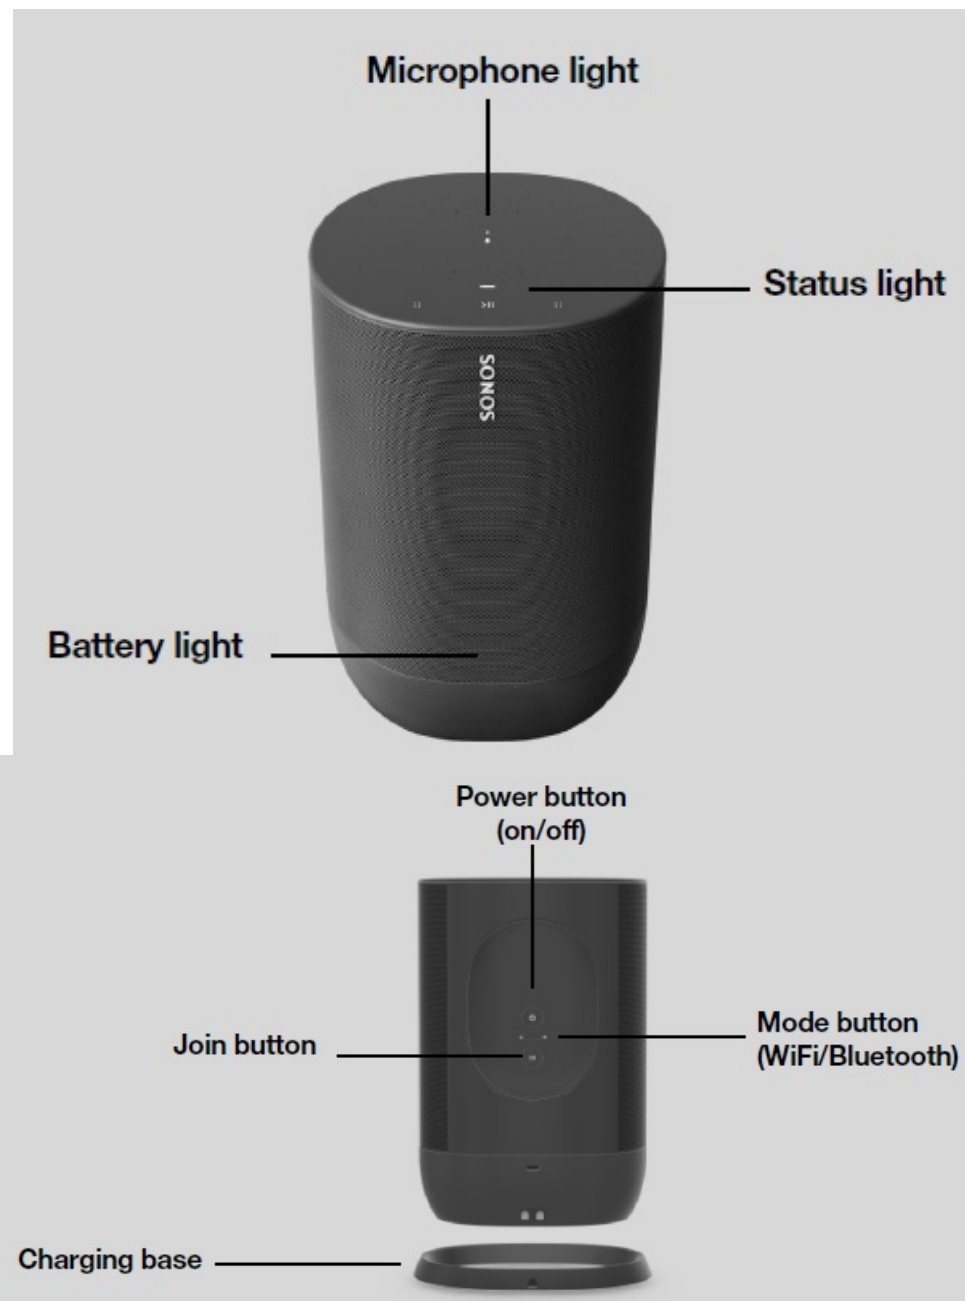
## SONOS Move Battery Powered Smart Speaker








### Move

The move is a durable, battery-powered smart speaker for indoor and outdoor listening.

- Rechargeable battery lasts up to 10 hours. Easily recharge by just setting Move on the charging base—no plugs or extra wires required. For power on the go, use a compatible USB-C charger.
- Weatherproof design is ideal for barbecues, pool parties, and more.
- Stream content over WiFi or Bluetooth®.
- Easy voice control with Amazon Alexa and Google Assistant built right in.
- Compatible with all your other Sonos speakers for multi-room listening.
- Works with either Sonos S2 Sonos or Sonos S1 (for Android and iOS).
- See Getting started when you're ready to add Motion to your Sonos system.



## Controls and lights

	Volume control	<ul style="list-style-type: none"><li>• Touch and hold to quickly change the volume:</li><li>• <b>Volume up</b> (right); <b>Volume down</b> (left).</li></ul>
	Play/Pause	<ul style="list-style-type: none"><li>• Press <i>once</i> to play or pause music.</li><li>• Press and hold to add the music that's playing in another room.</li></ul>
	Next/Previous	<ul style="list-style-type: none"><li>• Swipe right across the touch controls to skip to the next song.</li><li>• Swipe left to go to the previous song.</li></ul> <p><b>Note:</b> You can't skip forward or go back when listening to a radio station.</p>
	Microphone indicator	<p>Tap the microphone light to turn the microphone on or off.</p> <ul style="list-style-type: none"><li>• When the light is on, auto Trueplay tuning is enabled. If you have a voice service set up, voice control is also on.</li><li>• When the light is off, voice control and auto Trueplay are off.</li></ul>
Status light		<p>Indicates the speaker's status. <a href="#">Learn more</a></p> <p>If the light is distracting, you can turn it off in your room's settings.</p>
Battery light		<p>Indicates the battery status.</p> <ul style="list-style-type: none"><li>• Blinking orange: low battery.</li><li>• Solid orange: charging. The light may stay on for several minutes depending on how low the battery is. The battery will continue to charge when the light turns off.</li></ul> <p><a href="#">Learn more</a></p> <p><b>Note:</b> Move's remaining battery life is always visible in the Sonos app.</p> <p><b>Battery Saver:</b> To save battery life, you can set Move to power off automatically instead of going to sleep. Go to  &gt; <b>System</b>, and choose Move. It won't appear in the Sonos app until it's powered back on.</p> <p><a href="#">Learn more</a></p>

**Note:** If you don't want anyone (like a child) to control playback or change the volume using the speaker touch controls, you can disable them in the room's settings.

## Back

<b>Join button</b>	Press to connect to your Sonos system during setup.
<b>USB-C port</b>	Use a compatible USB-C charger for charging on the go. <ul style="list-style-type: none"><li>• USB port may also be used for diagnostic purposes. (It can't stream large data files, like some music files).</li></ul> <b>Note:</b> USB-C cable not included.
<b>Power button</b>	Press to power on; short press to put to sleep; long press (5 seconds) to power off. If Move is off the charging base, it goes to sleep to save battery when you're not using it. Just press the power button to wake it up.
<b>Bluetooth/WiFi toggle button</b>	Toggles between Bluetooth and WiFi. Use WiFi for setup; stream content over WiFi or Bluetooth®.
<b>Handle</b>	Allows for easy lifting and carrying so you can take the speaker wherever you go.
<b>Charging</b>	
<b>Charging base (included)</b>	<ul style="list-style-type: none"><li>• Just set Move on the charging base for easy recharging—no extra wires or cables needed.</li><li>• Make sure the speaker is seated properly in the base and the charging contacts are touching.</li><li>• Charging base is for indoor use only—be sure to keep it dry.</li></ul> <b>Note:</b> Move's remaining battery life is always visible in the Sonos app.
<b>AC power</b>	100-240 VAC, ~50/60 Hz, 1.2 A. Output: 18.0 VDC, 2.5 A, 45.0W
<b>USB port for charging on the go</b>	Use a compatible USB-C charger (type C PD power with 45W, 20V/2.25A)

## Select a location

You can put your speaker just about anywhere. Here are a few guidelines:

- The move is made to give you powerful sound anywhere—auto Trueplay tuning periodically balances the sound for wherever you are and whatever you're listening to. The microphone has to be on for automatic tuning so if you don't leave the microphone on all the time, turn it on for a few minutes whenever you move your speaker so it can automatically adjust the sound for your new surroundings.
- Move sounds great even when placed next to a wall or on a shelf. For best performance, leave at least 1" (2.5 cm) space around the back of the speaker.
- It's ultra-durable. With a tough outer shell and IP56 rating, Sonos Move is built to withstand falls, bumps, moisture, dust, UV rays, and extreme temperatures. Just don't leave it out in a soaking rainstorm, and remember that the charging base that's included is for indoor use only.
- Don't use or store your Sonos Move upside down.

## Automatic Trueplay™

You can put Sonos Move just about anywhere. Auto Trueplay tuning optimizes the sound for wherever you are

and whatever you're listening to. Your speaker's microphone is used to detect the environment so auto Trueplay can make periodic tuning adjustments to deliver the best sound. If you don't want the microphone on all the time, be sure to turn it on whenever you move the speaker. Your Sonos Move starts retuning when you pick it up, and continues to adjust the sound for a few minutes after you place it in a new location.

## **The microphone on/off**

The microphone is used for voice control, and for auto Trueplay tuning. Touch to turn the microphone on or off. When the microphone light is on,

- If you have a voice assistant, voice control is on and your voice assistant is ready to respond.
- Auto Trueplay tuning is enabled so Move can automatically adjust its sound for your surroundings.
- When the microphone light is off,
  - If you have a voice assistant, voice control is off.
  - Auto Trueplay tuning is disabled.

## **Switch modes**

Set Move up on your WiFi, then use the mode switch on the back of Move to switch between Bluetooth and WiFi. When you use Bluetooth for the first time, you'll need to pair Move with your device. Once paired, they'll reconnect automatically next time.

## **Bluetooth pairing**

1. Turn Bluetooth on in your device settings.
2. Press the mode button on the back of Move to switch to Bluetooth.
3. Choose Move from the list of available devices in your Bluetooth settings. If it's not there, press and hold the mode button and choose Move from the list when it appears. You'll hear a confirmation tone when your device is paired with Move. They'll automatically connect next time you switch Move to Bluetooth.

## **Accessories**

For add-ons tailored to perfectly fit your Move, see Accessories on our website.

## Specifications

Feature	Description
<b>Audio</b>	
Amplifier	Two Class-D digital amplifiers.
Tweeter	One tweeter creates a crisp and accurate high frequency response.
Mid-Woofer	One mid-woofer ensures the faithful playback of mid-range vocal frequencies plus deep, rich bass.
Microphones	<ul style="list-style-type: none"><li>• Far-field microphone array.</li><li>• Microphone LED, hard-wired to the voice microphones for extra privacy control so you're always aware when the microphone is active.</li></ul>
Voice Control	Integrated voice control.
<b>Networking*</b>	
Wireless Connectivity	Connects to WiFi network with any 802.11a/b/g/n 2.4 or 5 GHz broadcast-capable router
<b>General</b>	
Power Supply	<b>Charging base:</b> 100-240 VAC, ~50/60 Hz, 1.2 A. Output: 18.0 VDC, 2.5 A, 45.0 W <b>USB port:</b> USB type C PD power with 45W, 20V/2.25A.
Battery pack	<b>Capacity:</b> 2420-2500mAh <b>Replacement:</b> Visit our website <a href="http://www.sonos.com">www.sonos.com</a> for more information. <b>Disposal:</b> Check with your local waste or recycling company to determine the proper disposal method in your area.
Dimensions (H x W x D)	9.44 x 6.29 x 4.96 in (240 x 160 x 126 mm)
Weight	6.61 lb (3.0 kg) (including the battery)
Operating Temperature	32° to 113° F (0° to 45° C)
Storage Temperature	-13° to 158° F (-25° to 70° C)
Humidity Resistant	Move meets IP56 water and dust resistance levels. Just don't leave it out in a soaking rainstorm. <b>Note:</b> The charging base included with Move is for indoor use only.
Product Finish	Black with black grille
Package Contents	Sonos Move, charging base, and Quickstart guide.
* Specifications subject to change without notice.	

## Charging base

Charging base	<ul style="list-style-type: none"><li>• Just set Move on the charging base for easy recharging.</li><li>• Charging base is for indoor use only—be sure to keep it dry.</li></ul> <p><b>Note:</b> Move's remaining battery life is always visible in the Sonos app.</p>
AC power	100-240 VAC, ~50/60 Hz, 1.2A. Output: 18.0 VDC, 2.5 A, 45.0 W
Average active efficiency	90.1%
Efficiency at low load (10%)	85.3%
No-load power consumption	0.07W
Charging contacts	Make sure the speaker is seated properly in the base and the charging contacts are touching.

## Important safety information

Please read these instructions and heed all warnings. Keep them in a convenient location and make sure everyone in the household is aware of them.


**Caution:** Danger of explosion if the battery is incorrectly replaced. Replace only with the same or equivalent type.

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Clean only with a dry soft cloth. Household cleaners or solvents can damage the finish on your Sonos products.  
If the charging base leaves a mark on wood furniture, remove it with wood polish.
6. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
7. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus that produce heat.
8. Do not expose batteries (battery pack or batteries installed) to excessive heat such as sunshine or fire.
9. Protect the power cable from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
10. Only use attachments/accessories specified by the manufacturer.
11. Unplug this apparatus during lightning storms or when unused for long periods of time.
12. Refer all servicing to Sonos qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cable or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
13. The Mains plug should be readily available to disconnect the equipment.
14. Warning: Move meets IP56 water resistance levels. To reduce the risk of fire or electric shock, don't expose this



apparatus to a soaking rainstorm.

Documents / Resources

	<p><a href="#">SONOS Move Battery Powered Smart Speaker</a> [pdf] User Guide</p> <p>Move, Battery Powered Smart Speaker, Move Battery Powered Smart Speaker, Smart Speaker, Speaker</p>
-----------------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------