

SONOS Port WiFi Network Streamer



SONOS Port WiFi Network Streamer User Manual

[Home](#) » [Sonos](#) » SONOS Port WiFi Network Streamer User Manual 

Contents

- [1 SONOS Port WiFi Network Streamer](#)
- [2 Product Usage Instructions](#)
- [3 Overview](#)
- [4 Controls and buttons](#)
- [5 Select a location](#)
- [6 Connect the cables](#)
- [7 Change stereo to mono](#)
- [8 Specifications](#)
- [9 Important safety information](#)
- [10 FAQ](#)
- [11 Documents / Resources](#)
 - [11.1 References](#)

SONOS

SONOS Port WiFi Network Streamer



Specifications:

- Versatile streaming component
- Compatible with Sonos S2 and Sonos S1 apps (Android and iOS)
- Supports Apple AirPlay2
- 12V trigger for amplifier control
- Analog audio in and out
- Digital audio out via coaxial cable

Product Usage Instructions

Controls and Buttons:

- **Join button:** Used for setup.
- **Ethernet ports:** Connect to a router or network devices.
- **12V trigger:** Connect to a third-party amplifier for automatic on/off.
- **AC power input:** Plug in the power supply.
- **Analog audio in:** Connect your audio sources.
- **Analog audio out:** Connect to your audio component.
- **Digital audio out:** Use with a coaxial cable for digital output.

Select a Location:

You can place the Port in various locations such as an electronics rack, shelf, or credenza near your audio/video receiver.

Connect the Cables:

1. Connect the power cord and plug into your Port.
2. Connect Port to your audio equipment following these guidelines:
 - **Powered Speakers:** Use a Y-adapter audio cable for connection.
 - **Audio/Video Receiver (AVR) or Amplifier:** Use digital coaxial or standard RCA audio cables based on inputs.
 - **Computer:** Utilize a stereo mini to RCA Y-adapter audio cable for connection.

Overview

The versatile streaming component for your stereo or receiver



- Plug in the audio equipment you already own and listen out loud.
- Stream everything you love using the Sonos app and Apple AirPlay2.
- Use line-in to connect your turntable, or play music straight from a friend's phone on your stereo.
- 12V trigger automatically turns your amplifier on and off.
- Works with either the Sonos S2 or Sonos S1 app (for Android and iOS).
- See Setup when you're ready to add Port to your Sonos system

Controls and buttons

1. Join button

Press to connect during setup.

2. Ethernet ports

Use an Ethernet cable to connect to arouter, computer, or additional network device like a network-attached storage (NAS) device(optional).

LED indicators:

Flashing Green (network activity)

Yellow (link connection)

3. 12V trigger

Use a stereo cable or a 3.5mm to 3.5 mm cable to wake your third-party amplifier whenever Sonos starts playing audio.

Note: Read the guide that came with your amplifier for details on the use of 12V trigger input.

4. AC power (Mains) input

Use only the included power supply(using a third-party power supply will void your warranty).

5. Analog audio in

Use a standard RCA audio cable(included) to connect Port's analog audio inputs to the audio outputs on another device, like a pre-amplified turntable.

6. Analog audio out

Use a standard RCA audio cable(included) to connect Port's analog audio outputs to the audio inputs on your amplified audio component.

7. Digital audio out

Use a digital coaxial cable to connect Port's coaxial digital audio output to the audio inputs on your amplified audio component.

Select a location

You can place Port just about anywhere—in an electronics rack, on a shelf, or on a credenza with your audio/video receiver (AVR).

Rack mounted

Port fits perfectly in any electronics rack using a third-party shelf. You can fit 3 units across a standard rack and take up only 1 rack unit of vertical space.

Placed on a credenza

- Place horizontally on a stable and level surface.

- If you put it on a shelf, for best performance place it at the front and leave at least 2" space all around.

Connect the cables

1. Connect the power cord and plug in your Port.
2. Connect Port to your audio equipment.

For powered speakers:

- You may need a Y-adaptor audio cable (one 1/8" stereo mini plug to dual RCA male connectors) to connect powered speakers to the audio outputs on the Sonos product.
- If your speakers have a male 1/8" stereo plug, you'll need to attach a female-to-female coupler between the speaker plug and the Y-adaptor audio cable.


For an audio/video receiver (AVR) or amplifier:

- If you have digital inputs on your AVR or amplifier, you can use a digital coaxial cable to connect Port's digital output to the digital input on the receiver.
- If you have analog inputs on your AVR or amplifier, use a standard RCA audio cable to connect Port's analog audio output to the audio inputs on the receiver.
- Select the proper input channel on the receiver. See Control volume from your AVR or amplifier to adjust volume settings.

For a computer:

- You'll need a stereo mini to RCA Y-adaptor audio cable (one 1/8" stereo mini plug to dual RCA male connectors) to connect from Port's analog audio output to your computer's audio input.
3. Download the app from the app store on your mobile device if you don't already have it. You'll use it to set up and control your Sonos system.

Line in


Connect an audio device, like a projector, CD player, or turntable (with a built-in phono preamp), to any Sonos product that has a line-in port (Era 300, Era 100, Amp, Port, or Five). Then go to  > Line-In to select the source and start playback.

Note: Era 300 and Era 100 require a Sonos Line-In or Combo Adapter (sold separately). Other products may require a different type of line-in adapter depending on your audio source.
Learn more

Line out

Control volume from your AVR or amplifier (Fixed line-out level)


Set Port's line-out level to Fixed if you want to control the volume exclusively from your AVR or amplifier. You won't be able to use the Sonos app to adjust the volume or equalization settings.

- Go to  System, choose Port, and choose Fixed for the Line-Out Level.

Control the volume from Sonos (Variable line-out level)


When Port's line-out level is set to Variable, you can use the Sonos app to adjust the volume.

1. Adjust your AVR or amplifier's volume to your typical listening volume.

2. Make sure the line-out level is set to Variable. If it's not, you'll need to change it. (Go to  > System, choose Port, and choose Variable for the Line-Out Level.)
3. Use the Sonos app to adjust the volume so you can hear music on your Sonos system. It may need to be turned up fairly high.
4. Readjust the volume on your AVR or amplifier so it falls within your typical listening range.

Use Sonos to control the volume on your home theater or amplifier


When Port's line-out level is set to Pass-Through, Port stays at a fixed volume and sends volume commands to your amplifier. You can control volume using the Sonos app, a universal remote, or your voice if you have a voice assistant enabled.

- Go to  System, choose Port, and choose Pass-Through for the Line-Out Level.

Note: Make sure your amplifier supports Pass-Through. If you set the line-out level to Pass-Through and your amplifier doesn't support it, you won't be able to control the volume.

Change stereo to mono

Port plays audio in stereo by default. You can change the sound settings for the room associated with the Port so it plays in two mono channels when playing music.

1. Go to  System, and select Port.
2. Select Advanced Audio > Stereo/Mono, then choose an option. [Learn more](#)

Specifications

Feature	Description
AUDIO	
Sound quality	THD+N<0.009%, 20 Hz-20 kHz
Line in	Analog (RCA), auto-detecting
Line out	Analog (RCA), digital (coaxial)

NETWORKING

- **Wireless connectivity**

Using Sonos S2: Connects to WiFi network with any 802.11a/b/g/n 2.4 or 5 GHz broadcast-capable router.

Using Sonos S1: Connects to WiFi network with any 802.11b/g 2.4 GHz broadcast-capable router. 802.11n

only network configurations are not supported—you can either change the router settings to 802.11b/g/n or connect a Sonos product to your router.

- **Ethernet port**

Two 10/100Mbps Ethernet ports.

You can plug a Sonos product directly into your router if your WiFi is unstable.

GENERAL

Feature	Description
Power supply	Auto-switching 100 - 240V ~ 50-60 Hz 1A AC universal input Output: 12.0 VDC, 1.0 A, 12.0 W Average active efficiency: 84.2% Efficiency at low load (10%): 78.7% No-load power consumption: 0.06 W
Dimensions (H x W x D)	1.6 x 5.4 x 5.4 in. (41 x 138 x 138 mm)
Weight	1 lb (.47 kg)
Operating temperature	32° to 104° F (0 to 40° C)
Storage temperature	-4° to 158° F (-20° to 70° C)
Product finish	Black
Package contents	Sonos Port, power cord, RCA cable, and Quickstart Guide

Specifications subject to change without notice.

Important safety information

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.

6. Clean only with dry soft cloth. Household cleaners or solvents can damage the finish on your Sonos products.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus that produce heat.
9. Protect the power cable from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
10. Only use attachments/accessories specified by the manufacturer.
11. Unplug this apparatus during lightning storms or when unused for long periods of time.
12. This product does not have any user-serviceable parts. Do not open or disassemble or attempt to repair it or replace any components. Refer all servicing to Sonos qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cable or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
13. The Mains plug should be readily available to disconnect the equipment.
14. **Warning:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
15. Do not expose apparatus to dripping or splashing and do not place objects filled with liquids, such as vases, on the apparatus.

FAQ

Can I use the Port with both Sonos S2 and S1 apps?


Yes, the Port is compatible with both the Sonos S2 and S1 apps for Android and iOS devices.

How do I connect my turntable to the Port?




Use a standard RCA audio cable to connect your turntable to the Port's analog audio inputs.

What is the purpose of the 12V trigger on the Port?

The 12V trigger allows automatic control of your amplifier, turning it on and off based on Port activity.

<div><div>Port</div><div></div></div>	<div>SONOS Port WiFi Network Streamer [pdf] User Manual</div> <div>Port WiFi Network Streamer, WiFi Network Streamer, Network Streamer, Streamer</div>
--	--

References

-  [Dual Mono mode | Sonos](#)
-  [Use Line-In on Sonos | Sonos](#)
-  [Accessories, Add-Ons, and Extras | Sonos](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.