



# SONOS Roam SL Portable WiFi and Bluetooth Speaker User Manual

[Home](#) » [Sonos](#) » SONOS Roam SL Portable WiFi and Bluetooth Speaker User Manual 

SONOS Roam SL Portable WiFi and Bluetooth  
Speaker User Manual

# Roam SL



Guides > Roam SL



## Contents

- 1 Overview
- 2 Controls and lights
- 3 Connector panel
- 4 Select a location
- 5 Bluetooth pairing
- 6 Charging
- 7 Set up stereo pair
- 8 Product settings
- 9 Specifications
- 10 Important safety information
- 11 Documents / Resources
  - 11.1 References
- 12 Related Posts

## Overview



The ultra portable speaker for listening at home and on the go—

- Enjoy up to 10 hours of continuous playback on a single charge. When it's time to recharge:
  - Connect the included cable to a USB power source (7.5W minimum; 10W recommended).
  - Place on a compatible Qi wireless charger.
  - Place Sonos Roam SL on its custom wireless charger (sold separately).
- Lightweight, durable, waterproof design is ideal for the beach, pool parties, and more.
- Stream content over WiFi or Bluetooth®.
- Control your Sonos system with the Sonos S2 app (for Android and iOS).
- See Setup when you're ready to add Sonos Roam SL to your system.

## Controls and lights



### Volume control

- Volume up (+)
- Volume down (-)

Press and hold to quickly change the volume.

**Note:** You can also use the Sonos app to adjust volume.



## Playback control

- Press once to play or pause audio.
- Double press for next track.
- Triple press for previous track.

Note: You can't skip forward or go back when listening to a radio station.



## Status light

Displays the product's connection to WiFi or Bluetooth, indicates when the volume is muted, and signals errors:

- Solid white—on
- Blinking blue— Bluetooth pairing mode
- Solid blue— connected with device via Bluetooth
- Flashing orange—if the product gets too hot, the status light flashes orange and the product chirps 3 times. Move the product to a cooler location, away from direct sunlight. [Learn more](#)



## Battery light

Indicates the battery status:

- Blinking orange indicates low battery.

- Solid orange when it starts charging. The light may stay on for several minutes depending on how low the battery is. The battery will continue to charge when the light turns off. [Learn more](#)

**Battery Saver:** To save battery life, you can set Sonos Roam SL to power off automatically instead of going to sleep. Go to ⚙ > System, and select Sonos Roam SL. It won't appear in the Sonos app until it's powered back on.

Note: Sonos Roam SL's remaining battery life is always visible in the Sonos app.

## Connector panel



### (1) Power/Bluetooth button

Power on/sleep/wake: Short press (less than 1 second)

When you put Roam to sleep, you'll hear a quick tone and the status light will turn off. Press again to wake. If you put Roam to sleep, it will stay asleep for 10 minutes before powering off.

Bluetooth: To pair with a device, press and hold until you hear the second tone and the status light blinks blue, then select Roam from your device's Bluetooth pairing list.

To pair with a different device, wait until Roam connects to the current device, then press and hold again to restart the pairing process.

Power off: Long press (about 5 seconds)

Press and hold until you hear the third tone. The status light blinks blue, then turns off.

### 2 USB-C port

Use the included cable to connect a compatible 7.5W minimum (10W recommended) USB-A power source. ([Sonos 10W USB Power Adapter sold separately.](#))

## Select a location

You can use your speaker just about anywhere. Here are a few things to keep in mind:

- You can place the speaker next to a wall or on a shelf—for best performance, leave at least 1" (2.5cm) space around the back of the speaker.
- The speaker's durable design includes silicone end caps to protect from drops or bumps.

- Avoid placing the speaker in direct sunlight.
- You can place Sonos Roam SL horizontally or vertically. When vertical, the speaker takes up barely any room. Position it horizontally for added stability on uneven surfaces.

## Bluetooth pairing

1. Turn on Bluetooth in your device settings.
2. Press and hold the power button on the speaker for 2 seconds until you hear the second pairing tone, then release. The status light blinks blue when the speaker is ready to pair.
3. Choose Sonos Roam SL from the list of available devices in your Bluetooth settings. Your mobile device will automatically connect next time.


## Charging

---

### USB-C to USB-A

Use the included cable to connect a compatible 7.5W minimum (10W recommended) USB-A power source. (**Sonos 10W USB Power Adapter** sold separately.)


**Note:** Battery life is visible in the Sonos app.

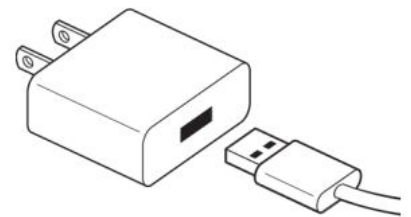

---

### Sonos Wireless Charger (sold separately)

Place the speaker on the smooth, magnetized side of the charger for easy recharging—no extra wires or cables needed.

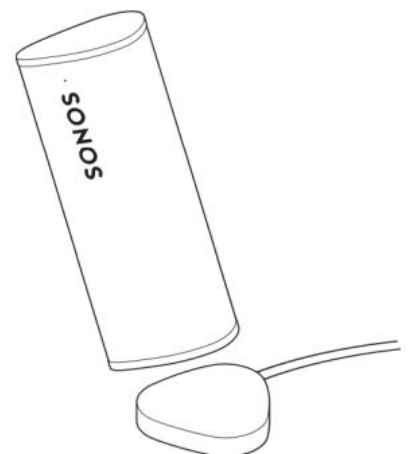

## Qi charger

Place the speaker on a compatible Qi-certified wireless charger.



## Set up stereo pair

Pair two Sonos speakers in the same room for an even wider, stereo experience. One speaker serves as the left channel and one serves as the right channel. Note: The Sonos speakers in a stereo pair must be the same type.

1. Place the speakers 8 to 10 feet apart. Your Favorite listening position should be 8 to 12 feet from the paired speakers—less distance increases bass, more distance improves stereo imaging.
2. Go to > System.
3. Select one of the speakers you want to use in the stereo pair, then choose Set Up Stereo Pair to get started.

[Learn more](#)

## Product settings

You can customize Sonos products for your surroundings. Go to ⚙ > System and select a product.

---

## Room Name

If you move your speaker to a new room, you can change its name in **Settings**.

---

## Turn off WiFi

(not available for Era 100, Era 300 or portable products)

You can turn off your speaker's WiFi when it's connected to your network with an Ethernet cable. This reduces power consumption and can improve connectivity for some wired speakers. For products like Amp and Port, turning off WiFi can reduce the internal temperature when they're placed in a rack or stacked. [Learn more](#)

---

## EQ

Sonos products ship with preset equalization settings. You can change the sound settings (bass, treble, balance, or loudness) to suit your personal preferences. [Learn more](#)

---

## Trueplay

Trueplay adapts the sound for your surroundings and content. Portable products can tune themselves automatically. [Learn more](#)

---

## Volume Limit

You can set a maximum volume for each room. [Learn more](#)

---



## Status Light

Displays the speaker's connection to WiFi, indicates when the volume is muted, and signals errors. [Learn more](#)

**Note:** If the light is distracting, you can turn it off in **Settings**.

---

## Touch Controls

You can disable the touch control on your speaker. You may want to do this to prevent a child or curious pet from accidentally adjusting playback or volume. [Learn more](#)

---

## Battery Saver (for portable products only)

To save battery life, you can set your portable speaker to power off automatically instead of going to sleep. It won't appear in the Sonos app until it's powered back on.

---

When a projector, turntable, stereo, or other audio device is connected to a Sonos product, you can adjust these line-in settings:

- **Source name:** Choose a name for the line-in device.
- **Source level:** Adjust the line-in source level if you find the default volume setting is too quiet or distorted.
- **Audio Delay:** Add a delay between the line-in source and Sonos to reduce the chance of audio issues occurring when you're playing line-in audio on grouped speakers.
- **Autoplay:** Choose a room if you want line-in audio to start playing automatically when Sonos detects a signal on the line-in port. (Autoplay is disabled by default.)

## Line-In

(for Sonos products with line-in capability)

## Specifications

Feature	Description
AUDIO	
Amplifier	Two Class-H digital amplifiers.
Tweeter	One tweeter offers crisp high frequencies.
Mid-woofer	One mid-woofer ensures faithful playback of mid-range vocal frequencies.
Adjustable EQ	Use the Sonos app to adjust bass, treble, and loudness.
SOFTWARE	
Sonos S2	Set up and control Sonos Roam SL with the Sonos app.
Apple AirPlay 2	Works with AirPlay 2 on Apple devices iOS 11.4 and higher.
DETAILS	
IP rating	IP67 (speaker can be submerged in 1m of water for up to 30 minutes).

Dimensions (H x W x D)	6.61 x 2.44 x 2.36in (168 x 62x 60mm)
Weight	.95lb. (.43kg)
Memory	1GB SDRAM; 4GB NV
CPU	Quad Core; 1.3GHz A-53
Operating temperature	41° to 95°F (5° to 35°C)
Storage temperature	-4° to 145°F (-20° to 63°C)
Package contents	Sonos Roam SL, USB cable (3.9ft/ 1.2m), and Quickstart Guide

POWER & CONNECTIVITY

WiFi	Connects to WiFi network with any 802.11a/b/g/n/ac 2.4 or 5GHz broadcast-capable router.
Bluetooth	Bluetooth 5.0 supports audio streaming from your mobile devices.
Inputs	USB-C for charging

## Battery

18Wh battery provides up to 10 hours of continuous playback on a single charge

---

## Recharging

Recharge with the included USB-C cable connected to a USB power adapter (7.5W (5V/1.5A) minimum, 10W recommended), a wireless Qi charger, or the **Sonos Roam Wireless Charger** (sold separately)

---

## Charging time

0% to 50% in 1 hour on USB; 2 hours wirelessly

## Important safety information

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Clean only with a dry soft cloth. Household cleaners or solvents can damage the finish on your Sonos products. Sonos products with rubber rings on the bottom, such as Move, One, and One SL, may leave a faint ring on some surfaces treated with polyurethane. This ring can be easily removed by wiping with a damp cloth.
6. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
7. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus that produce heat.
8. Protect the power cable from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
9. Only use attachments/accessories specified by the manufacturer.
10. Unplug this apparatus during lightning storms or when unused for long periods of time.
11. Refer all servicing to Sonos qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cable or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
12. The Mains plug should be readily available to disconnect the equipment.
13. Sonos Roam and Sonos Roam SL meet IP67 water resistance levels.

## Documents / Resources

<div data-bbox="140 96 277 297"><p>Roam SL</p></div>	<p><a href="#">SONOS Roam SL Portable WiFi and Bluetooth Speaker</a> [pdf] User Manual</p> <p>Roam SL Portable WiFi and Bluetooth Speaker, Roam SL, Portable WiFi and Bluetooth Speaker, and Bluetooth Speaker, Bluetooth Speaker, Speaker</p>
---	--

## References

- [Adjust the bass, treble, balance, and loudness | Sonos](#)
- [Sonos LED lights | Sonos](#)
- [Setting a volume limit on Sonos products | Sonos](#)
- [Create a stereo pair | Sonos](#)
- [Disable or enable Wi-Fi on your Sonos products | Sonos](#)
- [Using touch controls on Sonos products | Sonos](#)
- [Tune your Sonos speakers with Trueplay | Sonos](#)
- [Sonos LED lights | Sonos](#)
- [Roam Power Adapter | Sonos](#)
- [Roam Power Adapter | Sonos](#)
- [Roam Wireless Charger | Sonos](#)