

SONOS Roam SL (W) Portable Smart Speaker In Lunar User Guide

Home » Sonos » SONOS Roam SL (W) Portable Smart Speaker In Lunar User Guide 🖺

SONOS Roam SL (W) Portable Smart Speaker In Lunar User Guide



Contents

- 1 OVERVIEW
 - 1.1 The ultra portable speaker for listening at home and on the go.
- 2 Controls and lights
- 3 Connector panel
- 4 Select a location
- 5 Bluetooth pairing
- 6 Charging
- 7 Set up stereo pair
- 8 Product settings
- 9 Specifications
 - **9.1 AUDIO**
 - 9.2 SOFTWARE
 - 9.3 DETAILS
- 9.4 POWER & CONNECTIVITY
- 10 Important safety information
- 11 Documents / Resources
- **12 Related Posts**


OVERVIEW

The ultra portable speaker for listening at home and on the go.




- Enjoy up to 10 hours of continuous playback on a single charge. When it's time to recharge:
 - Connect the included cable to a USB power source (7.5W minimum; 10W recommended).
 - Place on a compatible Qi wireless charger.
 - Place Sonos Roam SL on its custom Wireless (sold separately).
- Lightweight, durable, waterproof design is ideal for the beach, pool parties, and more.
- · Stream content over WiFi or Bluetooth®.
- Control your Sonos system with the Sons S2 app (for Android and iOS).
- See Setup when you're ready to add Sonos Roam SL to your system.

Controls and lights

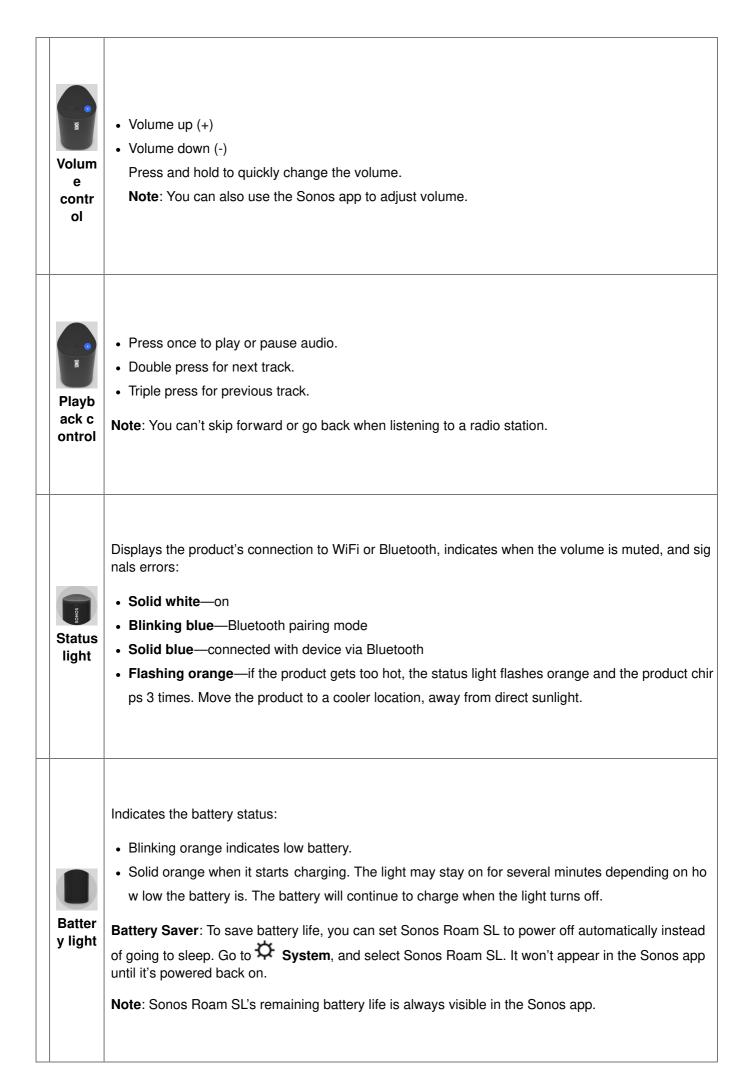

Connector panel

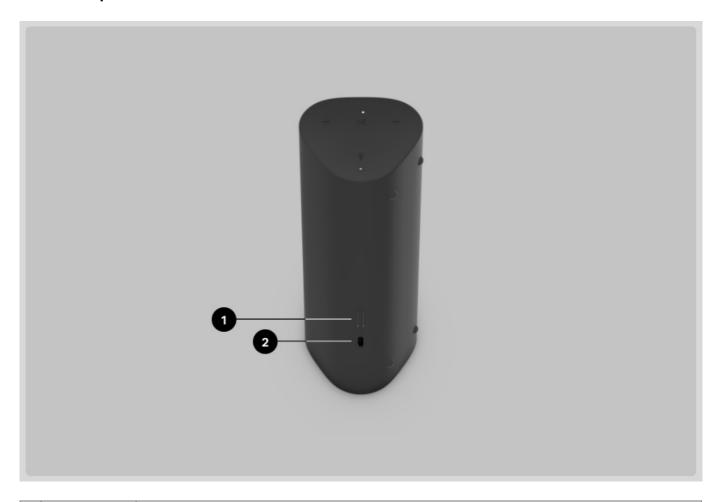

1	Power/Bluet ooth button	Power on/sleep: Quick press (less than 1 second). To wake, press any button or start playb ack from the app. Bluetooth: Press and hold for 2 seconds until you hear the pairing tone (the second one), th en release. The status light blinks blue and the speaker is ready to pair. Power off: Long press (5 seconds).
2	USB-C port	Use the included cable to connect a compatible 7.5W minimum (10W recommended) USB-A power source. (sold separately.)

Select a location

You can use your speaker just about anywhere. Here are a few things to keep in mind:

- You can place the speaker next to a wall or on a shelf—for best performance, leave at least 1" (2.5cm) space around the back of the speaker.
- The speaker's durable design includes silicone end caps to protect from drops or bumps.
- Avoid placing the speaker in direct sunlight.
- You can place Sonos Roam SL horizontally or vertically. When vertical, the speaker takes up barely any room. Position it horizontally for added stability on uneven surfaces.

Bluetooth pairing

- 1. Turn on Bluetooth in your device settings.
- 2. Press and hold the power button on the speaker for 2 seconds until you hear the second pairing tone, then

- release. The status light blinks blue when the speaker is ready to pair.
- 3. Choose Sonos Roam SL from the list of available devices in your Bluetooth settings. Your mobile device will automatically connect next time.

Charging

USB-C to USB-A	Use the included cable to connect a compatible 7.5W minimum (10 W recommended) USB-A power source. (sold separately.) Note: Battery life is visible in the Sonos app.	
Sonos Wireless Char ger (sold separately)	Place the speaker on the smooth, magnetized side of the charger for easy recharging—no extra wires or cables needed.	SONOS
Qi charger	Place the speaker on a compatible Qi-certified wireless charger.	

Set up stereo pair

Pair two Sonos speakers in the same room for a wider, stereo experience. One speaker serves as the left channel and one serves as the right channel.

Note: The Sonos speakers in a stereo pair must be the same type.

- 1. Place the speakers 8 to 10 feet apart. Your favorite listening position should be 8 to 12 feet from the paired speakers—less distance increases bass, more distance improves stereo imaging.
- 2. Go to System.

 $3. \ \, \text{Select one of the speakers you want to use in the stereo pair, then choose } \, \textbf{Set Up Stereo Pair} \, \, \text{to get started}.$

Product settings

You can customize Sonos products for your surroundings. Go to System and select a product.

Room Name	If you move your speaker to a new room, you can change its name in Settings .
Turn off WiFi (not on portable produ cts)	You can turn off your speaker's WiFi when it's connected to your network with an Ethernet cable. This reduces power consumption and can improve connectivity for some wired spe akers. For products like Amp and Port, turning off WiFi can reduce the internal temperature when they're placed in a rack or stacked.
EQ	Sonos products ship with preset equalization settings. You can change the sound setting s (bass, treble, balance, or loudness) to suit your personal preferences.
Trueplay	Trueplay adapts the sound for your surroundings and content. Portable products can tune themselves automatically.
Volume Limit	You can set a maximum volume for each room.
Status Light	Displays the speaker's connection to WiFi, indicates when the volume is muted, and sign als errors. Note: If the light is distracting, you can turn it off in Settings.
Touch Controls	You can disable the touch control on your speaker. You may want to do this to prevent a c hild or curious pet from accidentally adjusting playback or volume.
Battery Saver (por table products)	To save battery life, you can set your portable speaker to power off automatically instead of going to sleep. It won't appear in the Sonos app until it's powered back on.

Line-In (products	
with line-in	
capability)	

Connect an audio device like a turntable or stereo to an Amp, Port, or Five. Go to **Browse** > **Line-In**, and select the source to start playback.

You can adjust line-in settings like source name, audio level, and autoplay.

Specifications

Feature	Description
AUDIO	
Amplifier	Two Class-H digital amplifiers.
Tweeter	One tweeter offers crisp high frequencies.
Mid-woofer	One mid-woofer ensures faithful playback of mid-range vocal frequencies.
Adjustable EQ	Use the Sonos app to adjust bass, treble, and loudness.
SOFTWARE	
Sonos S2	Set up and control Sonos Roam SL with the Sonos app.
Apple AirPl ay 2	Works with AirPlay 2 on Apple devices iOS 11.4 and higher.
DETAILS	
IP rating	IP67 (speaker can be submerged in 1m of water for up to 30 minutes).
Dimensions (H x W x D)	6.61 x 2.44 x 2.36in (168 x 62x 60mm)

Feature	Description
Weight	.95lb. (.43kg)
Memory	1GB SDRAM; 4GB NV
СРИ	Quad Core; 1.3GHz A-53
Operating t emperature	41º to 95ºF (5º to 35ºC)
Storage tem perature	-4º to 145ºF (-20º to 63ºC)
Package co ntents	Sonos Roam SL, USB cable (3.9ft/ 1.2m), and Quickstart Guide
POWER & CO NNECTIVITY	
WiFi	Connects to WiFi network with any 802.11a/b/g/n/ac 2.4 or 5GHz broadcast-capable router.
Bluetooth	Bluetooth 5.0 supports audio streaming from your mobile devices.
Inputs	USB-C for charging
Battery	18Wh battery provides up to 10 hours of continuous playback on a single charge
Recharging	Recharge with the included USB-C cable connected to a USB power adapter (7.5W (5V/1.5A) minimum, 10W recommended), a wireless Qi charger, or the (sold separately)
Charging ti me	0% to 50% in 1 hour on USB; 2 hours wirelessly

Note: Specifications subject to change without notice.

Important safety information

- 1. Read these instructions.
- 2. Keep these instructions.
- 3. Heed all warnings.
- 4. Follow all instructions.
- 5. Clean only with a dry soft cloth. Household cleaners or solvents can damage the finish on your Sonos products.
 - Sonos products with rubber rings on the bottom, such as Move, One, and One SL, may leave a faint ring on some surfaces treated with polyurethane. This ring can be easily removed by wiping with a damp cloth.
- 6. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 7. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus that produce heat.
- 8. Protect the power cable from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 9. Only use attachments/accessories specified by the manufacturer.
- 10. Unplug this apparatus during lightning storms or when unused for long periods of time.
- 11. Refer all servicing to Sonos qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cable or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 12. The Mains plug should be readily available to disconnect the equipment.
- 13. Sonos Roam and Sonos Roam SL meet IP67 water resistance levels.

Documents / Resources



SONOS Roam SL (W) Portable Smart Speaker In Lunar [pdf] User Guide

Roam SL, W Portable Smart Speaker In Lunar, Smart Speaker In Lunar, Smart Speaker, Roam SL, Speaker

Manuals+,