



# SONOS S44 Move 2 Bluetooth And Wi-Fi Portable Home Speaker User Manual


[Home](#) » [Sonos](#) » SONOS S44 Move 2 Bluetooth And Wi-Fi Portable Home Speaker User Manual 

## Contents

- [1 SONOS S44 Move 2 Bluetooth And Wi-Fi Portable Home Speaker](#)
- [2 Product Usage Instructions](#)
- [3 FAQ](#)
- [4 Overview](#)
- [5 Controls and lights](#)
- [6 Connector panel](#)
- [7 Select a location](#)
- [8 Bluetooth pairing](#)
- [9 Charging](#)
- [10 Microphone on/off](#)
- [11 Voice services](#)
- [12 Set up stereo pair](#)
- [13 Product settings](#)
- [14 Specifications](#)
- [15 POWER & CONNECTIVITY](#)
- [16 DETAILS & DIMENSIONS](#)
- [17 Important safety information](#)
- [18 Documents / Resources](#)
  - [18.1 References](#)

# SONOS

**SONOS S44 Move 2 Bluetooth And Wi-Fi Portable Home Speaker**

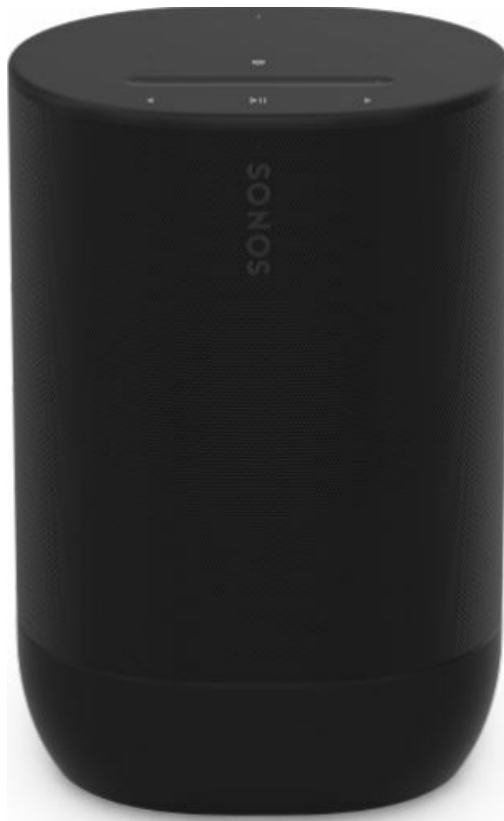

## Specifications

- Durable, battery-powered smart speaker
- Rechargeable battery lasts up to 22 hours
- Weatherproof design
- Control options: Sonos S2 app, touch controls, voice
- Compatible with other Sonos speakers for multiroom listening

## Product Usage Instructions

### Controls and Lights

#### Volume Control:

- Slide right or tap “+” to increase volume
- Slide left or tap “-” to decrease volume
- Press and hold “+” or “-” to quickly change the volume

#### Play/Pause:

– Press once to play or pause audio

#### Next/Previous:

- Press “>” to skip to the next song
- Press “<” to go to the previous song

Note: Skipping forward or backward is not available when listening to a radio station

**Microphone:**

- Toggle to turn all product microphones on or off
- When off, microphone-enabled features like Trueplay and voice services are unavailable
- When on, microphone-enabled features are available (voice services require the voice services indicator light to be on)

Note: Both the microphone switch and the voice services indicator light must be on to use voice services

**Status Light:**

- Displays the product's connection to WiFi or Bluetooth
- Indicates when the volume is muted
- Signals errors

**Battery Light:**

- Blinking orange indicates low battery
- Solid orange when charging (may stay on for several minutes depending on battery level)
- Battery Saver: Move 2 can be set to power off automatically instead of going to sleep to save battery life

Note: Remaining battery life is always visible in the Sonos app

**Connector Panel****Power Button:**

- Press to power on
- Short press to put to sleep
- Long press (5 seconds) to power off

Note: Move 2 goes to sleep when off the charging base to save battery, press the power button to wake it up

**Handle:**

- Allows for easy lifting and carrying

**Bluetooth Button:**

- Press and hold to pair a new device
- Press once to reconnect

**USB-C Port:**

- Power: Use a compatible USB-PD charger for charging Move 2 on the go or charge a different device (7.5W output)
- Ethernet: Use the Sonos Combo Adapter and an Ethernet cable to connect Move 2 directly to your router if you want to hardwire your speaker (helpful if your WiFi is unstable)

- Line-in: Use either the Sonos Line-In Adapter or Combo Adapter to connect your turntable, CD player, or other device

## FAQ

### Q: How long does the battery of Move 2 last?

A: The rechargeable battery of Move 2 lasts up to 22 hours.

### Q: How can I recharge Move 2?

A: Move 2 can be recharged by setting it on the charging base. Alternatively, you can use a compatible USB-PD charger (sold separately) for power on the go.

### Q: Can I use Move 2 outdoors?

A: Yes, Move 2 has a weatherproof design and is ideal for outdoor use such as barbecues and pool parties.

### Q: How can I control Move 2?

A: Move 2 can be controlled using the Sonos S2 app, the touch controls on the speaker, or your voice.

### Q: Can I connect Move 2 with other Sonos speakers?

A: Yes, Move 2 is compatible with all your other Sonos speakers for multiroom listening.

## Overview

Move 2 is the durable, battery-powered smart speaker for indoor and outdoor listening

- Rechargeable battery lasts up to 22 hours. Easily recharge by setting Move 2 on the charging base. For power on the go, use a compatible USB-PD charger (sold separately).
- Weatherproof design is ideal for barbecues, pool parties, and more.
- Stream content over WiFi and Bluetooth®.
- Freedom of control using the Sonos S2 app, the touch controls on the speaker, or your voice.
- Compatible with all your other Sonos speakers for multi-room listening.
- See Setup when you're ready to add Move 2 to your Sonos System.



## Controls and lights



#### Volume control

- Volume up (slide right, or tap + )
- Volume down (slide left, or tap - )

**Note:** To quickly change the volume, press and hold + or - .



#### Play/Pause

- Press once to play or pause audio.
- Press and hold to group with the audio that's playing in another room (or to ungroup).



#### Next/Previous

- Press > to skip to the next song.
- Press < to go to the previous song.

**Note:** You can't skip forward or go back when listening to a radio station.

---



**Microphone**

Toggle to turn all product microphones on or off.

- When the switch is off (down), the microphones are disabled so microphone-enabled features like Trueplay quick tuning and voice services are unavailable.
- When the switch is on (up), microphone-enabled features like Trueplay are available. (Voice services are available if the voice services indicator light on top of the product is also on.)

**Note:** To use voice services, both the microphone switch and the voice services indicator light must be on.



**Status light**

Displays the product's connection to WiFi or Bluetooth, indicates when the volume is muted, and signals errors. [Learn more](#)



**Battery light**

Indicates the battery status:

- Blinking orange indicates low battery.
- Solid orange when it starts charging. The light may stay on for several minutes depending on how low the battery is. The battery will continue to charge when the light turns off.

**Battery Saver:** To save battery life, you can set Move 2 to power off automatically instead of going to sleep. Go to ⚙️ > **System**, and select Move 2. It won't appear in the Sonos app until it's powered back on.

**Note:** Move 2 remaining battery life is always visible in the Sonos app.

Note: If you don't want to allow playback or volume adjustments using the speaker touch controls, you can disable them in the room's settings.

## Connector panel

### 1. Power button

Press to power on, short press to put to sleep, long press (5 seconds) to power off.

If Move 2 is off the charging base, it goes to sleep to save battery when you're not using it. Just press the power button to wake it up.

### 2. Handle

Allows for easy lifting and carrying so you can take the speaker wherever you go.

### 3. Bluetooth button

- Press and hold to pair a new device.
- Press once to reconnect.

### 4. USB-C port

- Power: Use a compatible USB-PD charger for charging Move 2 on the go, or charge a different device (7.5W output).
- Ethernet: Use the Sonos Combo Adapter and an Ethernet cable to connect Move 2 directly to your router if you want to hardwire your speaker (helpful if your WiFi is unstable).
- Line-in: Use either the Sonos Line-In Adapter or Combo Adapter to connect your turntable, CD player, or other device.

### 5. Charging base (included)

Set Move 2 on the charging base for easy recharging.

Use only with the included power supply (using a third-party power cord will void your warranty).

## Select a location

You can put your speaker just about anywhere. For maximum performance, here's a few guidelines:

- Move 2 sounds great even when placed next to a wall or on a shelf. For best performance, leave at least 1" (2.5cm) space around the back of the speaker.
- It's ultra durable. With a tough outer shell and IP54 rating, Sonos Move 2 is built to withstand falls, bumps, moisture, dust, UV rays, and extreme temperatures. Just don't leave it out in a rainstorm, and remember that the included charging base is for indoor use only.
- When the microphone is on, the speaker tunes itself with automatic Trueplay™ for amazing sound no matter where you are and what you're listening to.
- Don't use or store your Sonos speaker upside down.

## Bluetooth pairing

1. Turn Bluetooth on in your device settings.
2. Press and hold the Bluetooth button on the back of the speaker until you hear a tone, then release. The status light blinks blue when the speaker is ready to pair.
3. Choose Move 2 from the list of available devices in your Bluetooth settings. Your mobile device will automatically connect next time.

## Charging

### • Charging base

- Just set Move 2 on its charging base for easy recharging.
- Make sure the speaker is seated properly in the base and the charging contacts are touching.
- Use only the supplied power cord with the charging base (using a third-party power cord will void your warranty).
- Charging base is for indoor use only—be sure to keep it dry.

Tip: Move 2's remaining battery life is always visible in the Sonos app.

### • USB-C port

- For charging on the go.
- Use a compatible USB-PD certified charger.

## Microphone on/off

There are two ways to control the microphones on Move 2:

A universal microphone switch on the back of the speaker turns all microphones on and off. A voice services button on top of the speaker turns voice services on and off without affecting the microphones needed for Trueplay and other microphone-dependent features.

- When both are on, voice control and all microphone-enabled features are available.



- When both are off, voice control and all microphone-enabled features are unavailable.
- When the universal microphone switch is on and the voice services light is off, Trueplay and other microphone-enabled features are available but voice control is off.

## Voice services


Use your voice to control your Sonos system with any voice-enabled Sonos product—play and control content, turn the volume up or down, and more.

- **Sonos Voice Control:** control your whole Sonos system with hands-free ease and unmatched privacy. Sonos Voice Control comes ready to use—it only takes a few seconds to add when you set up your speakers. More information
- **Amazon Alexa:** you'll need the Sonos app and the Alexa app with the Sonos skill enabled. You'll make some changes in both apps during setup. Learn more
- **Siri:** you'll need the Apple Home app. Add your AirPlay2-compatible Sonos speakers to the Apple Home app and then use an iPhone, iPad, or Apple TV to ask Siri to play music (currently limited to Apple Music). Learn more

Note: Voice control isn't supported in every country yet—this feature will be available as soon as Sonos and a voice service launch together in your region.

## Trueplay™

Trueplay tuning measures how sound reflects off walls, furnishings, and other surfaces in a room, then fine tunes your Sonos speaker to make sure it sounds great no matter where you place it.

During setup, choose the Trueplay option that works best for you and your space. To retune later, go to  > System, choose a room, and select Trueplay.

## Advanced tuning

Advanced tuning is custom and precise. It takes about 5 minutes and uses the microphone on an iOS device (running iOS 8 or later) so you'll move around the room while the sound is fine tuned for your space.

Note: Advanced tuning is the best choice for large rooms (open concept spaces may experience less precise tuning).


## Quick tuning

Quick tuning is fast, effortless, and accessible. It takes about a minute and uses the microphone on your Sonos product to detect the environment so there's no need to move around the room during tuning.

Note: Quick tuning is available for both iOS and Android, and is a good choice for smaller rooms, or spaces where it's difficult to move easily.

## Auto Trueplay


Portable Sonos products like Sonos Roam and Move can tune themselves automatically. Auto Trueplay uses your speaker's microphone to detect the environment and make periodic tuning adjustments so you get great sound wherever your speaker is and whatever you're listening to.

Go to  > System, and select your portable speaker to turn on auto Trueplay.

## Set up stereo pair

Pair two Sonos speakers in the same room for an even wider, stereo experience. One speaker serves as the left channel and one serves as the right channel.

**Note:** The Sonos speakers in a stereo pair must be the same type.

1. Place the speakers 8 to 10 feet apart. Your favorite listening position should be 8 to 12 feet from the paired speakers—less distance increases bass, more distance improves stereo imaging.
2. GO to  > > System.
3. Select one of the speakers you want to use in the stereo pair, then choose Set Up Stereo Pair to get started.

## Product settings

You can customize Sonos products for your surroundings. Go to  > System and select a product.

<b>Room Name</b>	If you move your speaker to a new room, you can change its name in <b>Settings</b> .
<b>Turn off WiFi</b> (not available for Sonos Era 100, Era 300, or portable products)	<p>You can turn off your speaker's WiFi when it's connected to your network with an Ethernet cable. This reduces power consumption and can improve connectivity for wired speakers.</p> <p>For products like Amp and Port, turning off WiFi can reduce the internal temperature when they're placed in a rack or stacked. <a href="#">Learn more</a></p> <p><b>Note:</b> WiFi is turned off for Move 2 when you connect a <a href="#">Sonos Combo Adapter</a> using the Ethernet cable.</p>
<b>EQ</b>	Sonos products ship with preset equalization settings. You can change the sound settings (bass, treble, balance, or loudness) to suit your personal preferences. <a href="#">Learn more</a>
<b>Trueplay</b>	Trueplay adapts the sound for your surroundings and content. Portable products can tune themselves automatically. <a href="#">Learn more</a>

<b>Volume Limit</b>	You can set a maximum volume for each room. <a href="#">Learn more</a>
<b>Status Light</b>	<p>Displays the speaker's connection to WiFi, indicates when the volume is muted, and signals errors. <a href="#">Learn more</a></p> <p><b>Note:</b> If the light is distracting, you can turn it off in <b>Settings</b>.</p>
<b>Touch Controls</b>	<p>You can disable the touch control on your speaker. You may want to do this to prevent a child or curious pet from accidentally adjusting playback or volume. <a href="#">Learn more</a></p>
<b>Battery Saver</b> (portable products only)	To save battery life, you can set your portable speaker to power off automatically instead of going to sleep. It won't appear in the Sonos app until it's powered back on.
<b>Line-In</b> (Sonos products with line-in capability)	<p>When a projector, turntable, stereo, or other audio device is connected to a Sonos product, you can adjust these line-in settings:</p> <ul style="list-style-type: none"> <li>• <b>Source name:</b> Choose a name for the line-in device.</li> <li>• <b>Source level:</b> Adjust the line-in source level if you find the default volume setting is too quiet or distorted.</li> <li>• <b>Audio Delay:</b> Add a delay between the line-in source and Sonos to reduce the chance of audio issues occurring when you're playing line-in audio on grouped speakers.</li> <li>• <b>Autoplay:</b> Choose a room if you want line-in audio to start playing automatically when Sonos detects a signal on the line-in port. (Autoplay is disabled by default.)</li> </ul>

## Specifications

Feature	Description
AUDIO	
Amplifiers	Three Class-D digital amplifiers.
Tweeters	Two angled tweeters create a crisp and accurate high frequency response and stereo separation.
Woofers	One midwoofer ensures the faithful playback of mid-range vocal frequencies and deep bass.
Microphones	<ul style="list-style-type: none"> <li>• Far-field microphone array.</li> <li>• All microphones, including voice control, can be turned off using the microphone switch on the back of the speaker.</li> </ul>
Adjustable EQ	Use the Sonos app to adjust bass, treble, and loudness.
Automatic Trueplay	This software continually optimizes the speaker's sound for its environment and the audio content playing.
Feature	Description
Voice	<ul style="list-style-type: none"> <li>• Integrated voice control.</li> <li>• When the voice control indicator light is off, voice assistants are not listening but other microphone-dependent features like Trueplay Quick Tuning are still active.</li> </ul>

## POWER & CONNECTIVITY

<b>WiFi</b>	Connects to WiFi network with any 802.11a/b/g/n/ac/ax 2.4 or 5GHz broadcast-capable router.
<b>Power supply</b>	<b>Charging base:</b> 100-240VAC, ~50/60Hz, 1.2A. Output: 15.0VDC, 3.0A, 45.0W <b>USB port:</b> USB-C PD power with 45W, 20V/2.25A.
<b>Battery pack</b>	<b>Capacity:</b> 3100mAh <b>Replacement:</b> Visit our website for more information. <b>Disposal:</b> Check with your local waste or recycling company to determine the proper disposal method in your area.

Feature	Description
<b>USB-C</b>	Connect an audio source using an auxiliary cable and the Sonos Line-In Adapter.  Connect your router with an Ethernet cable and the Sonos Combo Adapter. (Accessories sold separately.)
<b>CPU</b>	Quad Core 4xA55 1.4 GHz
<b>Memory</b>	1GB SDRAM 8GB NV

## DETAILS & DIMENSIONS

<b>Dimensions (H x W x D)</b>	9.53 x 6.29 x 4.96 in (242 x 160 x 126mm)
<b>Weight</b>	6.61 lb (3.0 kg) (including the battery)
<b>Operating temperature</b>	32° to 104° F (0° to 40° C)
<b>Storage temperature</b>	-13° to 158° F (-25° to 70° C)

Feature	Description
Humidity resistant	Move 2 meets IP54 water and dust resistance levels. Just don't leave it out in a soaking rainstorm.  <b>Note:</b> The charging base included with Move is for indoor use only.
Colors	Black, white, olive
Colors	
Finish	Matte
Package contents	Sonos Move 2, wireless charging base with 6 ft (2m) cable, 45W USB-PD power adapter, and Quickstart guide.

\* Specifications subject to change without notice.

## Important safety information


Caution: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Clean only with a dry soft cloth. Household cleaners or solvents can damage the finish on your Sonos products.  
Sonos products with rubber rings on the bottom, such as Move, Move 2, One, and One SL, may leave a faint ring on some surfaces treated with polyurethane. This ring can be easily removed by wiping with a damp cloth.
6. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
7. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus that produce heat.
8. Do not expose batteries (battery pack or batteries installed) to excessive heat such as sunshine or fire.
9. Protect the power cable from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
10. Only use attachments/accessories specified by the manufacturer.
11. Unplug this apparatus during lightning storms or when unused for long periods of time.
12. Refer all servicing to Sonos qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cable or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to heavy rain or moisture, does not operate normally, or has been dropped.
13. The Mains plug should be readily available to disconnect the equipment.
14. Connections between this device and external equipment must be made using a shielded cable in order to maintain compliance with FCC radio frequency emission limits.

**Warning:** Sonos Move 2 meets IP54 water resistance levels. To reduce the risk of fire or electric shock, don't expose this apparatus to a soaking rainstorm.

---

## Documents / Resources

 The image shows a black, cylindrical Sonos Move 2 speaker. Above the speaker, the text "Move 2" is written. Below the speaker, there is a small horizontal line with a dot in the center and the word "DESIGN" to the right.	<p><a href="#">SONOS S44 Move 2 Bluetooth And Wi-Fi Portable Home Speaker</a> [pdf] User Manual S44 Move 2 Bluetooth And Wi-Fi Portable Home Speaker, S44 Move 2, Bluetooth And Wi-Fi Po rtable Home Speaker, Wi-Fi Portable Home Speaker, Portable Home Speaker, Home Speaker, Speaker</p>
--	---

## References

- [Adjust the bass, treble, balance, and loudness | Sonos](#)
- [Sonos LED lights | Sonos](#)
- [Setting a volume limit on Sonos products | Sonos](#)
- [Set up an Amazon Alexa device to control Sonos | Sonos](#)
- [Use Siri to control Sonos speakers | Sonos](#)
- [Create a stereo pair | Sonos](#)
- [Disable or enable Wi-Fi on your Sonos products | Sonos](#)
- [Using touch controls on Sonos products | Sonos](#)
- [Tune your Sonos speakers with Trueplay | Sonos](#)
- [User Manual](#)