



SONOS SUBG3US1 3rd Generation Wireless Subwoofer Owner's Manual

[Home](#) » [Sonos](#) » SONOS SUBG3US1 3rd Generation Wireless Subwoofer Owner's Manual 

Contents

- 1 SONOS SUBG3US1 3rd Generation Wireless Subwoofer
- 2 Important safety information
- 3 Overview
- 4 Controls and buttons
- 5 Select a location
- 6 Connect the cables
- 7 Attach feet (optional)
- 8 Product settings
- 9 Change speaker pairing
- 10 Connect a second Sub
- 11 Specifications
- 12 Package contents
- 13 Specifications
- 14 Usage Instructions
 - 14.1 Select a Location
 - 14.2 Connect the Cables
- 15 Frequently Asked Questions (FAQ)
 - 15.1 Q: Can I use Sonos Sub with any Sonos speaker?
 - 15.2 Q: How do I know if Sonos Sub is connected properly?
- 16 Documents / Resources
 - 16.1 References
- 17 Related Posts



OWNER'S MANUAL

Sonos Sub takes your audio experience to the next level by instantly adding a dimension of deep bass impact to your audio listening experience. It is designed for use with most Sonos speakers, providing wireless and compact placement options.

Important safety information

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry soft cloth. Household cleaners or solvents can damage the finish on your Sonos products.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus that produce heat.
9. Protect the power cable from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
10. Only use attachments/accessories specified by the manufacturer.
11. Unplug this apparatus during lightning storms or when unused for long periods of time.
12. This product does not have any user-serviceable parts. Do not open or disassemble or attempt to repair it or replace any components. Refer all servicing to Sonos qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cable or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
13. The Mains plug should be readily available to disconnect the equipment.
14. Warning: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
15. Do not expose apparatus to dripping or splashing and do not place objects filled with liquids, such as vases, on the apparatus.

Overview



Guides > Sub



Sonos Sub takes your audio experience to the next level—

- Instantly adds a dimension of deep bass impact to your audio listening experience.
- Allows placement anywhere because it's wireless and compact—position it vertically or horizontally on any floor surface.
- The top of the acoustic slot doubles as a handle so you can lift it.
- Sub (Gen. 3) is compatible with the Sonos S2 app (for Android and iOS). Earlier Sub models are compatible with either S1 or S2.
- Sonos Sub is designed for use with most Sonos speakers, except Sonos Roam, Roam SL, Connect, Port, and Move. Make sure you set up at least one speaker before adding Sub.
- See Setup when you're ready to add a Sub to your Sonos system.

Controls and buttons



1. Acoustic slot

You can use the acoustic slot as a handle to lift Sub.

2. Status light

Displays the product's connection to WiFi, indicates when the volume is muted, and signals errors. [Learn more](#)
If the light is distracting, you can turn it off in your room's settings.

3. Join button

Press to connect during setup.

4. Ethernet port

Use an Ethernet cable if you want to connect to a router (optional).

5. AC power (mains) input

Use only the supplied power cord to connect to a power outlet (using a third party power cord will void your warranty). Be sure to use the proper power adapter for your country. Push the power cord firmly into Sub until it is flush with the surface.

Select a location

Choose a location—Sub is designed to provide optimal sound wherever you place it.

- Use the acoustic slot as a handle to lift Sub out of the box. You should always bend your knees when lifting heavy objects to avoid undue stress on your back.
- Make sure at least one side of the slot is free from obstruction. If you place it vertically against a wall, don't block the front opening.
- If you place Sub horizontally on the floor, don't put anything on top of it. Leave at least 1" clearance along the

top of Sub if placing under furniture.

- Sub is designed to sit on the floor. You can place it in a corner, against the wall, behind, under, or next to any piece of furniture on any kind of floor surface.
- Position Sub either vertically or horizontally. If you're going to use it horizontally, you can attach permanent felt feet. See [Attach feet \(optional\)](#) for more information.

Connect the cables

1. Attach the power cord and plug in Sub. Be sure to push the power cord firmly into Sub until it is flush with the surface.

2. Download the Sonos app from the app store if you don't already have it. You'll use it to set up and control your Sonos system. See [Setup](#) for more information.

Note: Make sure you set up at least one compatible speaker before adding Sub.

Note: After Sub is paired with a Sonos speaker, you won't see it displayed separately in your system. Any changes you make to the speaker it's paired with, like volume, mute, or music selection, will also affect Sub.

Attach feet (optional)

If you're placing Sub horizontally on a floor, you can attach permanent felt feet (purchased separately) to protect your floor. If you're putting it on a rug or using it vertically, no need to adhere the felt feet.

Note: The felt feet are not removable—a strong adhesive will keep them permanently attached to Sub.

1. Lay Sub down so the Sonos logo is facing down. Make sure you adhere the felt feet to the side that doesn't have the Sonos logo.
2. Place the enclosed guide on one corner of the unit and fold the flaps over the edge.
3. Peel the backing off one of the feet.
4. Press the felt foot (sticky side down) onto the unit inside the circular portion of the guide.
5. Attach the other 3 felt feet the same way.

Product settings

Guides > Sub



To adjust Sub's settings, go to  > System and select your Sub.

Sub

Toggle **On** or **Off** to turn the sound from Sub on and off.

Sub level

Use the slider to increase or decrease volume. (You can use this setting to match the subwoofer level to the level of your main speakers.)

Phase control


Choose 0° or 180° to set the phase control for your Sonos Sub or third-party subwoofer (flip if you don't hear enough bass in your usual listening position).
When a room with a Sonos Sub is tuned using Trueplay, phase control is set and can't be changed unless you disable Trueplay.

Reset

Resets all Sub audio settings to their default values (0).

Change speaker pairing

You can easily change the Sonos speaker your sub is paired with.
If you're moving it to a new room, wait for the status light to stop flashing after you plug the sub back in.


1. Go to  > System and choose the speaker your sub is paired with. It appears as [speaker name (+Sub)] in your list of rooms.
2. Tap Remove Sub.

You can pair the sub with a different Sonos product or choose not to use it right now. It will appear as "unused" in your list of products until you pair it with another Sonos speaker.

Connect a second Sub

You can easily connect a second Sub to your Sonos system.

Note: At least one Sub must be a Sub (Gen 3). If the button on the side is round instead of square, it's a Sub (Gen 3). You cannot pair a Sub Mini with a Sub.

1. Go to  > System and choose the speaker Sub is paired with. It appears as room (+Sub) in your list of rooms.
2. Tap Connect Second Sub to get started.

Specifications

Feature	Description
AUDIO	
Amplifier	Two Class-D digital amplifiers.
Speakers	Two force-canceling speakers positioned face-to-face for deeper, richer sound and zero cabinet buzz or rattle.
Dual acoustic ports	Tuned to enhance Sub performance.
Frequency response	Plays down to 25 Hz.
All digital sound	All filter settings, active equalization, and time alignment are done digitally through state-of-the-art DSP (Digital Signal Processing) circuitry for zero-loss audio quality and energy.
Automatic equalization	The system automatically adjusts audio settings across all connected components.

Ethernet port	One 10/100 Mbps Ethernet port. You can plug a Sanos product directly into your router if your WiFi is unstable
Wireless connectivity	Using Sonos S2: Connects to WiFi network with any 802.11a/b/g/n 2.4 or 5 GHz broadcast-capable router. Using Sonos S1: Connects to WiFi network with any 802.11b/g 2.4 GHz broadcast-capable router. 802.11n only network configurations are not supported -you can either change the router settings to 802.11b/g/n or connect a Sanos product to your router.
GENERAL	
Power supply	Auto-switching 100 – 240V – 50-60 Hz 2 A AC universal input
Dimensions (H x W x D)	15.3 x 6.2 x 15.8 in. (389 x 158 x 402 mm)
Weight	Sub (Gen 3): 29 lb (13 kg) Sub (Gen 2): 36 lb (16 kg)
Operating temperature	32° to 104° F (0 to 40° C)
Storage temperature	-4° to 158° F (-20° to 70° C)

Multiple orientations	Stand upright or lay flat for flexible placement.
Rubber and felt feet	Built-in rubber feet, optional felt feet.
Supported products	At least one amplified, non-portable product, such as Sanos One, One SL, Five, Ray, Beam, Arc, or Symfonisk.

Package contents

- Sanos Sub,
- Power cord, and
- Quickstart Guide

* Specifications subject to change without notice.

Specifications

- Model: Sonos Sub (Gen. 3)
- Compatibility: Works with most Sonos speakers (except Sonos Roam, Roam SL, Connect, Port, and Move)
- App Compatibility: Sonos S2 app for Android and iOS
- Connectivity: Wireless or Ethernet

Usage Instructions

Select a Location

Choose a location that allows optimal sound performance. Use the acoustic slot as a handle when lifting Sub out of the box. Ensure one side of the slot remains unobstructed. Avoid placing objects on top of Sub when positioned horizontally. Consider using permanent felt feet if placing it horizontally on the floor.

Connect the Cables

1. Attach the supplied power cord firmly into Sub's mains input.
2. Download the Sonos app from the app store if not already installed. Follow the setup instructions in the app.

Frequently Asked Questions (FAQ)


Q: Can I use Sonos Sub with any Sonos speaker?

A: Sonos Sub is compatible with most Sonos speakers, except for Sonos Roam, Roam SL, Connect, Port, and Move. Ensure you have at least one compatible speaker set up before adding Sub to your system.

Q: How do I know if Sonos Sub is connected properly?


A: The status light on Sonos Sub displays its connection to WiFi, mutes volume, and signals errors. If needed, you can turn off the light in your room settings.

Documents / Resources

	<p>SONOS SUBG3US1 3rd Generation Wireless Subwoofer [pdf] Owner's Manual SUBG3US1, SUBG3US1 3rd Generation Wireless Subwoofer, 3rd Generation Wireless Subwoofer, Wireless Subwoofer, Subwoofer</p>
---	---

References

-  [Sonos LED lights](#) | [Sonos](#)

-  [Sub Felt Feet | Sonos](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.