



SONOS SUBM1EU1 Sub Mini Subwoofer Instruction Manual

[Home](#) » [Sonos](#) » SONOS SUBM1EU1 Sub Mini Subwoofer Instruction Manual 

Contents

- [1 SONOS SUBM1EU1 Sub Mini Subwoofer](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Overview](#)
- [5 Controls and buttons](#)
- [6 Select a location](#)
- [7 Using Instructions](#)
- [8 Specifications](#)
- [9 Important safety information](#)
- [10 Documents / Resources](#)
 - [10.1 References](#)

SONOS

SONOS SUBM1EU1 Sub Mini Subwoofer



Product Information

The Sub Mini is a compact wireless subwoofer designed to enhance your audio listening experience by adding a dimension of deep bass impact. It features dual force-canceling woofers that effectively neutralize buzz and distortion. This compact interpretation of Sonos' premium wireless subwoofer is ideal for small or medium-sized rooms with low to moderate volume levels. The Sub Mini can be easily integrated into your existing Sonos wireless sound system, allowing you to mix and match Sonos products to create your desired audio setup.

The Sub Mini efficiently moves air to maximize bass and is equipped with an Ethernet port for optional router connection. It is important to use only the supplied power cord to connect the Sub Mini to a power outlet, as using a third-party power cord will void the warranty. The product features a status light that displays its connection to WiFi, indicates when the volume is muted, and signals errors. If desired, the status light can be turned off in your room's settings. The Sub Mini also includes a join button for easy connectivity during setup.

For optimal sound experience, it is recommended to place the Sub Mini upright near the speaker it will be used with. The center tunnel of the Sub Mini can face in any direction. If placing the Sub Mini against a wall or furniture, ensure enough clearance for air to move freely through the center tunnel. To connect the Sub Mini, attach the provided power cord and plug it into a power outlet. Additionally, download the Sonos app from the app store if you don't already have it. The Sonos app will be used to set up and control your Sonos system.

The Sub Mini also features Trueplay™, which allows you to optimize the EQ for your specific space using the microphone on your iOS device. This professional-grade tuning ensures that the bass never sounds muddy, harsh, or flat. Trueplay tuning can be accessed through the Sonos app by selecting > System and choosing the room you want to tune. You can easily change the Sonos product that the Sub Mini is paired with during setup. The Sub Mini is compatible with most amplified Sonos products running S2 software and is recommended for use

with Beam, Ray, One, One SL, and Symfonisk products. To change the pairing, plug the Sub Mini back in and wait for the status light to stop flashing. Then, go to > System in the Sonos app and choose the Sonos product that the Sub Mini is currently paired with. Tap Remove Sub and pair the Sub Mini with a different Sonos product.

Product Usage Instructions

1. Place the Sub Mini upright near the speaker it will be used with. Ensure enough clearance if placing it against a wall or furniture.
2. Connect the Sub Mini by attaching the provided power cord and plugging it into a power outlet.
3. Download the Sonos app from the app store if not already installed.
4. Open the Sonos app and follow the instructions to set up and control your Sonos system.
5. (Optional) Use an Ethernet cable to connect the Sub Mini to a router.
6. (Optional) Enable Trueplay tuning through the Sonos app to optimize the EQ for your space.
7. (Optional) To change the pairing, plug the Sub Mini back in, wait for the status light to stop flashing, open the Sonos app, go to > System, choose the Sonos product currently paired with the Sub Mini, tap Remove Sub, and pair the Sub Mini with a different Sonos product.

Overview

The compact wireless subwoofer for boldbass




- Instantly adds a dimension of deep bass impact to Your audio listening experience.
- Dual force-canceling woofers neutralize buzz and distortion.
- A compact interpretation of our premium wireless subwoofer that's ideal for a small or medium-sized room, and

low to moderate volume levels.

- Mix and match Sonos products to create your wireless sound system, and add on any time.
- See Setup when you're ready to add Sub Mini to your Sonos system (make sure the Sonos product you plan to use with Sub Mini is already set up).

Controls and buttons

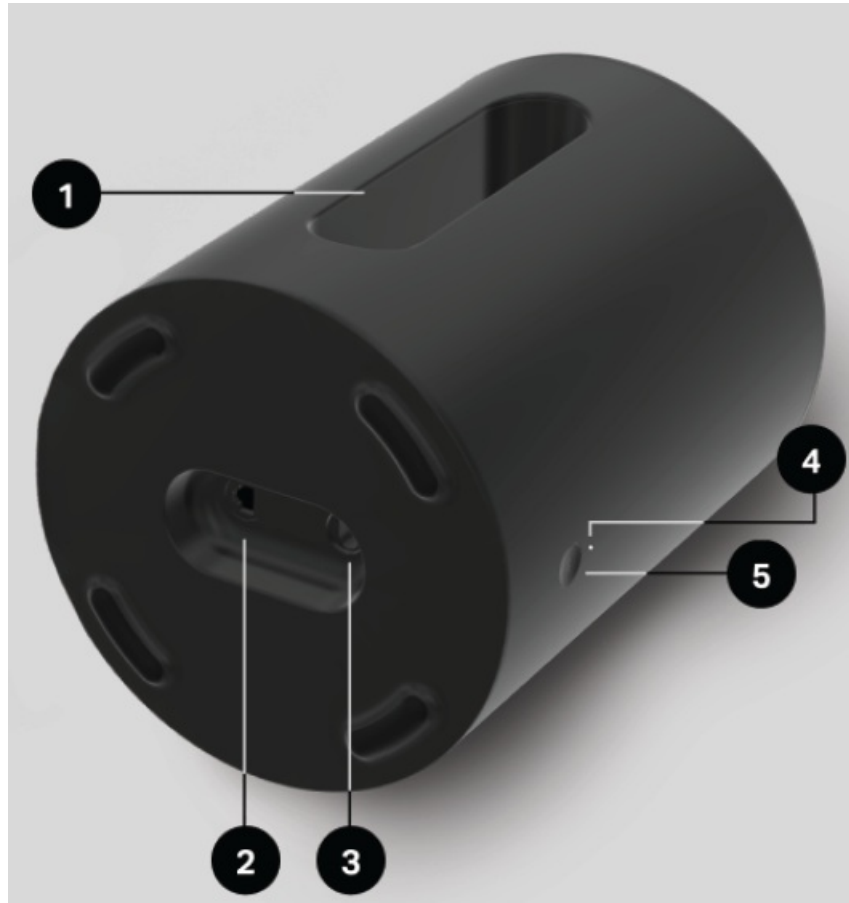

1. Center tunnel
 - Efficiently moves air to maximize bass.
2. Ethernet port
 - Use an Ethernet cable if you want to connect to a router (optional).
3. AC power (mains) input
 - Use only the supplied power cord to connect to a power outlet. (Using a third-party power cord will void your warranty.) Be sure to use the proper power adapter for your country.
4. Status light
 - Displays the product's connection to Wi-Fi, indicates when the volume is muted, and signals errors.
[Learn more](#)
 - If the light is distracting, you can turn it off in your room's settings.
5. Join button
 - Press to connect during setup.

Select a location

- For the best sound experience, place Sub Mini upright near the speaker you're going to use it with. The center

tunnel can face in any direction.

- If you place Sub Mini against a wall or your furniture, leave enough clearance for air to move freely through the center tunnel.

Note: Make sure the speaker you're pairing Sub Mini with is already set up in your system before you add Sub Mini.

Learn more about compatible products.


Using Instructions

Connect the cables

1. Attach the power cord and plug in Sub Mini.
2. Download the Sonos app from the app store if you don't already have it. You'll use it to set up and control your Sonos system. See Setup for more information.

Trueplay™


Trueplay puts professional-grade tuning in the palm of your hands. Using the microphone on your iOS device (running iOS 8 or later), Trueplay measures the unique acoustics of your space, then optimizes the EQ so the bass never sounds muddy, harsh, or flat.

1. Select  > System, and pick the room you want to tune.
2. Choose Trueplay Tuning. During tuning you'll move around the room holding your mobile device.

Note: Trueplay tuning isn't available if VoiceOver is enabled on your iOS device. Turn VoiceOver off in your device settings before tuning your speakers.

Change speaker pairing

You can easily change the Sonos product Sub Mini was paired with during setup. Sub Mini is compatible with most amplified Sonos products running S2 software. Its recommended for use with Beam, Ray, One, One SL, and Symfonisk products. Learn more

1. If you move Sub Mini to a new room, plug it back in and wait for the status light to stop flashing.
2. Go to  > System and choose the Sonos product Sub Mini is paired with.
3. Tap Remove Sub, then pair Sub Mini with a different Sonos product.

Note: When Sub Mini is paired with a Sonos speaker, you won't see it displayed separately in your system. Any changes you make to that speaker, like volume, mute, or music selection, will also affect Sub Mini.

Specifications

Feature/ Description

AUDIO

- Amplifier
 - Two Class-D digital amplifiers.
- Woofers
 - Two 6" force-canceling woofers are positioned face-to-face to minimize buzz, rattle, and distortion.
- Architecture
 - The sealed cabinet neutralizes distortion and enhances the bass response.
- Frequency response
 - Plays down to 25 Hz.
- Digital processing
 - A blend of equalization and advanced limiting algorithms allows Sub Mini to produce the deep rich bass normally associated with much larger sub-woofers.
- Adjustable EQ
 - Audio settings automatically equalize to balance Sub Mini and the paired Sonos product (s). Use the Sonos app to manually adjust bass and volume.

Power and Connectivity

- Wireless connectivity
 - Connects to WiFi network with any 802.11a/b/g/n 2.4 or 5 GHz broadcast-capable router.
- Ethernet port
 - 10/100 port for hardwiring to your router.
- Power supply
 - Auto switching, 100-240 V, 50/60 Internal power supply
- Memory
 - 4 GB SDRAM
 - 4 GB NV
- CPU
 - Dual core architecture
 - ARM Cortex-A9 processor, ARM Cortex-M4 processor
- Supported products
 - At least one amplified, non-portable product, such as Sonos Beam, Ray, One, One SL, or Symfonisk.

GENERAL

- Dimensions (H x D)
 - 9.1 in x 12 in (305 mm x 230 mm)
- Weight
 - 14 lb (6.35 kg)
- Operating temperature
 - 32° to 104° F (0 to 40° C)
- Storage temperature
 - -13 to 158° F (-25° to 70° C)


- Package contents
 - Sub Mini, power cable (6 ft/2 m), and Quickstart Guide.
- Colors
 - Black, White
- Finish
 - Matte

* Specifications subject to change without notice.



Important safety information

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry soft cloth. Household cleaners or solvents can damage the finish your Sonos products.
7. Do not block any ventilation openings. Install in accordance with the instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatuses that produce heat.
9. Protect the power cable from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
10. Only use attachments/accessories specified by the manufacturer.
11. Unplug this apparatus during lightning storms or when unused for long periods of time.
12. This product does not have any user-serviceable parts. Do not open or disassemble or attempt to repair it or replace any components. Refer all servicing to Sonos qualified service personnel. Servicing is required when the apparatus has been damaged in anyway, such as power-supply cable or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
13. The Mains plug should be readily available to disconnect the equipment.
14. **Warning:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
15. Do not expose the apparatus to dripping or splashing and do not place objects filled with liquids, such as vases, on the apparatus.

Documents / Resources

<div><div>Sub Mini</div></div>	<p>SONOS SUBM1EU1 Sub Mini Subwoofer [pdf] Instruction Manual</p> <p>SUBM1EU1 Sub Mini Subwoofer, SUBM1EU1, Sub Mini Subwoofer, Mini Subwoofer, Subwoof er</p>
---	--

References

-  [Sonos products that support Sub Mini | Sonos](#)
-  [Sonos LED lights | Sonos](#)