

SONY CFexpress Type A Memory Card Instruction Manual

Home » Sony » SONY CFexpress Type A Memory Card Instruction Manual

Contents

- 1 SONY CFexpress Type A Memory Card
- 2 Memory Card
- 3 Documents / Resources
 - 3.1 References
- **4 Related Posts**



SONY CFexpress Type A Memory Card



Memory Card

Before operating this media, please read this manual thoroughly, and retain it for future reference.

WARNING

To reduce fire or shock hazard, do not expose the unit to rain or moisture.

For the Customers in the U.S.A.

NOT APPLICABLE IN CANADA, INCLUDING IN THE PROVINCE OF QUEBEC (POUR LES CONSOMMATEURS AUX ÉTATS-UNIS. NON APPLICABLE AU CANADA, Y COMPRIS LA PROVINCE DE QUÉBEC)

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference, and
- 2. this device must accept any interference received, including interference that may cause undesired operation.

For question regarding your product or for the Sony Service Center nearest you, call 1-800-222-SONY (7669).

The number below is for the FCC related matters only. Supplier's Declaration of Conformity

• Trade Name: SONY

Model: CEA-G80T, CEA-G160T, CEA-G320T, CEA-G640T

• Responsible Party: Sony Electronics Inc.

• Address: 16535 Via Epsilon, San Diego, CA 92127 U.S.A.

• Telephone Number: 858-942-2230

CAUTION

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

–

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

For the Customers in Canada

CAN ICES-3(B) / NMB-3(B)

For the Customers in Europe Disposal of old electrical & electronic equipment (applicable in the European Union and other countries with separate collection systems)

This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the appropriate collection point for the recycling of electrical and electronic equipment. By ensuring that this product is disposed of correctly, you will help to prevent potential negative consequences for the environment and human health, which could be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product.

Manufacturer: Sony Corporation EU Importer/manufacturer's authorized representative: Sony Europe B.V., Da Vancian 7-D1, 1930 Zaventem, Belgium.

UK Importer/manufacturer's authorized representative: Sony Europe B.V., The Heights, Brookland's, Weighbridge, Surrey KT13 0XW, United Kingdom.

WARNING

- TO AVOID CHOKING HAZARD, KEEP OUT OF REACH OF CHILDREN.
- DO NOT INSERT THIS MEDIA INTO ANY MEMORY CARD SLOT FOR WHICH IT WAS NOT INTENDED.

This memory card may become hot after extended use. Use caution when touching it.

For more information about this media, compatible products, and downloading software, please refer to the

- This media can be used with Express Type A Memory Card compatible products.
- To use this media with a personal computer, a card reader is required (sold separately).
- Proper operation with all other products is not guaranteed.
 For the details on operations with compatible products, please refer to the product instruction manual.
- Copyright law prohibits unauthorized use of recordings.
- Recorded data is not erased completely by formatting or deleting of the product. When assignment transferring
 or disposing, break off the data in this media by your responsibility with using specially data erasing software or
 breaking this media physically.
- Do not touch the terminal with your hand or any metal object.
- Do not subject the media to strong impacts, or bend, drop, or wet the media intentionally.
- When this media becomes wet or dirty, wipe it before use.
- Do not attempt to disassemble or convert this media.
- Do not put a label to this media.
- We recommend that you make a backup copy of important data.
 Please do not use or store this media in any environment exceeding the range of specified operating environment described below. Abuse or misuse will invalidate product warranty.
- This media is compatible with the Video Performance Guarantee 400 (VPG400), defined by CFA standards. Transfer speed is not guaranteed for all usage environments.
- This media is formatted prior to shipping. To reformat this media, use an Express Memory Card compatible products. For details, refer to the product instruction manual or support center.
- Recorded data may be damaged or lost in the following situations.
- If you remove this media or turn off the power while formatting, reading or writing data.
- If you use this media in locations subject to static electricity or electrical noise.
- When this media is not recognized with your product, turn the power off and on again or restart the product after removing this media.

Sony shall not be responsible for any damage to or loss of recorded data.

 $\begin{array}{lll} \text{Operating voltage} & 3.3 \text{ V} \\ \text{Operating environment} & -10 ^{\circ}\text{C to } +70 ^{\circ}\text{C (} +14 ^{\circ}\text{F to } +158 ^{\circ}\text{F)} \\ \text{Storage environment} & -20 ^{\circ}\text{C to } +85 ^{\circ}\text{C (} -4 ^{\circ}\text{F to } +185 ^{\circ}\text{F)} \\ \text{non-condensing} \\ \text{Dimensions (W \times L \times T)} & \text{Approx. } 20.0 \text{ mm} \times 28.0 \text{ mm} \times 2.8 \text{ mm} \\ & (13/16 \text{ in.} \times 1 \text{ } 1/8 \text{ in.} \times 1/8 \text{ in.}) \\ \text{Mass} & \text{Approx. } 3 \text{ g (} 0.11 \text{ oz)} \\ \end{array}$

Design and specifications are subject to change without notice.

The VPG logo and CFexpress logo are trademarks licensed by the CompactFlash Association.

Documents / Resources

[™] and ® are not mentioned in each case in this manual.



<u>SONY CFexpress Type A Memory Card</u> [pdf] Instruction Manual CFexpress Type A Memory Card, CFexpress Memory Card, Type A Memory Card, Memory Ca rd

References

- Sony Group Portal Home
- Select your country or region | SONY

Manuals+,