

SONY CUHYA-0100 DS4 Back Button Attachment



SONY CUHYA-0100 DS4 Back Button Attachment Instruction Manual

[Home](#) » [Sony](#) » SONY CUHYA-0100 DS4 Back Button Attachment Instruction Manual 

Contents

- 1 SONY CUHYA-0100 DS4 Back Button Attachment
- 2 Product Information
- 3 Product Usage Instructions
- 4 Precautions
- 5 Part Names
- 6 Getting started
- 7 Powering up
- 8 Customizing profiles
- 9 Starting over
- 10 End-of-life product recycling
- 11 FCC and IC notice
 - 11.1 Supplier's Declaration of Conformity
- 12 Specifications
- 13 LIMITED WARRANTY
- 14 Documents / Resources
 - 14.1 References

SONY

SONY CUHYA-0100 DS4 Back Button Attachment



Product Information

- **Product Name:** CUHYA-0100
- **Manufacturer:** Sony Interactive Entertainment
- **Input Power Rating:** 3.2V, 10mA

Product Usage Instructions

Precautions

Before using this product, carefully read this manual and any manuals for compatible hardware. Retain instructions for future reference. For assistance with this product, visit playstation.com/helpme.

Part Names

- Back button
- Screen button
- Stereo headset jack
- Extension connector
- Stereo headset plug

Attaching the Back Button Attachment

1. Hold the back button attachment with your thumb behind the stereo headset plug.
2. With the attachment's stereo headset plug and the controller's stereo headset jack aligned, firmly push the attachment toward the controller to insert. Do not push sideways or from the top or bottom of the attachment.

Powering up

1. Press the p (PS) button to turn on your controller.
2. Click the screen button on the attachment. The default profile (P1) appears on the screen.

Customizing Profiles

You can save up to 3 different profiles (button assignments).

The default profiles are as follows:

- J: P1
- K: P2
- L: P3

To customize a profile:

1. Hold the screen button down for 1 second to enter programming mode. The profile number in the centre of the screen flashes to indicate programming mode.
2. Press the back buttons to select from among the available button assignments. Press and hold a back button to scroll through the possible assignments for that back button.
3. Click the screen button once to exit programming mode and save your profile.

Starting Over

If you want to reset your attachment to the default profiles:

1. Press and hold the left back button, right back button, and screen button at the same time.
2. Once the reset icon appears on the screen, continue to hold for 5 seconds.
3. When HJKL appears, the reset is done.

FAQ

• How many profiles can I save?

You can save up to 3 different profiles.

• How do I enter programming mode?

Hold the screen button down for 1 second to enter programming mode. The profile number in the centre of the screen will flash to indicate programming mode.

• How do I customize a profile?

Press the back buttons to select from among the available button assignments. Press and hold a back button to scroll through the possible assignments for that back button. Click the screen button once to exit programming mode and save your profile.

• How do I reset the attachment to default profiles?

Press and hold the left back button, right back button, and screen button at the same time. Once the reset icon appears on the screen, continue to hold for 5 seconds. When HJKL appears, the reset is done.

• Where can I dispose of this product?

Follow local regulations when disposing of this product. Sony products can be recycled for free in the United States and Canada by dropping the product off at several nationwide locations. Visit www.sony.com/electronics/eco/environmental-management for details.

• What are the FCC and IC notices?

You are cautioned that any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. If you have questions about this product,

visit playstation.com/helpme. The phone number in the supplier's declaration of conformity is only for FCC electrical interference inquiries.

Supplier's Declaration of Conformity

- **Trade Name:** PlayStation
- **Model No.:** CUHYA-0100
- **Responsible Party:** Sony Interactive Entertainment LLC
- **Address:** 2207 Bridgepointe Parkway, San Mateo, CA 94404 U.S.A.
- **Telephone No.:** 650-655-8000 (Only for FCC electrical interference inquiries)

Precautions

Before using this product, carefully read this manual and any manuals for compatible hardware. Retain instructions for future reference. For assistance with this product, visit playstation.com/helpme.

Safety

 
Keep this product out of the reach of small children. Small children may swallow small parts, which may cause injury or damage to the product.

- Do not touch the product with wet hands.
- Never disassemble or modify the product.
- Check that there is no dust or foreign object on the connectors when connecting this product to your wireless controller.
- Do not allow liquid or small particles to get into the product.
- Do not expose the product to dust, smoke or steam.
- Do not expose the product to high temperatures, high humidity or direct sunlight.

Use and handling

- Use this product only with a DUALSHOCK®4 wireless controller.
- Do not let any other metal items come in contact with the connectors.
- Do not place any objects on top of the product. Do not stand on the product.
- Do not throw or drop the product, or otherwise expose it to strong physical impact.
- Do not place the product on surfaces that are unstable, tilted or subject to vibration.
- Follow the instructions below to help prevent the product exterior from deteriorating or becoming discoloured.
 - Wipe with a soft, dry cloth.
 - Do not place any rubber or vinyl materials on the product exterior for an extended period.
 - Do not use solvents or other chemicals. Do not wipe with a chemically treated cleaning cloth.

Part Names

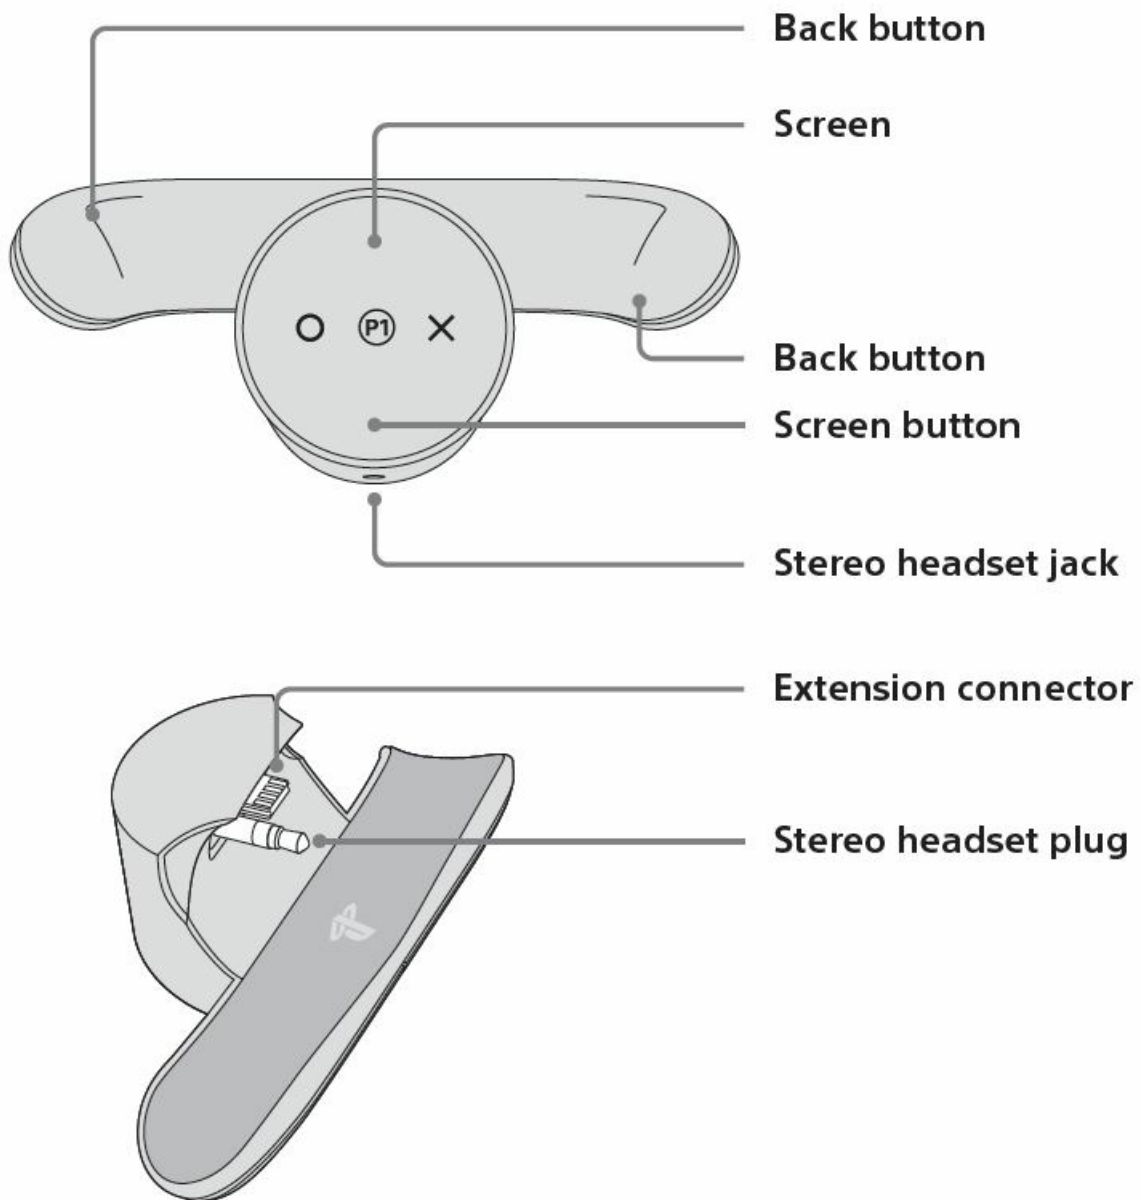

Getting started

- The DUALSHOCK®4 back button attachment adds two extra buttons to the back of your
- DUALSHOCK®4 wireless controller, giving you two more programmable buttons for extra control in your games.
- You can program these extra buttons, allowing you to customize your set-up and get the edge with important controls at your fingertips. Each saved assignment is called a profile.

 
Before connecting:

- Turn off your controller before attaching the product to your DUALSHOCK®4 wireless controller to ensure a proper connection.
- Use this product only with a DUALSHOCK®4 wireless controller.

1. Hold the back button attachment with your thumb behind the stereo headset plug.




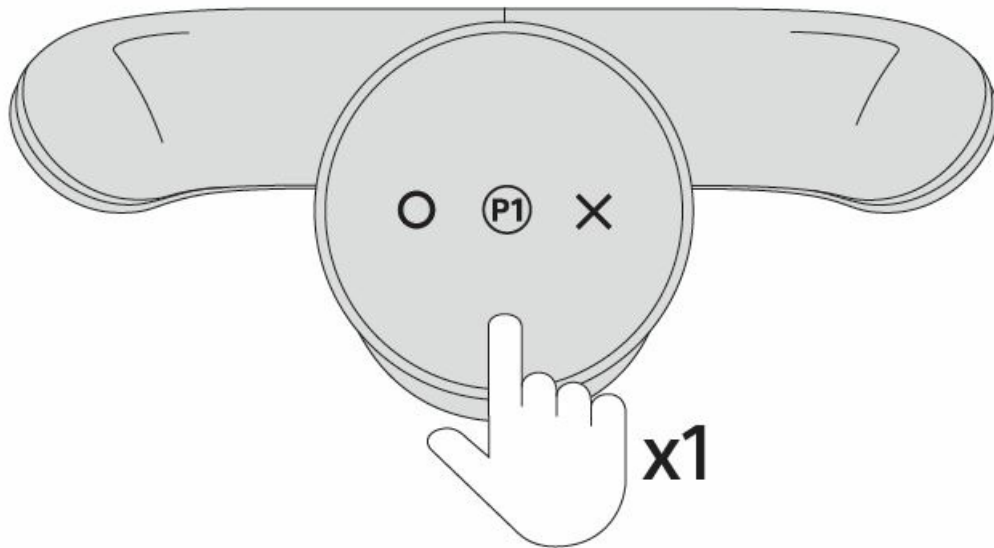 
2. With the attachment's stereo headset plug and the controller's stereo headset jack aligned, firmly push the attachment toward the controller to insert.

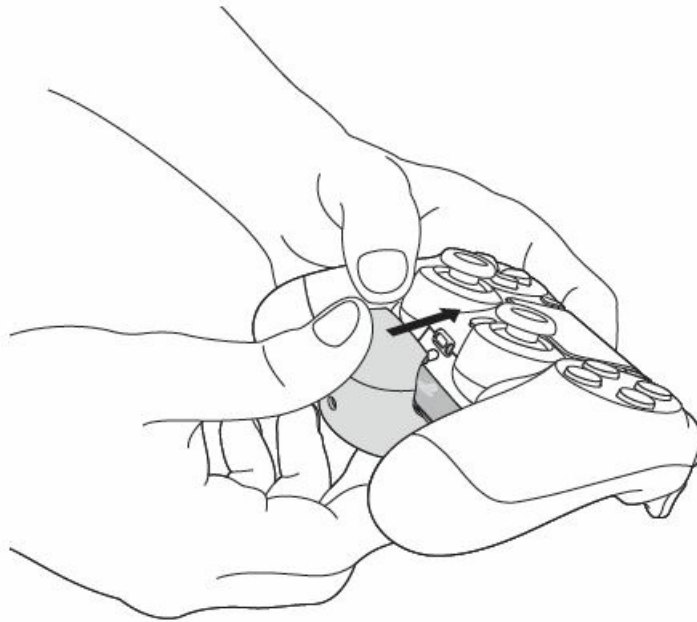

Don't push sideways or from the top or bottom of the attachment.

Powering up

 
1. Press the  (PS) button to turn on your controller.
2. Click the screen button on the attachment. The default profile (P1) appears on the screen.



Customizing profiles

You can save up to 3 different profiles (button assignments). The default profiles are as follows:


Default profiles

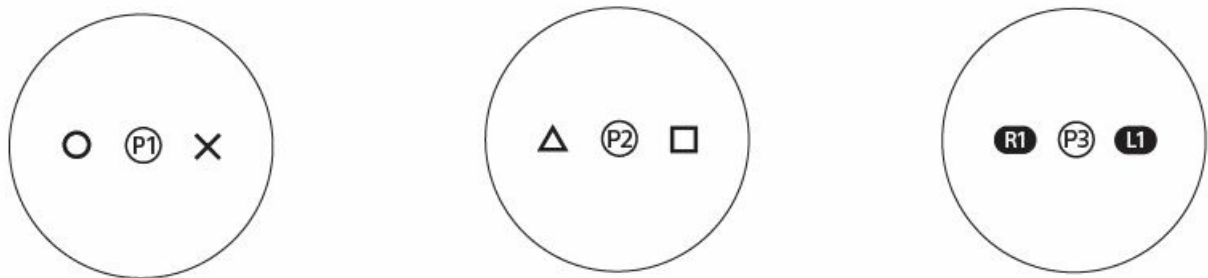


Customize a profile

1. Hold the screen button down for 1 second to enter programming mode.

 
The profile number in the centre of the screen flashes to let you know you're in programming mode.

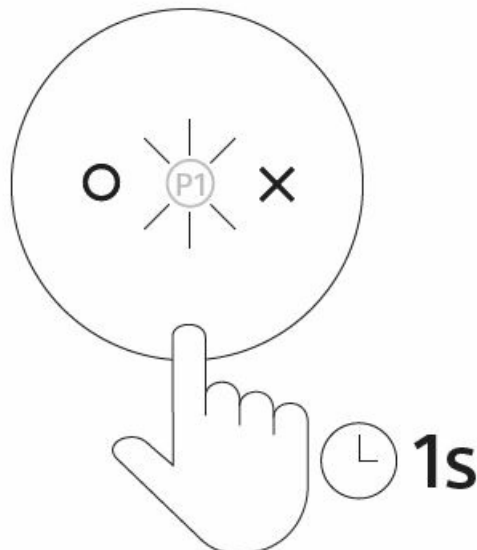

  2. Press the back buttons to select from among the available button assignments. Press and hold a back button to scroll through the possible assignments for that back button.

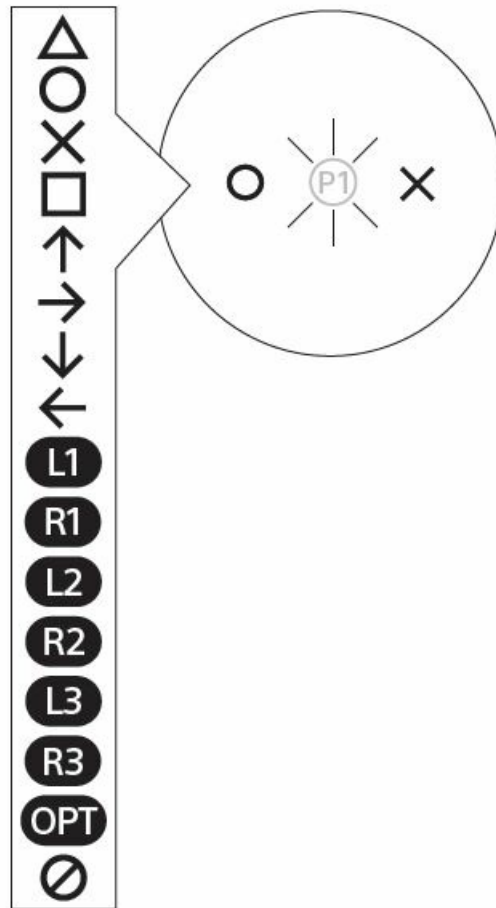

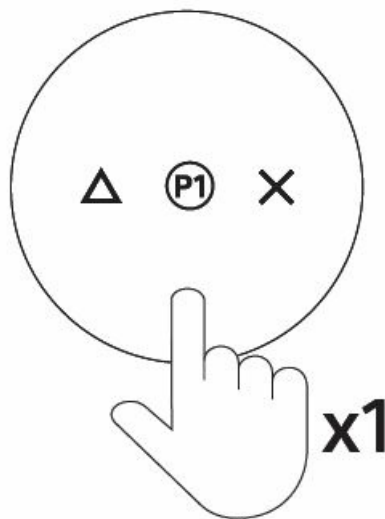

3. Click the screen button once to exit programming mode and save your profile.








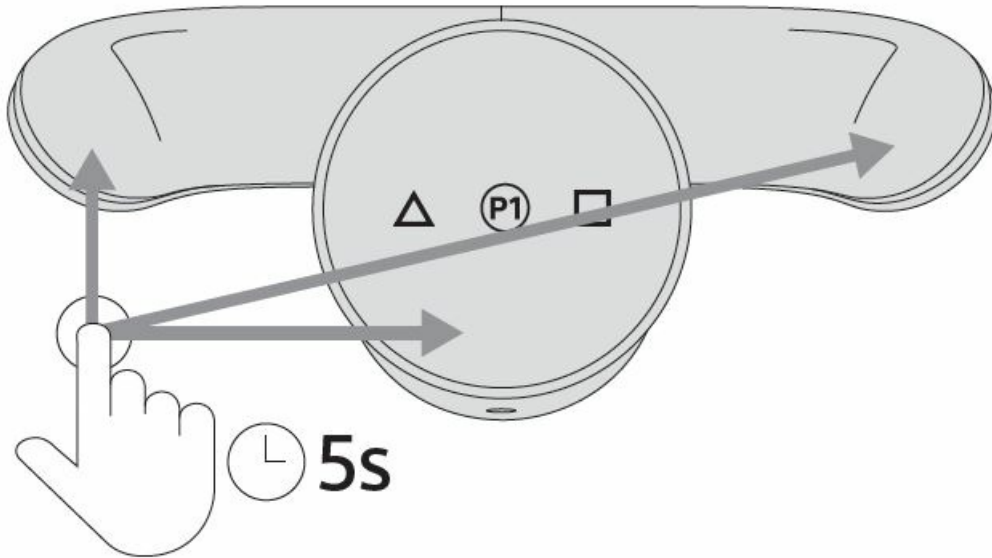 
If you want to customize another profile, hold the screen button down for 1 second to enter programming mode. Then, click twice to program the next profile.

Notes:

- In programming mode, the screen turns itself off after 10 seconds of inactivity. When not in programming mode, the screen turns itself off after 3 seconds of inactivity.
- Any customized button assignments made within PS4™ system settings also apply to the attachment.
-  indicates that no button is assigned. When you assign both back buttons in a profile to , that profile is hidden when not in programming mode.

Starting over

If you want to reset your attachment to the default profiles, press and hold the left-back button, right-back button, and screen button at the same time. Once the reset  icon appears on the screen, continue to hold for 5 seconds. When     HJKL appears, the reset is done.



End-of-life product recycling

Follow local regulations when disposing of this product. Sony products can be recycled for free in the United States and Canada by dropping the product off at some nationwide locations.

Visit www.sony.com/electronics/eco/environmental-management for details.

FCC and IC notice

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, under Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used under the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

You are cautioned that any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

If you have questions about this product, visit playstation.com/helpme. The phone number in the supplier's declaration of conformity is only for FCC electrical interference inquiries.

Supplier's Declaration of Conformity

- **Trade Name:** PlayStation
- **Model No.:** CUHYA-0100
- **Responsible Party:** Sony Interactive Entertainment LLC
- **Address:** 2207 Bridgepointe Parkway, San Mateo, CA 94404 U.S.A.
- **Telephone No.:** 650-655-8000 (Only for FCC electrical interference inquiries)

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

Specifications

- Input power rating 3.2 V 10 mA
- External dimensions (excluding projecting parts) Approx. 98 x 42 x 42 mm (3.9 x 1.6 x 1.6 in) (width x height x depth)
- Weight Approx. 26.2 g (0.92 oz)
- Screen 4,096-pixel OLED display
- Operating temperature 5 °C to 35 °C (41 °F to 95 °F)

Design and specifications are subject to change without notice.

LIMITED WARRANTY

Sony Interactive Entertainment LLC ("SIE LLC") warrants to the original purchaser that this product shall be free from defects in material and workmanship for one (1) year from the date of purchase. This warranty does not apply to any consumables (such as batteries). For defects in material or workmanship within the warranty period, upon showing proof of purchase, SIE LLC agrees for one (1) year to either repair or replace this product with a new or factory-recertified product at SIE LLC's option. For this Limited Warranty, "factory recertified" means a product that has been returned to its original specifications. Visit playstation.com/helpme or call 1-800-345-7669 to receive a return authorization and shipping instructions.

This warranty shall not be applicable and shall be void if the defect in the SIE LLC product has arisen through abuse, unreasonable use, mistreatment, neglect, or means other than from a defect in materials or workmanship. THIS WARRANTY IS IN PLACE OF ALL OTHER WARRANTIES AND NO OTHER REPRESENTATIONS OR CLAIMS OF ANY NATURE SHALL BE BINDING ON OR OBLIGATE SIE LLC. ANY IMPLIED WARRANTIES APPLICABLE TO THIS PRODUCT, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE ONE (1) YEAR PERIOD DESCRIBED ABOVE. IN NO EVENT WILL SIE LLC BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE POSSESSION, USE OR MALFUNCTION OF THE SIE LLC PRODUCT? SOME STATES OR PROVINCES DO NOT ALLOW LIMITATION ON HOW LONG AN IMPLIED WARRANTY LASTS AND SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATIONS OF CONSEQUENTIAL OR INCIDENTAL DAMAGES, SO THE ABOVE LIMITATIONS OR EXCLUSION MAY NOT APPLY TO YOU.

This warranty gives you specific legal rights, and you may also have other rights that vary from state to state or province to province.

This warranty is valid only in the United States and Canada.


“”, “PlayStation”, “”, “DUALSHOCK” and “” are registered trademarks or trademarks of Sony Interactive Entertainment Inc. © 2019 Sony Interactive Entertainment LLC. Printed in China.

DUALSHOCK® 4 Back Button Attachment.

Documents / Resources

	<p>SONY CUHYA-0100 DS4 Back Button Attachment [pdf] Instruction Manual CUHYA-0100 DS4 Back Button Attachment, CUHYA-0100, DS4 Back Button Attachment, Back Button Attachment, Button Attachment</p>
---	---

References

-  [Sony Sustainable Development | Go Green Environmental Policy](#)
- [User Manual](#)