



SONY SEL1635GM2 Interchangeable Lens Object Interchangeable Instruction Manual

[Home](#) » [Sony](#) » SONY SEL1635GM2 Interchangeable Lens Object Interchangeable Instruction Manual 

 
 
SONY®

5-049-713-01(1)
Interchangeable Lens
FE 16-35mm
F2.8 GM II
E-mount

Contents

- 1 SEL1635GM2 Interchangeable Lens Object Interchangeable
- 2 Notes on Use
- 3 Identifying the Parts
- 4 Attaching and Detaching the Lens
- 5 Attaching the Lens Hood
- 6 Focusing
- 7 Using the Focus Hold Button(s)
- 8 Adjusting the Aperture
- 9 Specifications
- 10 Notes on the License
- 11 Documents / Resources
 - 11.1 References



SEL1635GM2 Interchangeable Lens Object Interchangeable

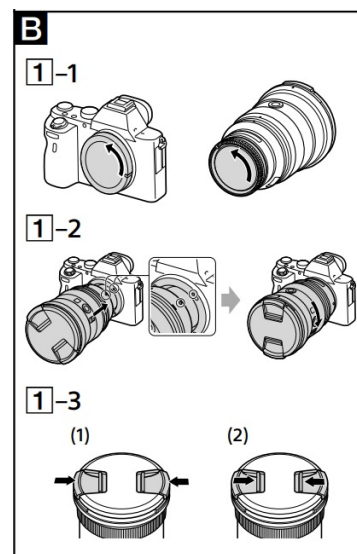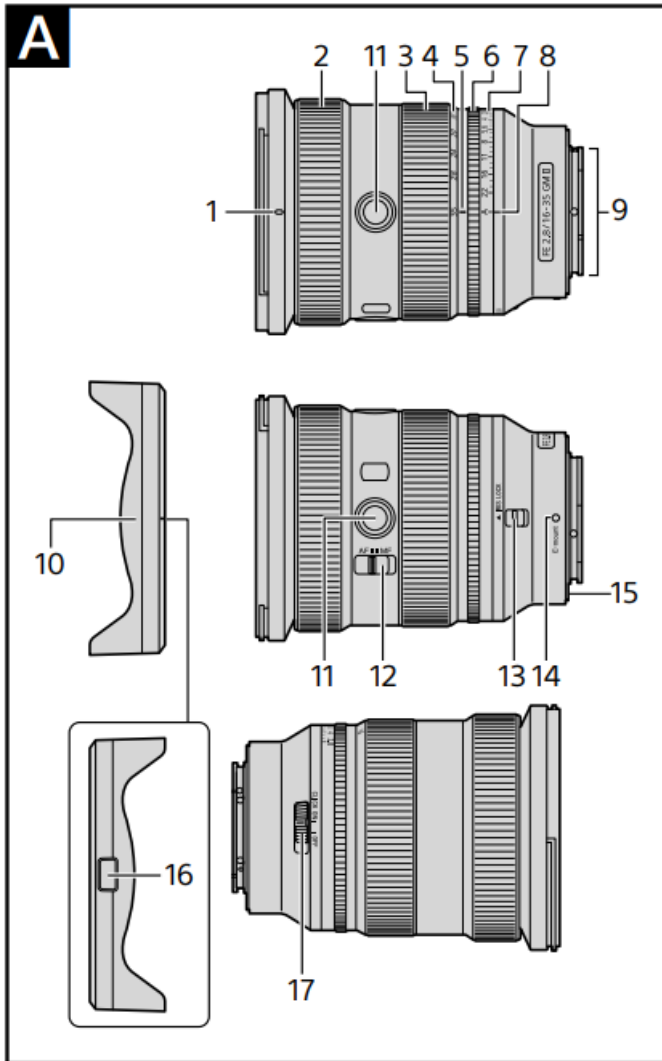

B
2

C

  a

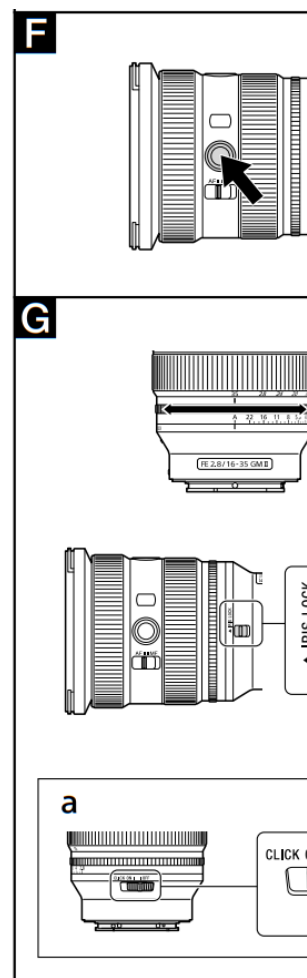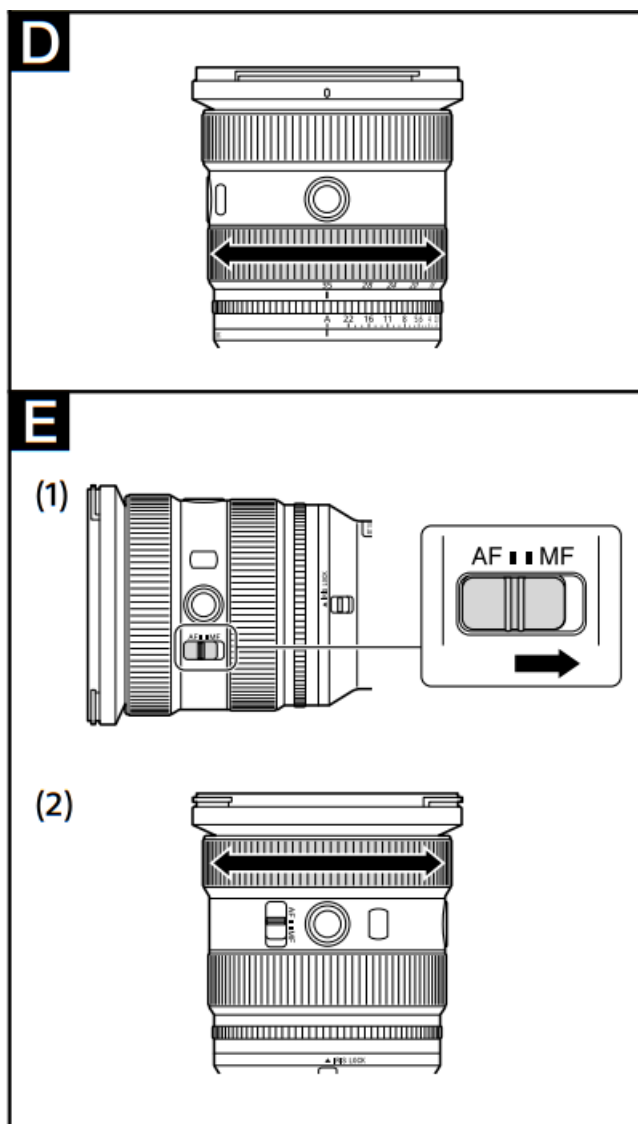

This instruction manual explains how to use lenses. Precautions common to all lenses such as notes on use are found in the separate "Precautions before using". Be sure to read both documents before using your lens.

This lens is designed for Sony α camera system E-mount cameras. You cannot use it on A-mount cameras.

The lens is compatible with the range of a 35mm format image sensor.

A camera equipped with a 35mm format image sensor can also be set to shoot at APS-C size.

For details on how to set your camera, refer to its instruction manual.

For further information on compatibility, visit the web site of Sony in your area, or consult your dealer of Sony or local authorized service facility of Sony.

For Customers in the U.S.A.

For question regarding your product or for the Sony Service Center nearest you,
call 1-800-222-SONY (7669).
Supplier's Declaration of Conformity
Trade Name : SONY
Model : SEL1635GM2
Responsible Party : Sony Electronics Inc.
Address : 16535 Via Esprillo, San Diego, CA 92127
U.S.A.
Telephone Number : 858-942-2230

Notes on Use

- Do not leave the lens exposed to the sun or a bright light source. Internal malfunction of the camera body and lens, smoke, or a fire may result due to the effect of light focusing. If circumstances necessitate leaving the lens in sunlight, be sure to attach the lens caps. When shooting against the sun, keep the sun completely out of the angle of view.
- This lens is not water-proof, although designed with dust-proofness and splash-proofness in mind. If using in the rain etc., keep water drops away from the lens.
- If the lens alone is shaken or if a camera with the lens attached is shaken while the camera is turned off, an internal component of the lens may rattle. This, however, does not indicate a malfunction. In addition, while you carry around the lens, your movement may cause the internal lens groups to shake. This, however, does not affect the performance of the lens groups.
- Do not hold the lens by its extended part.
- When carrying a camera with the lens attached, always firmly hold both the camera and the lens.
- Using this unit with products from other manufacturers may affect its performance, leading to accidents or malfunction.

Precautions on using a flash

- With certain combinations of lens and flash, the lens may partially block the light of the flash, resulting in a shadow at the bottom of the picture. In such a case, adjust the focal length or the shooting distance before shooting.

Vignetting

- When using the lens, the corners of the screen become darker than the center. To reduce this phenomena (called vignetting), close the aperture by 1 to 2 stops.

Identifying the Parts

1 Lens hood index	10 Lens hood
2 Focusing ring	11 Focus hold button
3 Zooming ring	12 Focus mode switch
4 Focal-length scale	13 IRIS LOCK switch
5 Focal-length index	14 Mounting index
6 Aperture ring	15 Lens mount rubber ring
7 Aperture scale	16 Hood release button
8 Aperture index	17 Aperture click switch
9 Lens contacts*	

*Do not touch the lens contacts.

Attaching and Detaching the Lens

- Before attaching/detaching the lens, hold the lens by its mounting body. Do not hold it by any of its operation controls, such as the focusing ring.

To attach the lens (See illustration B–1.)

1. Remove the rear lens cap and the camera body cap.
2. Align the white index on the lens barrel with the white index on the camera (mounting index), then insert the lens into the camera mount and rotate it clockwise until it locks.
 - Do not press the lens release button on the camera when mounting the lens.
 - Do not mount the lens at an angle.
3. Remove the front lens cap.
 - You can attach/detach the front lens cap in two ways, (1) and (2).

To remove the lens

1. Attach the front lens cap.
2. While holding down the lens release button on the camera, rotate the lens counterclockwise until it stops, then detach the lens. (See illustration B–2.)

Attaching the Lens Hood

It is recommended that you use a lens hood to reduce flare and ensure maximum image quality.

Align the red line on the lens hood with the red line on the lens (lens hood index), then insert the lens hood into the lens mount and rotate it clockwise until it clicks into place and the red dot on the lens hood is aligned with the red line on the lens.

- If the lens hood is not rotated until it clicks into place, there is a possibility that a shadow appears on captured images or the lens hood falls off.
- If the flash light is partially blocked by the lens hood, a shadow may appear at the bottom of captured images. In such a case, remove the lens hood.
- When storing, fit the lens hood onto the lens backwards.

To remove the lens hood (See illustration C-a.)

While holding down the hood release button on the lens hood, rotate the lens hood counterclockwise.

Zooming

Rotate the zooming ring to the desired focal length.

Focusing

- The focus mode switch of this lens does not function with some camera models.
For further information on compatibility, visit the web site of Sony in your area, or consult your dealer of Sony or local authorized service facility of Sony.

To switch AF (auto focus)/MF (manual focus)

The focus mode can be switched between AF and MF on the lens.

For AF photography, both the camera and lens should be set to AF. For MF photography, either or both the camera or lens should be set to MF.

To set the focus mode on the lens Slide the focus mode switch to the appropriate mode, AF or MF (1).

- Refer to the camera manuals to set the focus mode of the camera.
- In MF, turn the focusing ring to adjust the focus (2) while looking through the viewfinder, etc.
To use a camera equipped with an AF/MF button
- By pressing the AF/MF button during AF operation, you can temporarily switch to MF.
- Pressing the AF/MF button during MF operation lets you temporarily switch to AF if the lens is set to AF and the camera to MF.

Using the Focus Hold Button(s)

- The focus hold button of this lens does not function with some camera models.
For further information on compatibility, visit the web site of Sony in your area, or consult your dealer of Sony or local authorized service facility of Sony.

Press the focus hold button in AF to cancel AF. The focus is fixed and you can release the shutter on the fixed focus. Release the focus hold button while pressing the shutter button halfway to start AF again.

Adjusting the Aperture

When you align “A” on the aperture scale to the aperture index, the camera is set to auto iris mode and the exposure is set by the camera. And you can adjust the amount of light manually between f/2.8 and f/22 by rotating the aperture ring.

IRIS LOCK switch

To lock the aperture ring at “A” on the aperture scale or limit the turning of the aperture ring within the range from f/2.8 to f/22 on the aperture scale, slide the IRIS LOCK switch toward the mark.

To unlock the aperture ring or the limitation, slide the IRIS LOCK switch away from the mark.

Notes

Set the aperture click switch to “OFF” when shooting movies. (See illustration G-a.)

When the aperture click switch is set to “OFF,” the sound of the aperture ring is reduced. (For movie recording)

If you change the aperture value while shooting a movie with the aperture click switch set to “ON,” the sound of the aperture ring will be recorded.

Specifications

Product name (Model name)	FE 16-35mm F2.8 GM II (SEL1635GM2)
Focal length (mm)	16-35
35mm equivalent focal length*1 (mm)	24-52.5
Lens groups-elements	15-Dec
Angle of view 1* 2	107°-63°
Angle of view 2* 2	83°-44°
Minimum focus*3 (m (feet))	0.22 (0.73)
Maximum magnification (X)	0.32
Minimum aperture	f/22
Filter diameter (mm)	82
Dimensions (maximum diameter × height) (approx., mm (in.))	87.8 × 111.5 (3 1/2 × 4 1/2)
Mass (approx., g (oz))	547 (19.3)
SteadyShot	No

*1 This is the equivalent focal length in 35mm format when mounted on an Interchangeable Lens Digital Camera equipped with an APS-C sized image sensor.

*2 Angle of view 1 is the value for 35mm cameras, and angle of view 2 is the value for Interchangeable Lens Digital Cameras equipped with an APS-C sized image sensor.

*3 Minimum focus is the distance from the image sensor to the subject.

• Depending on the lens mechanism, the focal length may change with any change in shooting distance.

The focal lengths given above assume the lens is focused at infinity.

Included items

(The number in parentheses indicates the number of pieces.)

Lens (1), Front lens cap (1), Rear lens cap (1),

Lens hood (1), Lens case (1),

Set of printed documentation

Design and specifications are subject to change without notice.

a and G are trademarks of Sony Group Corporation.

Notes on the License

This product comes with software that is used based on licensing agreements with the owners of that software. Based on requests by the owners of copyright of these software applications, we have an obligation to inform you of contents of the agreement. For the software used on this product, visit the website at:

https://rd1.sony.net/help/di/lens_oss1/en/



 
5049713010

<https://www.sony.net/>

©2023 Sony Corporation

Printed in Thailand

Documents / Resources

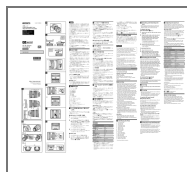

[SONY SEL1635GM2 Interchangeable Lens Object Interchangeable](#) [pdf] Instruction Manual
SEL1635GM2 Interchangeable Lens Object Interchangeable, SEL1635GM2, Interchangeable L
ens Object Interchangeable, Lens Object Interchangeable, Object Interchangeable, Interchange
able

References

- [S Important information on software](#)
- [S α](#)
- [S Sony Corporation - Home](#)

[Manuals+](#).