

SOONFIRE E37 USB C Rechargeable LED Handheld Flashlight



SOONFIRE E37 USB C Rechargeable LED Handheld Flashlight User Manual

[Home](#) » [SOONFIRE](#) » SOONFIRE E37 USB C Rechargeable LED Handheld Flashlight User Manual 

Contents

- [1 SOONFIRE E37 USB C Rechargeable LED Handheld Flashlight](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 User Manual for the Flashlight](#)
- [5 Charging](#)
- [6 ITS Smart Temperature Control System](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)
- [8 Related Posts](#)

SOONFIRE

SOONFIRE E37 USB C Rechargeable LED Handheld Flashlight



Product Information

Specifications

- High performance-price ratio
- Excellent customer support

Product Usage Instructions

A. Turning On/Off and Adjusting Brightness:

1. Press the switch for 0.5 seconds to turn on.
2. Set the switch on low-middle-ultra-bright mode brightness.
3. Press the switch for 0.5 seconds to turn off and memorize the last mode.

B. Choosing Modes

1. Quickly double-click the switch to choose ultra-bright mode.
2. Quickly double-click the switch again to set Strobe and SOS mode.

C. Additional Functions

1. **While in the turn-off state:** Press the switch for 3 seconds to set it to Low.
2. Press the switch for 3 seconds again to set Locking.
3. Quickly click three times the switch to set Unlocking.

Charging Instructions

1. Charge the flashlight before use.

2. Screw down the Body before charging or use.
3. Loosen the body to avoid accidental activation.
4. Charge at least once every 6 months.

FAQ

Q: What do the different LED indicator colors mean?

 
- **A:** Blue indicates fully charged, Blue flashes indicate charge sufficiency, Red indicates a low charge and Red flashes indicate critical charge level.

Q: What should I do if the LED indicators show abnormal charging?

- **A:** If Red is fast flashing, screw down the End Body to correct the abnormal charging.
- High performance-price ratio
- Excellent customer support
- CHARGE the flashlight before use.
- SCREW DOWN the Body before charging/use

User Manual for the Flashlight

- **A.** Press the switch for 0.5 seconds to turn it on – Set the switch on low-middle-ultra-bright mode” brightness – Press the switch for 0.5 seconds to turn it off and memorize the last mode.
- **B.** Quickly double-click the switch to choose ultra-bright mode” – Quickly double-click the switch again to set “Strobe and SOS mode”
- **C.** While in turn off state: Press the switch for 3 seconds to set “Low”. Press the switch for 3 seconds again to set “Locking” – Quickly click three times the switch to set “Unlocking”.
- The high brightness mode has a limit of 3 minutes.
- The original state can be restored after charging.
- **Blue** – fully charged
- **Blue flashes** – charge sufficient
- **Red** – low charge
- **Red flashes** – critical

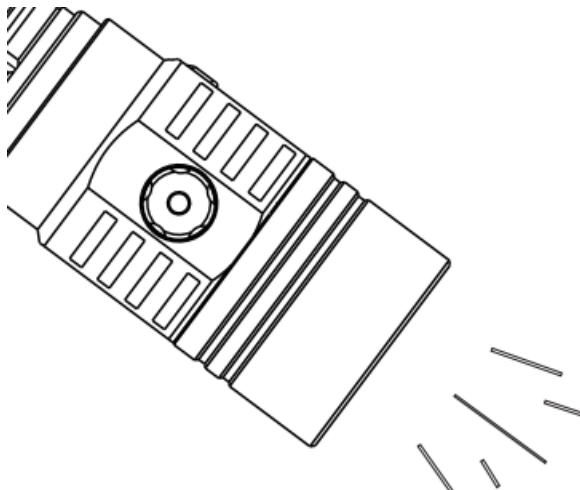


- Smart brightness adjustment Loosen the body to avoid accidental activation Charge at least once every 6


months

Charging

 1. Turn ON
2. Plug USB Cable

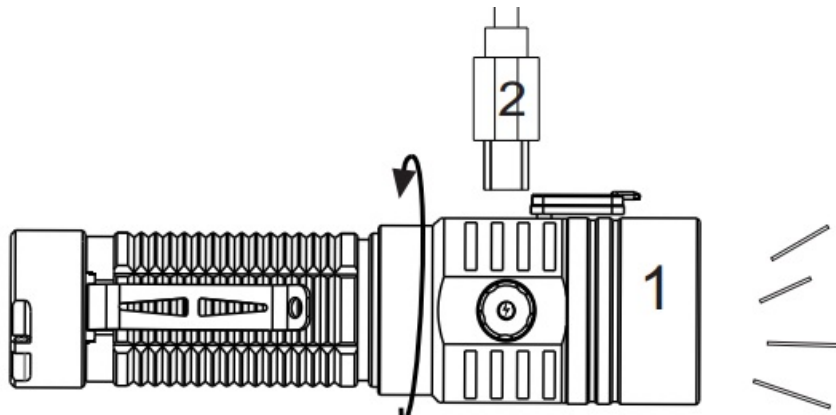

 
NOTE: Red fast flashing – abnormal charging (SCREW DOWN the End Body)

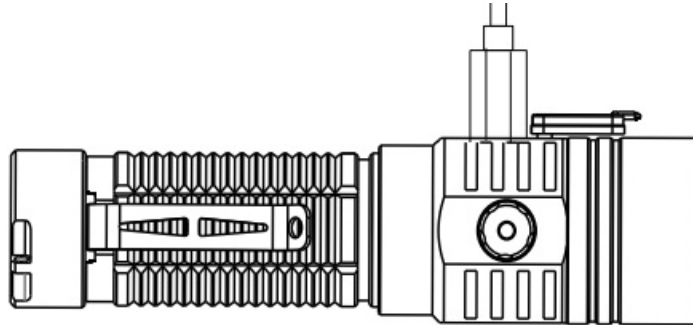


- **Blue** – fully charged
- **Red** – while charging
- Only low modes are available while charging.
- Press the switch for 2 seconds to turn on.

ITS Smart Temperature Control System

 Output: Lumens

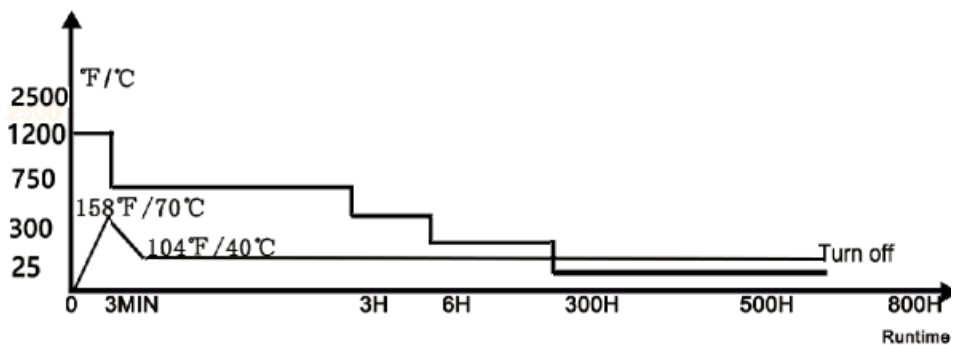

 1. The brightness automatically decreases with time.
2. High brightness mode has a limit of 3 minutes.
3. The usage time varies depending on the battery capacity.

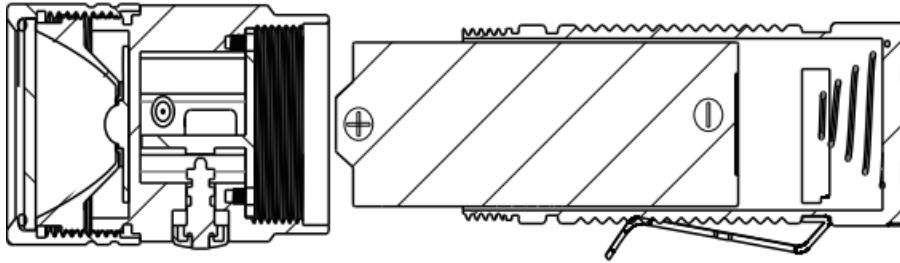

- Section structure diagram
 - Schematic circuit diagram
 - Regularly cleaning the battery contacts (by using a cotton swab soaked in rubbing alcohol) can improve the flashlight's performance as dirty contacts may cause the flashlight to stop working.
-

Documents / Resources

	<p>SOONFIRE E37 USB C Rechargeable LED Handheld Flashlight [pdf] User Manual E37 USB C Rechargeable LED Handheld Flashlight, E37, USB C Rechargeable LED Handheld Flashlight, Rechargeable LED Handheld Flashlight, LED Handheld Flashlight, Handheld Flashlight, Flashlight</p>
--	--

References

- [User Manual](#)

[Manuals+.](#) [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.