



Sound Control Technologies RCU2-C10 USB Application User Guide

[Home](#) » [Sound Control Technologies](#) » Sound Control Technologies RCU2-C10 USB Application User Guide 

Contents

- [1 Sound Control Technologies RCU2-C10 USB Application](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Conection](#)
- [5 Documents / Resources](#)



Sound Control Technologies RCU2-C10 USB Application



Product Information

- **Product Name:** RCU2-C10TM USB Application Guide
- **Compatible Models:** AVerTR311HN, AVerTR313, AVerTR331, VHD M1000
- **USB Cable:** RCC-M004-1.0M USB-B (RCU2-HETM) to USB-A
- **USB Adapter:** RCU2-HETM
- **Laptop Compatibility:** Laptop
- **USB Cable:** RCC-M005-0.3M USB-A (RCU2-CETM) to USB-C
- **Power Cable:** PPC-023-0.3M RJ11 (RCU2-CETM) to EIAJ-4 Barrel Connector
- **SCTLink™ Cable:** Power, Control & Video
- **Module Dimensions:**
 - **RCU2-CETM:** H: 0.789(20mm) x W: 2.264(57mm) x D: 3.725(94mm)
 - **RCU2-HETM:** H: 1.448(36mm) x W: 3.814(96mm) x D: 3.578(90mm)
- **SCTLink™ Cable Specs:**
 - Integrator-Supplied CAT5e/CAT6 STP/UTP Cable T568A or T568B (100m Max Length)
- **RJ45 Pinout:**
 - **T568A:** 12345678 gGoBbO brBR
 - **T568B:** 12345678 oO gBbGbrBR
- **Power Supply:** W PS-1230VDC 100-240V 47-63Hz


Product Usage Instructions

1. Connect the provided RCC-M004-1.0M USB-B (RCU2-HETM) to USB-A cable to the USB-B port of your device and the USB-A port of the RCU2-HETM USB adapter.
2. If you are using a laptop, connect the RCU2-HETM USB adapter to your laptop using the provided USB cable (RCC-M005-0.3M USB-A to USB-C).
3. If you need to connect a power source, use the PPC-023-0.3M RJ11 (RCU2-CETM) to EIAJ-4 Barrel

Connector power cable.

4. For power, control, and video transmission, use the SCTLink™ Cable. Ensure that it is a single, point-to-point CAT cable without any couplers or interconnections.
5. If you need to extend the SCTLink™ Cable, use integrator-supplied CAT5e/CAT6 STP/UTP cable with T568A or T568B pinout.
6. For the pinout configuration, refer to the RJ45 Pinout section. Choose either T568A or T568B standard.
7. If required, connect the provided power supply (W PS-1230VDC 100-240V 47-63Hz) to the appropriate power source.


Conection

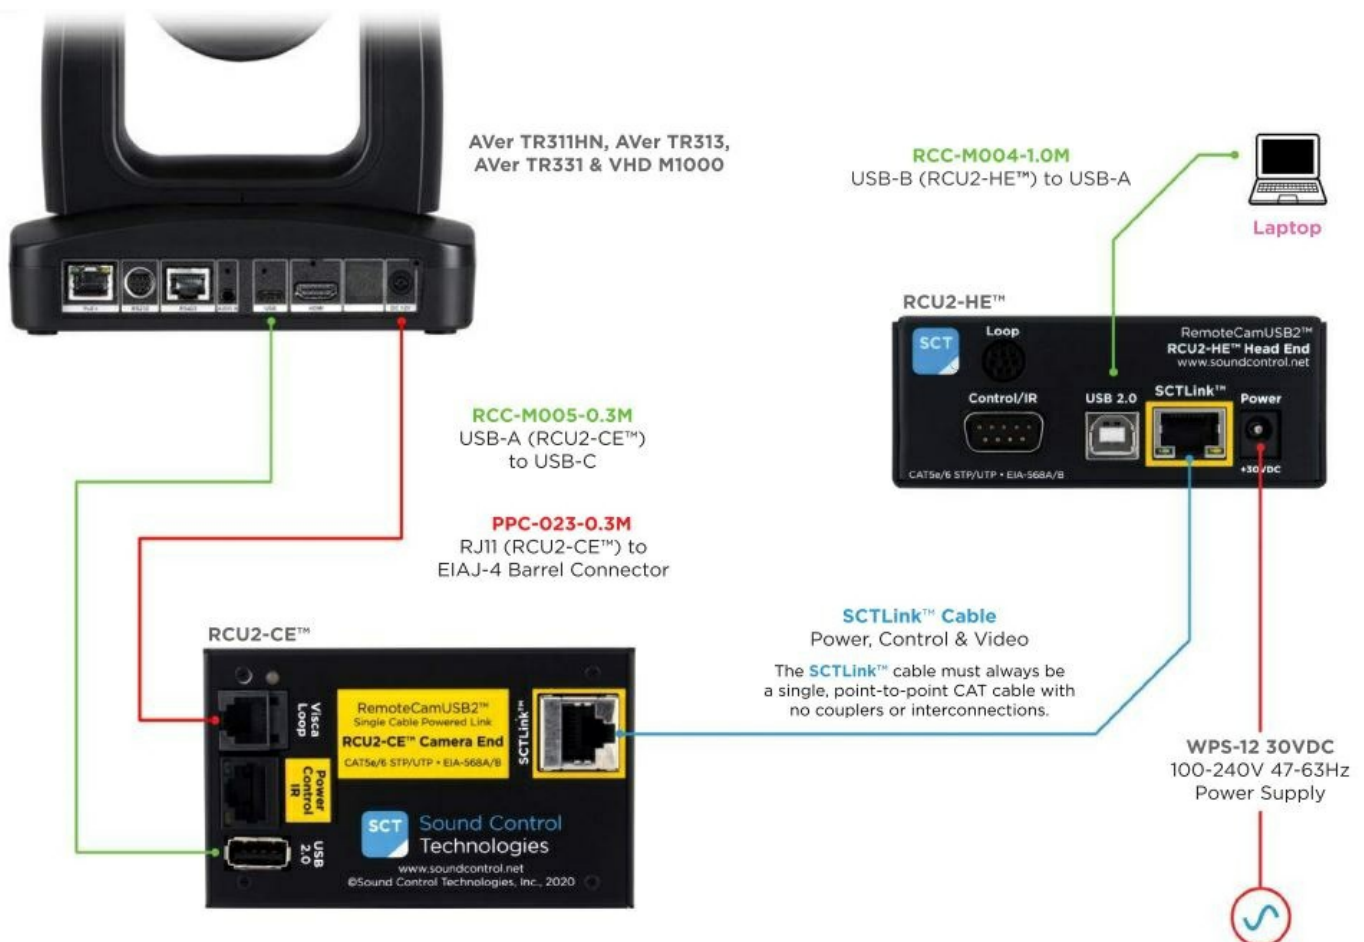

ModuleDimensions


- RCU2-CE™:H:0.789"(20mm)xW:2.264"(57mm)xD:3.725"(94mm)
- RCU2-HE™:H:1.448"(36mm)xW:3.814"(96mm)xD:3.578"(90mm)

SCTLink™ Cable Specs

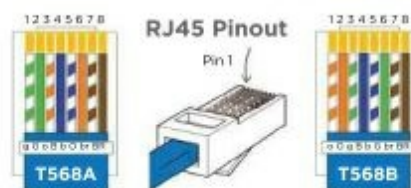

- ntegrator-SuppliedCAT5e/CAT6STP/UTPCable T568AorT568B(100m MaxLength)

Documents / Resources

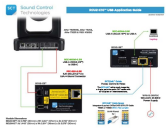

[Sound Control Technologies RCU2-C10 USB Application](#) [pdf] User Guide
RCU2-C10 USB Application, RCU2-C10, USB Application, Application

Manuals+.