



Home » Soundcore » Soundcore A3136 Glow Mini Bluetooth Speaker User Guide 📆


Contents [hide]

- 1 Soundcore A3136 Glow Mini Bluetooth Speaker
- 2 At a Glance
- 3 Charging Your Speaker
- 4 Using Your Speaker
- 5 soundcore App
- 6 Specifications
- 7 Documents / Resources
 - 7.1 References



Soundcore A3136 Glow Mini Bluetooth Speaker




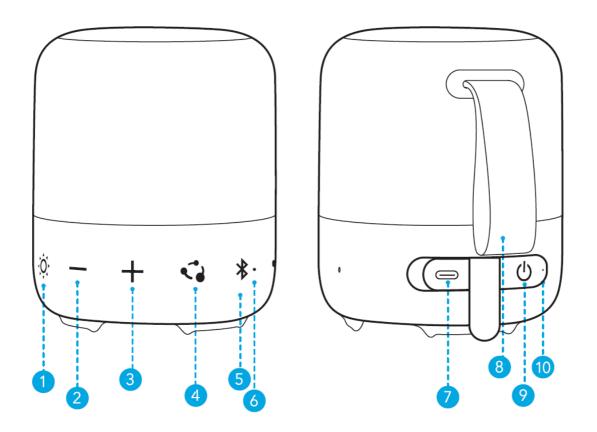

1	Light Effect Button	6	Bluetooth LED
2	Volume Down Button	7	USB-C Charging Port
3	Volume Up Button	8	Strap
4	PartyCast Button	9	Power Button
5	Bluetooth Button	10	Power LED


Charging Your Speaker

Use a certified USB-C cable and charger to prevent any damage.

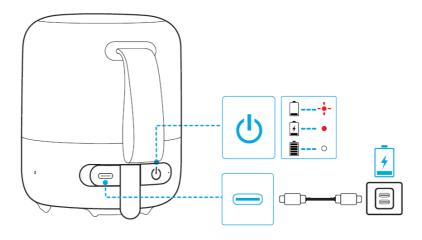

	Flashing Red	Low Battery
•	Steady Red	Being Charged
0	Steady White	Fully Charged

Powering On / Off

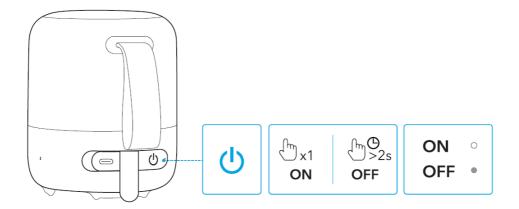


ம	Press	Power On
0	Steady White	Trower off
ம	Press and Hold for 2 Seconds	Power Off
•	Light Off	FOWER OII

This speaker will power off automatically after 20 minutes if no device is connected.

Using Your Speaker

Bluetooth Mode

Press the Bluetooth button to enter Bluetooth pairing mode, then select "soundcore Glow Mini" from the Bluetooth list to connect.

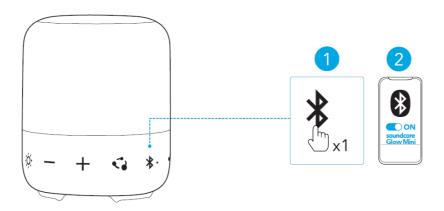


*	Press	Enter Bluetooth Pairing Mode
	Flashing Blue	Bluetooth Pairing
•	Steady Blue	Bluetooth Connected

- To re-enter Bluetooth pairing mode, press the Bluetooth button once.
- This speaker can only play music on one mobile device at a time. To play from another connected device, pause the device that's currently active first.
- Each time you power on your speaker, it will automatically connect to your last connected device if available within the Bluetooth range. If not, press the Bluetooth button to enter Bluetooth pairing mode.

TWS (True Wireless Stereo) Mode

Two identical soundcore speakers can pair with each other for stereo sound. Both speakers can play the same audio (one as the left channel and the other as the right channel).

With one speaker connected to a smartphone, press and hold the Bluetooth button for 2 seconds on two speakers to enter TWS pairing mode.

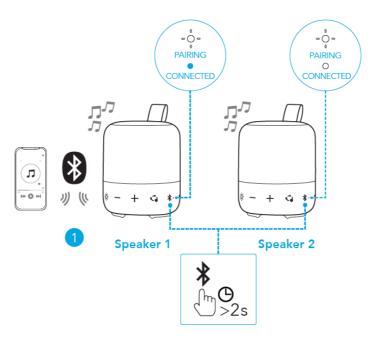


*	Press and Hold for 2 Seconds	Enter TWS Pairing Mode	
0 0	Flashing White	TWS Pairing	
•	Steady Blue (Speaker 1)	TWS Connected	
0	Steady White (Speaker 2)	1 vv3 Connected	

To exit TWS mode, press and hold the Bluetooth button for at least 2 seconds.

PartyCast Mode

With one speaker connected to a smartphone, press the PartyCast button on up to 100 soundcore speakers with PartyCast function to synchronize audio and light.

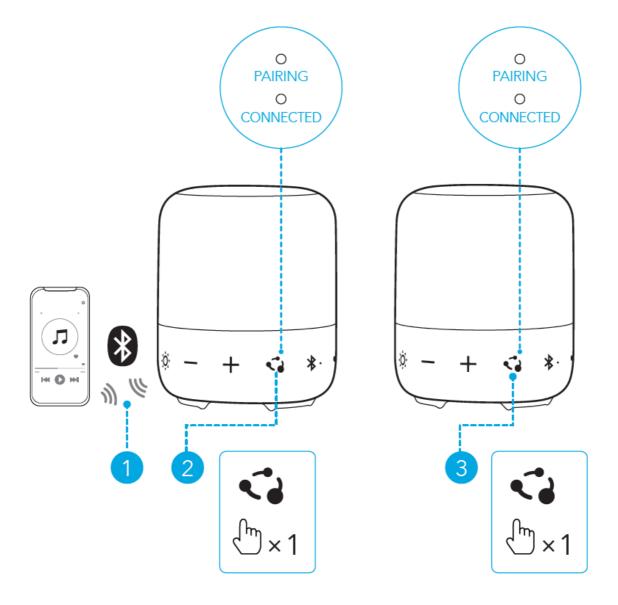

G	Press	Enter / Exit PartyCast Pairing Mode
0 0	Flashing White	PartyCast Pairing
0	Steady White	PartyCast Connected

soundcore speakers with PartyCast function can also be connected with this speaker.

Light Modes

The light on the speaker changes with the rhythm of the music. There are 5 preset music-sync light modes. You can also check all available light modes in the soundcore app.

√Ô`·	Press	Switch Light Modes
1 2		

Press and Hold for 2 Seconds	Turn off
------------------------------	----------

Button Controls

	Press	Power On
	Press and Hold for 2 Seconds	Power Off
	Press	Play / Pause
0	Press Twice	Next Track
	Press Three Times	Previous Track
	Press	Answer / End a Call
	Press and Hold for 2 Seconds	Reject a Call
•	Press	Enter Bluetooth Pairing Mode
•	Press and Hold for 2 Seconds	Enter / Exit TWS Pairing Mode
ζÔ'.	Press	Switch Light Modes
,Q,r	Press and Hold for 2 Seconds	Turn off
-/+	Press	Volume Up / Down
	Press	Enter / Exit PartyCast Pairing Mo de

soundcore App

Download the soundcore app to enhance your experience.









- Product information: Check the product name and software version, or read the user guide.
- **Firmware update:** You will be informed once a new version of firmware is detected when you connect the speaker with the app.
- Battery status: Indicates the remaining battery level of your speaker.
- Volume control: Adjust the volume level via the app without pressing the buttons on the speaker.
- **EQ settings:** There are 4 preset EQ settings you can choose from in the app to optimize your experience while enjoying different music genres.
- soundcore Signature: Standard EQ mode optimized for well-balanced sound.
- Voice: Voices stand out more clearly from other ambient sounds.
- Balance: No enhancement for high-frequency and low-frequency sounds.
- Treble Boost: High frequencies are enhanced.
- **Set auto-power off time:** Set an auto-power off time. The speaker will automatically turn off when the time is up.
- Light effects: Besides the music-sync light effects, you can also choose your favorite light effects.
- Voice prompt: Mute or restore the voice prompt while powering on/off.

Reset

Press and hold the Bluetooth button and volume up button simultaneously for at least 4 seconds to reset the speaker.

Specifications

DC Power Input	5V 1A
Battery Capacity	1800mAh/3.7V
Audio Output Power	8W
Speaker Driver	1.75" Full Range x1
Charging Time	3 Hours
Play Time (varies by volume level and mu sic content)	Up to 12 Hours
Waterproof Level	IP67
Bluetooth Version	5.3
Bluetooth Range	100m / 328ft

Note: The 'x' of SN Code: xxxxxxxxxxxxxxxx is a variable, see below table.

Variable 'x'	Range of variables	Content
Seventh	0-9 or A-F	Denotes the hardware version which is not ef fected on the safety compliance.
Eighth	8, 9, A, B, C	Denotes the year, 8 means 2018, 9 means 2 019, A means 2020, B means 2021, C mean s 2022, and so on.
Ninth and tenth	01,02,03	Denotes weeks, 01 means the first week in this year, 02 means the secondary week in this year, and so on.
Eleventh	1-7	Denotes date, 1 means Monday, 2 means Tu esday, 7 means Sunday and so on.

The last five	00001-99999	Denotes serial No.
---------------	-------------	--------------------

Hereby, Anker Innovations Limited declares that this device is in compliance with The Product Security and Telecommunications Infrastructure (Security Requirements for Relevant Connectable Products) Regulations 2023. For the Statement of Compliance, visit the website: https://uk.soundcore.com/pages/psti-related

1. Power consumption in standby mode: ≤0.5W

2. Power management: ≤ 20min

3. Information of applicable adapter:

Brand: ANKER

Manufacturer: Anker Innovations Limited

 
Model: A2337

Input: 100-240V~ 1.0A, 50-60Hz

Output: 5.0V 3.0A 15.0W / 9.0V 3.0A 27.0W / 12.0V 2.5A 30.0W / 15.0V 2.0A

30.0W / 20.0V 1.5A 30.0W (30.0W Max)

Documents / Resources



Soundcore A3136 Glow Mini Bluetooth Speaker [pdf] User Guide V02_SPK_A3136, A3136 Glow Mini Bluetooth Speaker, A3136, Glow Mini Bluetooth Speaker, Bluetooth Speaker, Speaker

References

- User Manual
- Soundcore
- ◆ A3136, A3136 Glow Mini Bluetooth Speaker, Bluetooth Speaker, Glow Mini Bluetooth Speaker, soundcore, speaker, V02 SPK A3136

Leave a comment

Your email address will not be published. Required fields are marked*	
Comment *	
Name	
Email	
Website	
☐ Save my name, email, and website in this browser for the next time I comment.	
Post Comment	
Search:	
e.g. whirlpool wrf535swhz	earch
Manuals+ Upload Deep Search Privacy Policy @manuals.plus YouTube	

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.