

SoundCore Ace A0 Portable Speaker A3150 User Manual

Home » Support » SoundCore Ace A0 Portable Speaker A3150 User Manual



Contents

- 1 SoundCore Ace A0 Portable Speaker
- 2 Safety Instructions
- 3 What's Included
- 4 At a Glance
- **5 Using Your Soundcore Ace A0**
- 6 Charging your Soundcore Ace A0
- 7 Specifications
- **8 Declaration of Conformity**
- 9 DOWNLOAD
- **10 Related Posts**

SoundCore Ace A0 Portable Speaker A3150




USER MANUAL

Model No.: A3150 V01


Safety Instructions

- Avoid dropping.
- Do not disassemble.
- Do not submerge in water.
- Avoid extreme temperatures.
- Do not use the device outdoors during thunderstorms.
- Do not use any corrosive cleaner / oil to clean

What's Included

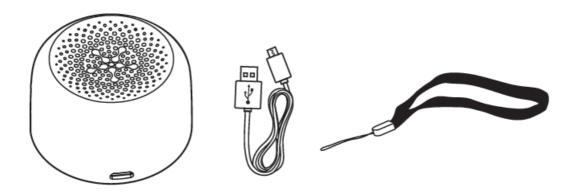


At a Glance

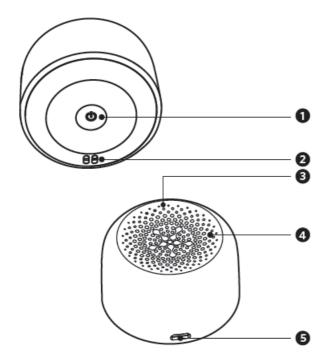

- 1. Power Button / Multifunction Button
- 2. Hand Strap Hole
- 3. Status Indicator
- 4. Speaker
- 5. micro USB Port


Using Your Soundcore Ace A0

1. Turn On / Off

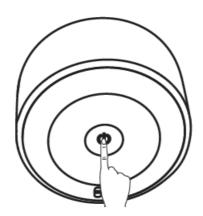

ON	Press
OFF	Press and hold for more than 2 seconds

a. Bluetooth mode

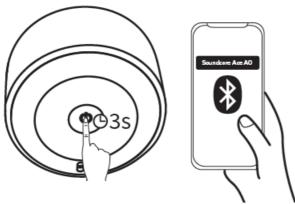

		١ ١
-0	- Flashing Blue	Bluetooth Pairing Mode Note: Press and hold the power button for 3 seconds to enter Bluetooth pairing mode(When Ace A0 is off).
0	Solid Blue	Connected to a device
-0	- Slow Flashing Blue	Idle mode Note: The speaker enters idle mode when connection is taking too long or it's disconnected for more than 3 mins. Press Bluetooth button to reenter Bluetooth pairing mode.

b. Music






Play / Pause

Play Next Song

NOTE:

- When turned on, Soundcore Ace A0 will automatically connect to the last connected device if available. If not, press the Bluetooth button to activate pairing mode.
- Having connection problems? Remove Soundcore Ace A0 from your device's Bluetooth history and ensure it's less than 3 feet away. Then try pairing again. To get the best sound quality, make sure there is a clear line of sight between the connected device and your speaker

Charging your Soundcore Ace A0

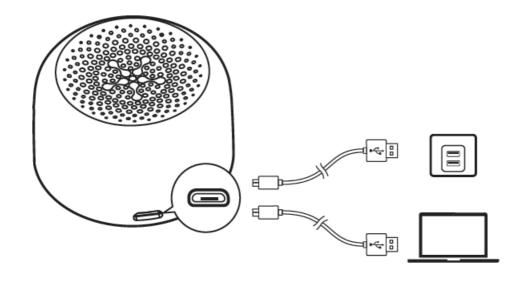

	Slow Flashing Red	Low Battery
	Solid Red	Charging
Off		Fully Charged

NOTE:

- Use the included USB cable to charge your Soundcore Ace A0 and make sure it is fully charged before its first use.
- Disconnect your speaker from the charger when fully charged. Do not charge your speaker for extended periods.
- When not in use, store your speaker in a cool place.

Specifications

Specifications are subject to change without notice.

Input:	5 V ==0.35 A
Audio output:	2 W
Battery capacity:	max.500 mAh
Charging time:	1 hour
Playtime (varies by volume level and music content):	4 hours
Size:	56 x 56 x 36 mm / 2.2 x 2.2 x 1.4 inch
Weight (without packaging):	62 g / 2.2 oz
Bluetooth version:	V4.2
Bluetooth range :	20m/66ft

Declaration of Conformity

Hereby, Anker Innovations Limited declares that the radio equipment type A3150 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:

https://www.soundcore.com/

Bluetooth Maximum output power: 2dBm

Frequency band: 2.4G band (2.4000GHz-2.4835GHz)

Anker Innovations Limited

Room 1318-19, Hollywood Plaza, 610 Nathan Road, Mongkok, Kowloon, Hong Kong

service@soundcore.com

- +1 (800) 988 7973 (US) Mon-Fri 9:00 17:00 (PT) +44 (0) 1604 936200 (UK) Mon-Fri 6:00 - 11:00 (GMT) +49 (0) 69 9579 7960 (DE) Mon-Fri 6:00 - 11:00 +81 (0)3 4455 7823 () - 9:00 - 17:00
- +86 400 0550 036 () 9:00 - 17:30
- +82-2-6464-7088 (■■) ~ 9:00-17:30

For FAQs and more information, please visit:

soundcore.com/support

DOWNLOAD

SoundCore Ace A0 Portable Speaker A3150 User Manual – [Download PDF]

SoundCore Ace A0 Portable Speaker A3150 QSG - [Download PDF]

Manuals+.