



SoundCore Ace A1 Portable Speaker A3151 User Manual

[Home](#) » [Support](#) » SoundCore Ace A1 Portable Speaker A3151 User Manual 

Contents

- [1 SoundCore Ace A1 Portable Speaker A3151](#)
- [2 Safety Instructions](#)
- [3 What's Included](#)
- [4 At a Glance](#)
- [5 Using Your Soundcore Ace A1](#)
- [6 b. Music](#)
- [7 Charging your Soundcore Ace A1](#)
- [8 Specifications](#)
- [9 Declaration of Conformity](#)
- [10 Customer Service](#)
- [11 DOWNLOAD](#)
- [12 Related Posts](#)

SoundCore Ace A1 Portable Speaker A3151



USER MANUAL

Model No.: A3151
51005001467 V01

 
 
Safety Instructions

- Avoid dropping.
- Do not disassemble.
- Do not submerge in water.
- Avoid extreme temperatures.
- Do not use the device outdoors during thunderstorms.
- Do not use any corrosive cleaner / oil to clean

What's Included



At a Glance

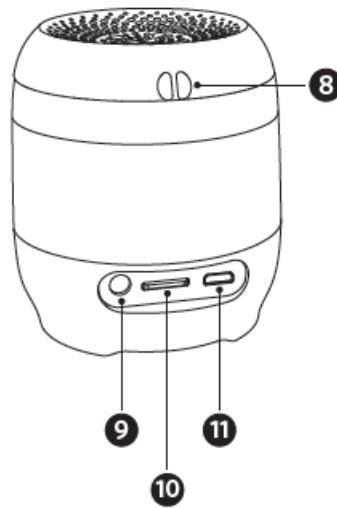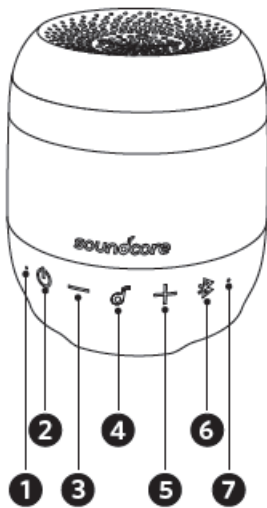

1. Power Indicator
2. Power Button
3. Volume – Button
4. Multi-function Button
5. Volume + Button
6. Bluetooth Button
7. Bluetooth Indicator
8. Hand Strap
9. 3.5mm Audio Input Port
10. MicroSD Card Slot
11. Micro USB Port

 
Using Your Soundcore Ace A1




1. Turn On / Off



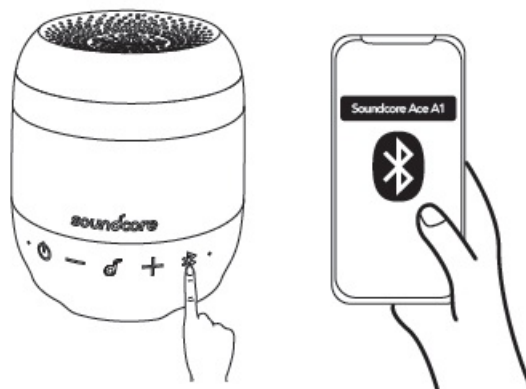


ON	Press
OFF	Press and hold for more than 1 second

a. Bluetooth mode









	Rapidly Flashing Blue	Bluetooth Pairing Mode
	Solid Blue	Connected to a device
	Slow Flashing Blue	Idle mode Note: The speaker enters idle mode when connection is taking too long or it's disconnected for more than 3 mins. Press Bluetooth button to re-enter Bluetooth pairing mode.

b. Music

 x 1	Play / Pause
 x 2	Play Next Song
 x 3	Play Previous Song
 @2s	Activate Siri / Other Voice Control Software
	Volume Up / Down

c. Mobile phone

 
 ×1	Answer Call / End Call
 >Ⓢ	Reject Call / Switch between a call on hold and an active call
 >Ⓢ	End current call and answer incoming call / End current call and switch to call on hold
 >Ⓢ	Switch audio source between Speaker and Phone

 Solid Blue	On a Call
 Flashing Blue	Incoming Call

NOTE:

- When turned on, Soundcore Ace A1 will automatically connect to the last connected device if available. If not, press the Bluetooth button to activate pairing mode.
- To pair a different device, press the Bluetooth button to re-enter pairing mode. Then repeat the pairing steps.
- Having connection problems? Remove Soundcore Ace A1 from your device's Bluetooth history and ensure it's less than 3 feet away. Then try pairing again. To get the best sound quality, make sure there is a clear line of sight between the connected device and your speaker.

d. AUX-In mode

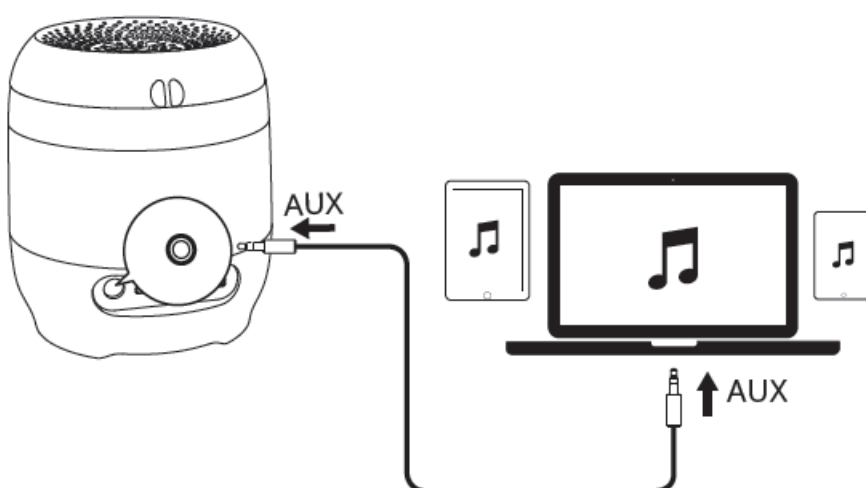

*SoundLine AUX cable sold separately.

NOTE:

- Plugging in an audio cable will automatically switch to AUX mode.

 
- When using AUX mode, control audio playback via the connected device.
- True Wireless Stereo mode cannot be used in AUX mode.



e. MicroSD memory card



User can play the music on microSD memory card. Inserting a microSD card will automatically switch to MicroSD card mode.

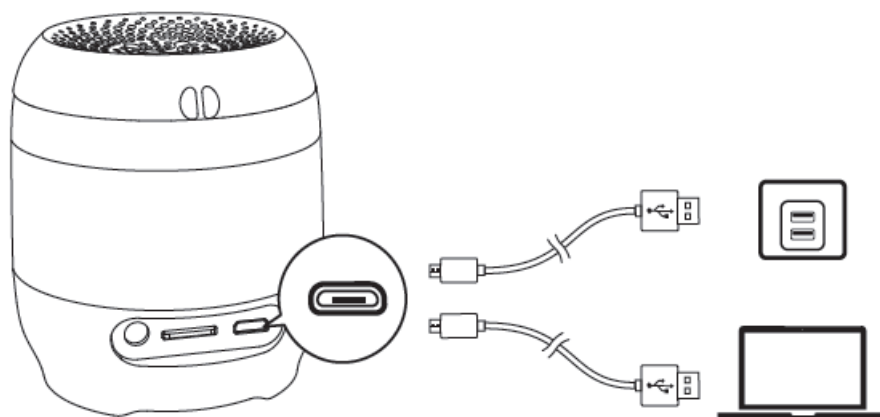Charging your Soundcore Ace A1



	Slow Flashing Red	Low Battery
	Solid Red	Charging
Off		Fully Charged

NOTE:

- Use the included USB cable to charge your Soundcore Ace A1 and make sure it is fully charged before its first use.
- Disconnect your speaker from the charger when fully charged. Do not charge your speaker for extended periods.
- When not in use, store your speaker in a cool place.

Specifications

Specifications are subject to change without notice.

Input:	5 V 0.63 A
Audio output:	5 W
Battery capacity:	max. 900mAh
Charging time:	2 hours
Playtime (varies by volume level and music content):	6 hours
Size:	72 x 72 x 86 mm
Weight (without packaging):	165 g
Bluetooth version:	V4.2
Bluetooth range:	20m/66ft

Declaration of Conformity

Hereby, Anker Innovations Limited declares that the radio equipment type A3151 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:

<https://www.soundcore.com>

Maximum output power: 0dBm

Frequency band: 2.4G band (2.4000GHz-2.4835GHz)

Anker Innovations Limited

Room 1318-19, Hollywood Plaza, 610 Nathan Road, Mongkok, Kowloon, Hong Kong

Customer Service

service@soundcore.com

+1 (800) 988 7973 (US) Mon-Fri 9:00 – 17:00 (PT)

+44 (0) 1604 936200 (UK) Mon-Fri 6:00 – 11:00 (GMT)

+49 (0) 69 9579 7960 (DE) Mon-Fri 6:00 – 11:00

+81 (0)3 4455 7823 () - 9:00 – 17:00

+86 400 0550 036 () 9:00 – 17:30

+82-2-6464-7088 (■■■) ■~■ 9:00-17:30

DOWNLOAD

SoundCore Ace A1 Portable Speaker A3151 User Manual – [[Download PDF](#)]

SoundCore Ace A1 Portable Speaker A3151 QSG – [[Download PDF](#)]
