



SoundCore Flare Mini Portable Speaker A3167 User Manual

[Home](#) » [Support](#) » SoundCore Flare Mini Portable Speaker A3167 User Manual 

Contents

- [1 SoundCore Flare Mini Portable Speaker A3167](#)
- [2 Safety Instructions](#)
- [3 What's Included](#)
- [4 At a Glance](#)
- [5 Using Your Soundcore Flare Mini](#)
 - [5.1 1. Turn On / Off](#)
- [6 Charging your Soundcore Flare Mini](#)
- [7 Specifications](#)
- [8 Declaration of Conformity](#)
- [9 DOWNLOAD](#)
- [10 Related Posts](#)

SoundCore Flare Mini Portable Speaker A3167



 
USER MANUAL

Model No.: A3167
5100500XXXX V01


Safety Instructions

- Avoid dropping.
- Do not disassemble.
- Soundcore Flare Mini can be immersed in water up to 1m for up to 30 minutes.
- Avoid extreme temperatures.
- Do not use the device outdoors during thunderstorms.
- Use original or certified cables.
- Do not use any corrosive cleaner/oil to clean.
- Do not expose batteries to high heat as direct sunlight, fire and Etc.

What's Included

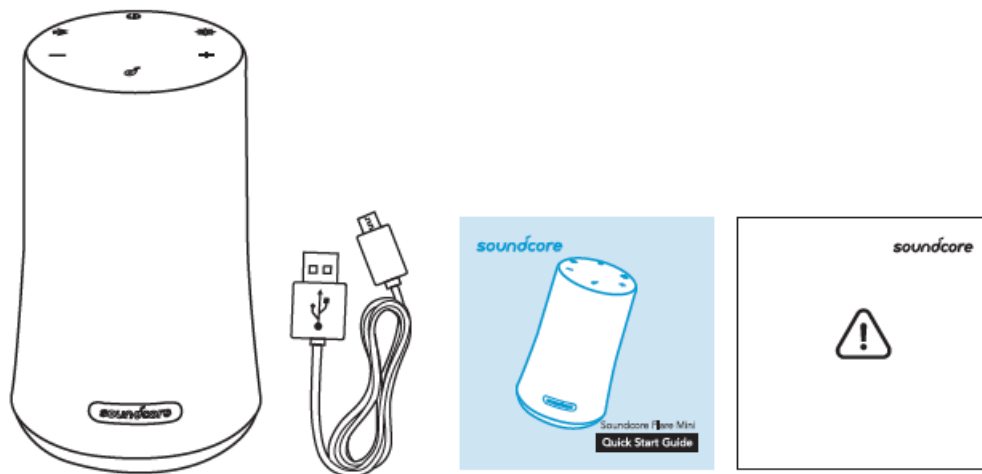


At a Glance

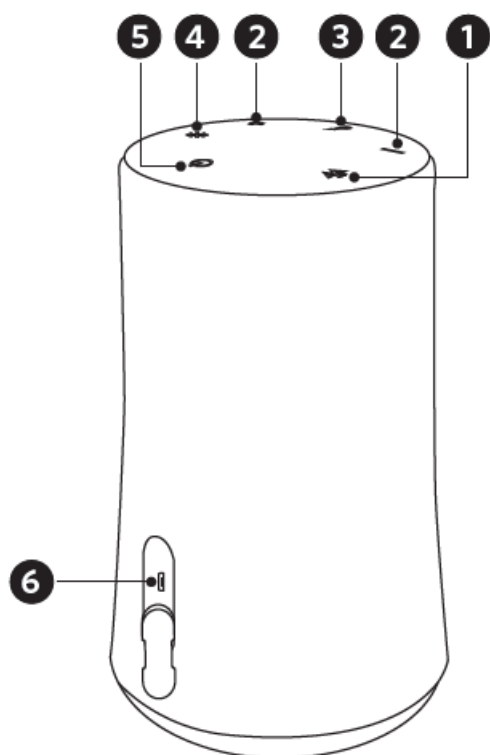 

1. Bluetooth Button
2. Volume + and – Buttons
3. Multi-function Button
4. Light Effects Button
5. Power Button
6. micro USB Port

Using Your Soundcore Flare Mini

 
1. Turn On / Off

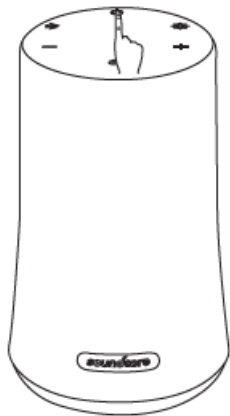

ON: Press

OFF: Press and hold for 2 seconds

 a. Bluetooth mode

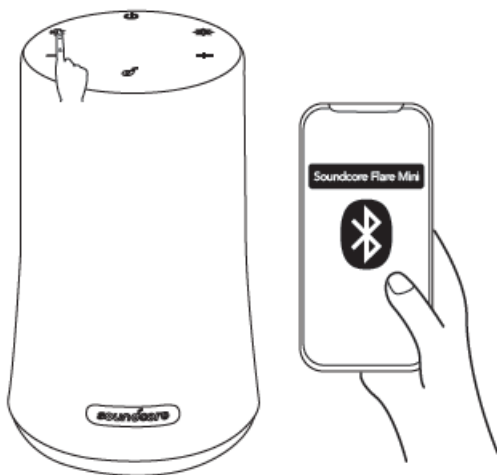

Flashing Blue

Bluetooth Pairing Mode



Solid Blue

Connected to a device



Enter True Wireless Stereo Pairing Mode / Disconnect True Wireless Stereo



 
Slow Flashing White

True Wireless Stereo Pairing Mode







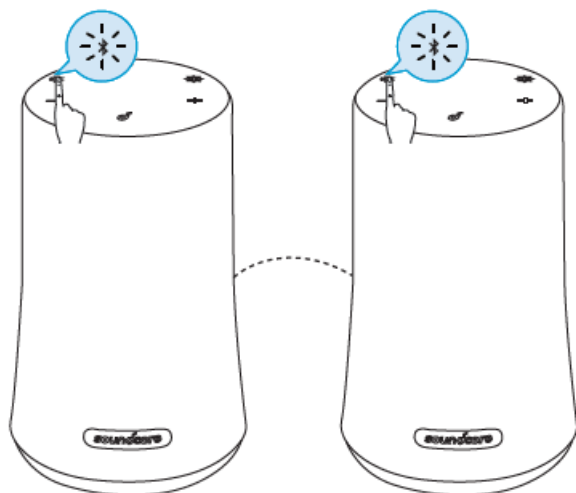






Solid White




Connected to True Wireless Stereo



 Note: With True Wireless Stereo technology, you can pair your Soundcore Flare Mini with another Bluetooth speaker to explore the best sound effects with left and right sound channels separated on both speakers.

 x 1	Play / Pause
 x 2	Play Next Song
 x 3	Play Previous Song
 x 1	Answer Call / End Call
 > 2s	Reject Call / Switch between a call on hold and an active call
 > 2s	End current call and answer incoming call / End current call and switch to call on hold
 > 2s	Switch audio source between Speaker and Phone
 > 2s	Activate Siri / Other Voice Control Software
	Volume Up / Down

	Solid White	On a Call
	Flashing White	Incoming Call

 > 2s	Press and hold for 2 seconds to turn Light Effects Off
 x 1	Press to turn Light Effects On
 x 1	Press once to switch between Light Effect modes

 
NOTE:



- When turned on, Soundcore Flare Mini will automatically connect to the last connected device if available. If not, press the Bluetooth pairing button to activate pairing mode.
- To pair a different device, press the Bluetooth button to re-enter pairing mode. Then repeat the pairing steps.
- Having connection problems? Remove Soundcore Flare Mini from your device's Bluetooth history and ensure

it's less than 3 feet away.

- Then try pairing again. To get the best sound quality, make sure there is a clear line of sight between the connected device and your speaker.

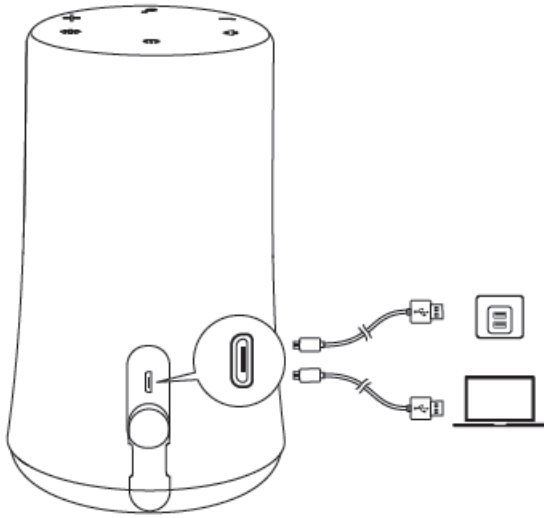Charging your Soundcore Flare Mini



	Slow Flashing Red	Low Battery
	Solid Red	Charging
Off		Fully Charged

NOTE:

- Use the included USB cable to charge your Soundcore Flare Mini and make sure it is fully charged before its first use.
- Disconnect your speaker from the charger when fully charged. Do not charge your speaker for extended periods.
- When not in use, store your speaker in a cool place.

Specifications

Specifications are subject to change without notice.

Input:	5 V 1 A
Audio output:	5 W x 2
Battery capacity:	2600 mAh
Charging time:	3.5 hours
Play time (varies by volume level and music content):	12 hours
Size:	141 x 86 x 72 mm
Weight (without packaging):	480 g / 16.9 oz
Bluetooth version:	V4.2
Range:	20 m / 66 ft

Declaration of Conformity

Hereby, Anker Innovations Limited declares that the radio equipment type A3167 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:

www.soundcore.com

Bluetooth Maximum output power: 2.0dBm

Frequency band: 2.4G band (2.4000GHz-2.4835GHz)

Anker Innovations Limited

Room 1318-19, Hollywood Plaza, 610 Nathan Road, Mongkok, Kowloon, Hong Kong

DOWNLOAD

SoundCore Flare Mini Portable Speaker A3167 User Manual – [[Download PDF](#)]

SoundCore Flare Mini Portable Speaker A3167 QSG – [[Download PDF](#)]

A3167 Soundcore Flare Mini Declaration of Conformity – [[Download PDF](#)]