

SoundCore Flare+ Portable Speaker A3162 User Manual

Home » Soundcore » SoundCore Flare+ Portable Speaker A3162 User Manual

Contents

- 1 SoundCore Flare Plus Portable Speaker A3162
- 2 Safety Instructions
- 3 What's Included
- 4 At a Glance
- 5 Using Your Soundcore Flare+
 - 5.1 1. Turn on / off
- 6 Charging your Soundcore Flare+
- 7 Soundcore App
- **8 Declaration of Conformity**
- 9 DOWNLOAD
- **10 Related Posts**

SoundCore Flare Plus Portable Speaker A3162



USER MANUAL

Model No.: A3162; V01

Safety Instructions

- Avoid dropping.
- Do not disassemble.
- Soundcore Flare+ can be immersed in water up to 1m for up to 30 minutes.
- Avoid extreme temperatures.
- Do not use the device outdoors during thunderstorms.
- Use original or certified cables.
- Do not use any corrosive cleaner/oil to clean.

What's Included











At a Glance

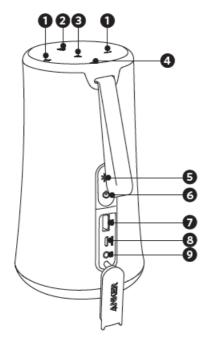


- 1. Volume Buttons for Volume Control
- 2. Bass Up Button
- 3. Multi-function Button
- 4. Light Effects Button
- 5. Bluetooth Button
- 6. Power Button
- 7. USB port
- 8. micro USB Port
- 9. 3.5mm Audio Input Port

Using Your Soundcore Flare+


1. Turn on / off

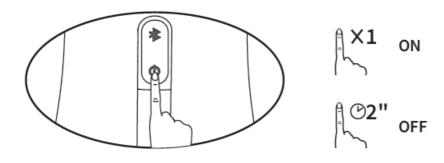

a. Bluetooth mode

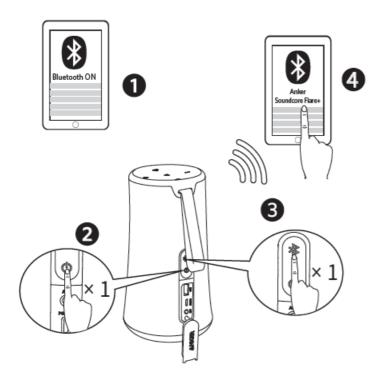

Flashing White	Bluetooth Pairing Mode
Solid White	Connected to a device
≯	Enter True Wireless Stereo Group Mode / Disconnect True Wireless Stereo
- Double Flashing White	True Wireless Stereo Group Mode
○ Solid White	Connected to True Wireless Stereo

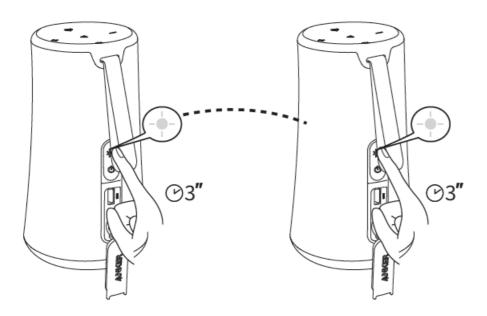

Note: With True Wireless Stereo technology, you can pair your Soundcore Flare+ with another Soundcore Flare+

to explore the best sound effects with left and right sound channels separated on both speakers.

×1	Play / Pause
(2) ×2	Play Next Song
2×3	Play Previous Song
BAGS 1	Press to turn Bass Up on and off
B 468 ©2s	Press and hold for 2 seconds to reset Equalizer settings
×1	Answer Call / End Call
-01s	Reject Call / Switch between a call on hold and an active call
R>@2s	End current call and answer incoming call / End current call and switch to call on hold
2>©2s	Switch audio source between Speaker and Phone
€<©2s	Put current call on hold and answer incoming call
₹>©2s	Activate Siri / Other Voice Control Software
\$\\B	Volume Up / Down


○ Solid	l White	On a Call
Flash	ning White	Incoming Call
©2s	Press and hold fo	or 2 seconds to turn Light Effects Off
*1	Press to turn Light Effects On	
*1	Press once to switch between Light Effects modes	

Check available Light Effects modes on Soundcore App.

NOTE:

- When turned on, Soundcore Flare+ will automatically connect to the last connected device if available. If not, press the Bluetooth pairing button to activate pairing mode.
- To pair a different device, press the Bluetooth button to re-enter pairing mode. Then repeat the pairing steps.
- Having connection problems? Remove Soundcore Flare+ from your device's Bluetooth history and ensure it's less than 3 feet away. Then try pairing again. To get the best sound quality, make sure there is a clear line of sight between the connected device and your speaker.


b. AUX-In mode

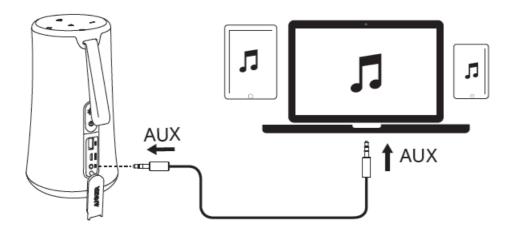

* SoundLine AUX cable sold separately.

Note: Plugging in an audio cable will automatically switch to AUX mode. When using AUX mode, control audio playback via the connected device.

Charging your Soundcore Flare+

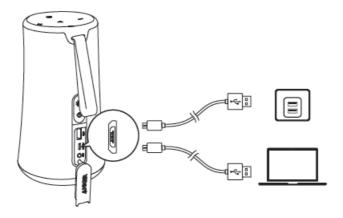

Slow Flashing Red	Low Battery
Solid Red	Charging
Off	Fully Charged

NOTE:

- Use the included USB cable to charge your Soundcore Flare+ and make sure it is fully charged before its first use.
- Disconnect your speaker from the charger when fully charged. Do not charge your speaker for extended periods.
- When not in use, store your speaker in a cool place.

Soundcore App

d

- Light effect
- Update firmware
- Wave Equalizer
- Stereo or Boost mode
- Rename
- More







Google Play and the Google Play logo are trademarks of Google Inc.

Specifications are subject to change without notice.

Input:	5 V 2 A
Charge out:	5 V 1 A
Audio output:	25 W
Charging time:	4.0 hours
Play time (varies by volume level and music content):	20 hours
Size:	100 x 100 x 182 mm
Weight (without packaging):	853 g / 30.1 oz
Bluetooth version:	V5.0
Bluetooth range:	20 m / 66 ft

Declaration of Conformity

Hereby, Anker Innovations Limited declares that the radio equipment type A3162 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:

https://www.soundcore.com// Maximum output power: 0dBm

Frequency band: 2.4G band (2.4000GHz-2.4835GHz)

Anker Innovations Limited

DOWNLOAD

SoundCore Flare+ Portable Speaker A3162 User Manual – [Download PDF]

SoundCore Flare+ Portable Speaker A3162 QSG – [Download PDF]

A3162 Soundcore Flare+ Declaration of Conformity – [Download PDF]

Manuals+,