



## SoundCore Flare Portable Speaker A3161 User Manual

[Home](#) » [Support](#) » SoundCore Flare Portable Speaker A3161 User Manual 

### Contents

- [1 SoundCore Flare Portable Speaker A3161](#)
- [2 Safety Instructions](#)
- [3 What's Included](#)
- [4 At a Glance](#)
- [5 Using Your Soundcore Flare](#)
  - [5.1 1. Turn on / off](#)
- [6 Charging your Soundcore Flare](#)
- [7 Soundcore App](#)
- [8 Specifications](#)
- [9 Customer Service](#)
- [10 DOWNLOAD](#)
- [11 Related Posts](#)

**SoundCore Flare Portable Speaker A3161**



 
 
## USER MANUAL

Model No.: A3161  
51005000993 V05


### Safety Instructions

- Avoid dropping.
- Do not disassemble.
- Soundcore Flare can be immersed in water up to 1m for up to 30 minutes.
- Avoid extreme temperatures.
- Do not use the device outdoors during thunderstorms.
- Use original or certified cables.
- Do not use any corrosive cleaner/oil to clean.

### What's Included

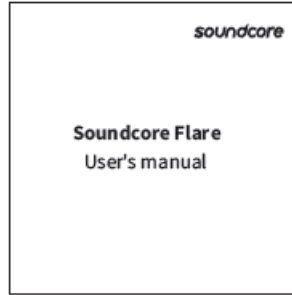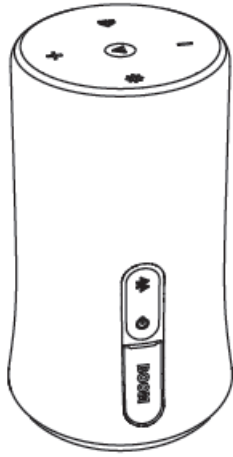




## At a Glance

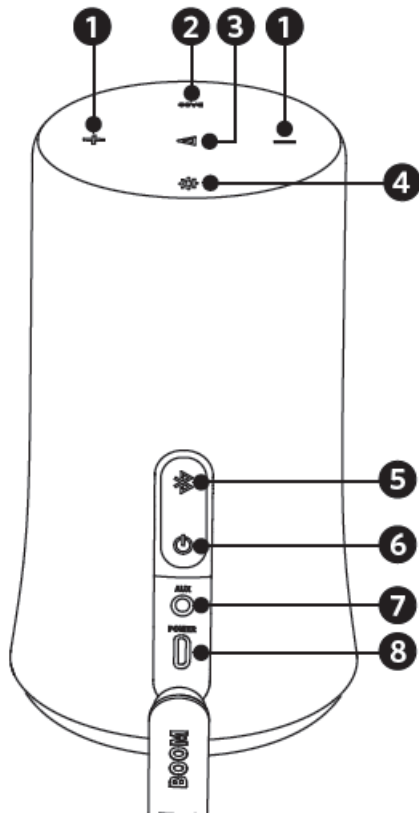 


1. Volume Buttons for Volume Control
2. Bass Up Button
3. Multi-function Button
4. Light Effects Button
5. Bluetooth Button
6. Power Button
7. 3.5mm Audio Input Port
8. micro USB Port

## Using Your Soundcore Flare

     
1. Turn on / off

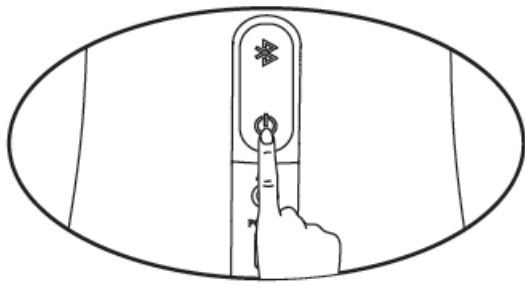



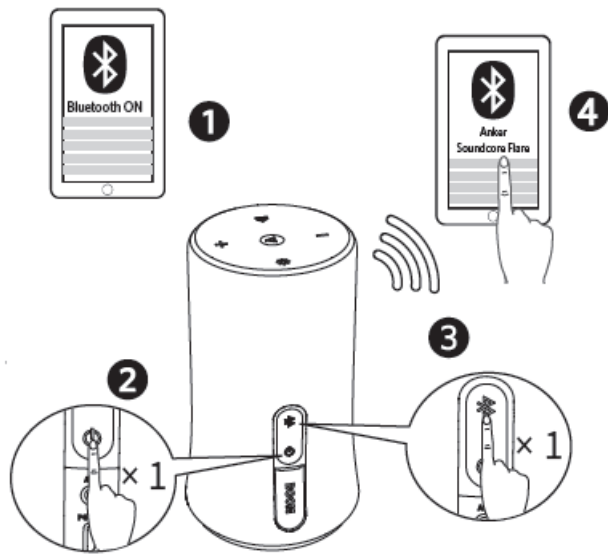



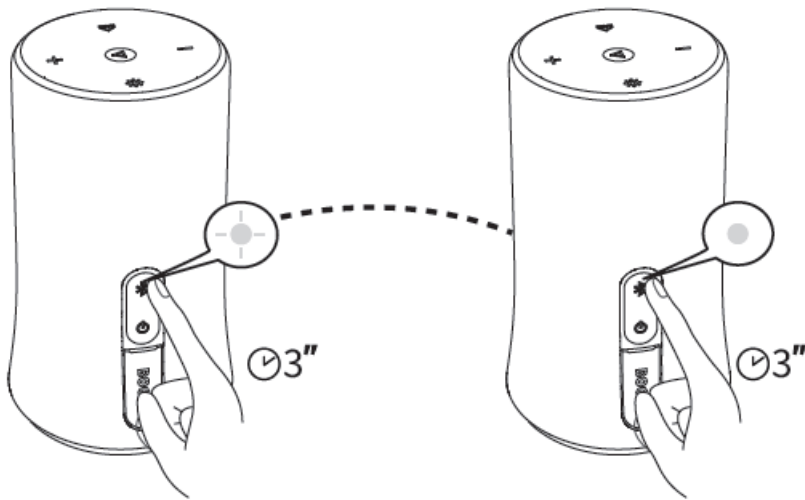





a. Bluetooth mode






	Flashing White	Bluetooth Pairing Mode
	Solid White	Connected to a device
		Enter True Wireless Stereo Pairing Mode / Disconnect True Wireless Stereo
	Double Flashing White	True Wireless Stereo Pairing Mode
	Solid White	Connected to True Wireless Stereo Note: Once connected, the status indicator will stay white for 5 seconds.



**NOTE:** With True Wireless Stereo technology, you can pair your Soundcore Flare with another Bluetooth speaker (Soundcore Flare) to explore the best sound effects with left and right sound channels separated on both speakers.


 x1	Play / Pause
 x2	Play Next Song
 x3	Play Previous Song
 x1	Press to turn Bass Up on and off
 x2s	Press and hold for 2 seconds to reset EQ settings
 x1	Answer Call / End Call
 > 2s	Reject Call / Switch between a call on hold and an active call
 > 2s	End current call and answer incoming call / End current call and switch to call on hold
 > 2s	Switch audio source between Speaker and Phone
 < 2s	Put current call on hold and answer incoming call
 > 2s	Activate Siri / Other Voice Control Software
	Volume Up / Down

○	Solid White	On a Call
⊖○⊕	Flashing White	Incoming Call
	Press and hold for 2 seconds to turn Light Effects Off	
	Press to turn Light Effects On	
	Press once to switch between Light Effect modes	

**NOTE:**

 - When turned on, Soundcore Flare will automatically connect to the last connected device if available. If not, press the Bluetooth pairing button to activate pairing mode.
- To pair a different device, press the Bluetooth button to re-enter pairing mode. Then repeat the pairing steps.
- Having connection problems? Remove Soundcore Flare from your device's Bluetooth history and ensure it's less than 3 feet away.
- Then try pairing again. To get the best sound quality, make sure there is a clear line of sight between the connected device and your speaker.


**b. AUX-In mode**

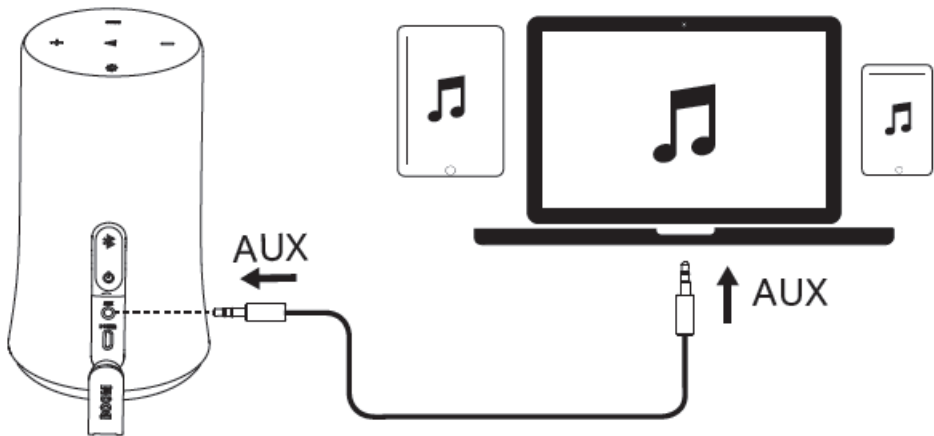



\* SoundLine AUX cable sold separately.

 Plugging in an audio cable will automatically switch to AUX mode. When using AUX mode, control audio playback via the connected device.

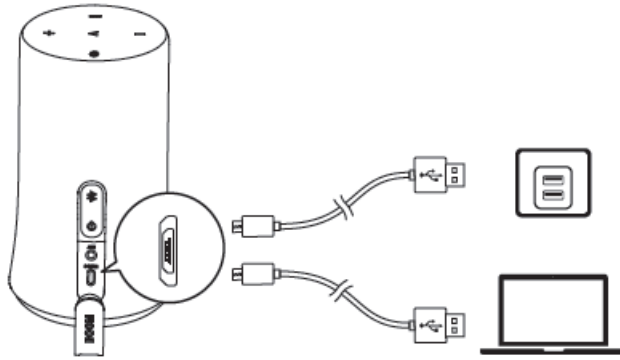**Charging your Soundcore Flare**




 Slow Flashing Red	Low Battery
 Solid Red	Charging
<b>Off</b>	Fully Charged

**NOTE:**


- Use the included USB cable to charge your Soundcore Flare and make sure it is fully charged before its first use.
- Disconnect your speaker from the charger when fully charged. Do not charge your speaker for extended periods.
- When not in use, store your speaker in a cool place.


**Soundcore App**

## Soundcore App



- Light effect
- Update firmware
- Wave Equalizer
- Stereo or Boost mode
- Rename
- More

Download on the  **App Store**

 **GET IT ON Google Play**

## Specifications

Specifications are subject to change without notice.

Input:	5 V 2 A
Audio output:	6 W x 2
Battery capacity:	4400 mAh
Charging time:	3.5 hours
Play time (varies by volume level and music content):	12 hours
Size:	89 x 89 x 151 mm / 3.5 x 3.5 x 5.95 in
Weight (without packaging):	530 g / 18.7 oz
Bluetooth version:	V4.2 + EDR
Range:	20 m / 66 ft

### Declaration of Conformity

Hereby, Anker Innovations Limited declares that the radio equipment type A3161 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:

[www.soundcore.com](http://www.soundcore.com)

**Maximum output power:** 4.0dBm

**Frequency band:** 2.4G band (2.4000GHz-2.4835GHz)

### Anker Innovations Limited

Room 1318-19, Hollywood Plaza, 610 Nathan Road, Mongkok, Kowloon, Hongkong

### Anker Innovations Deutschland GmbH

Georg-Muche-Strasse 3-5, 80807 Munich, Germany

### Customer Service

18-month limited warranty

Lifetime technical support

[service@soundcore.com](mailto:service@soundcore.com)

[support.mea@soundcore.com](mailto:support.mea@soundcore.com) (For Middle East and Africa Only)

[support@anker.com](mailto:support@anker.com) ( )

---

## DOWNLOAD

SoundCore Flare Portable Speaker A3161 User Manual – [[Download PDF](#)]

A3161 Soundcore Flare Declaration of Conformity – [[Download PDF](#)]

---



Manuals+